



RunCam Hybrid User Manual

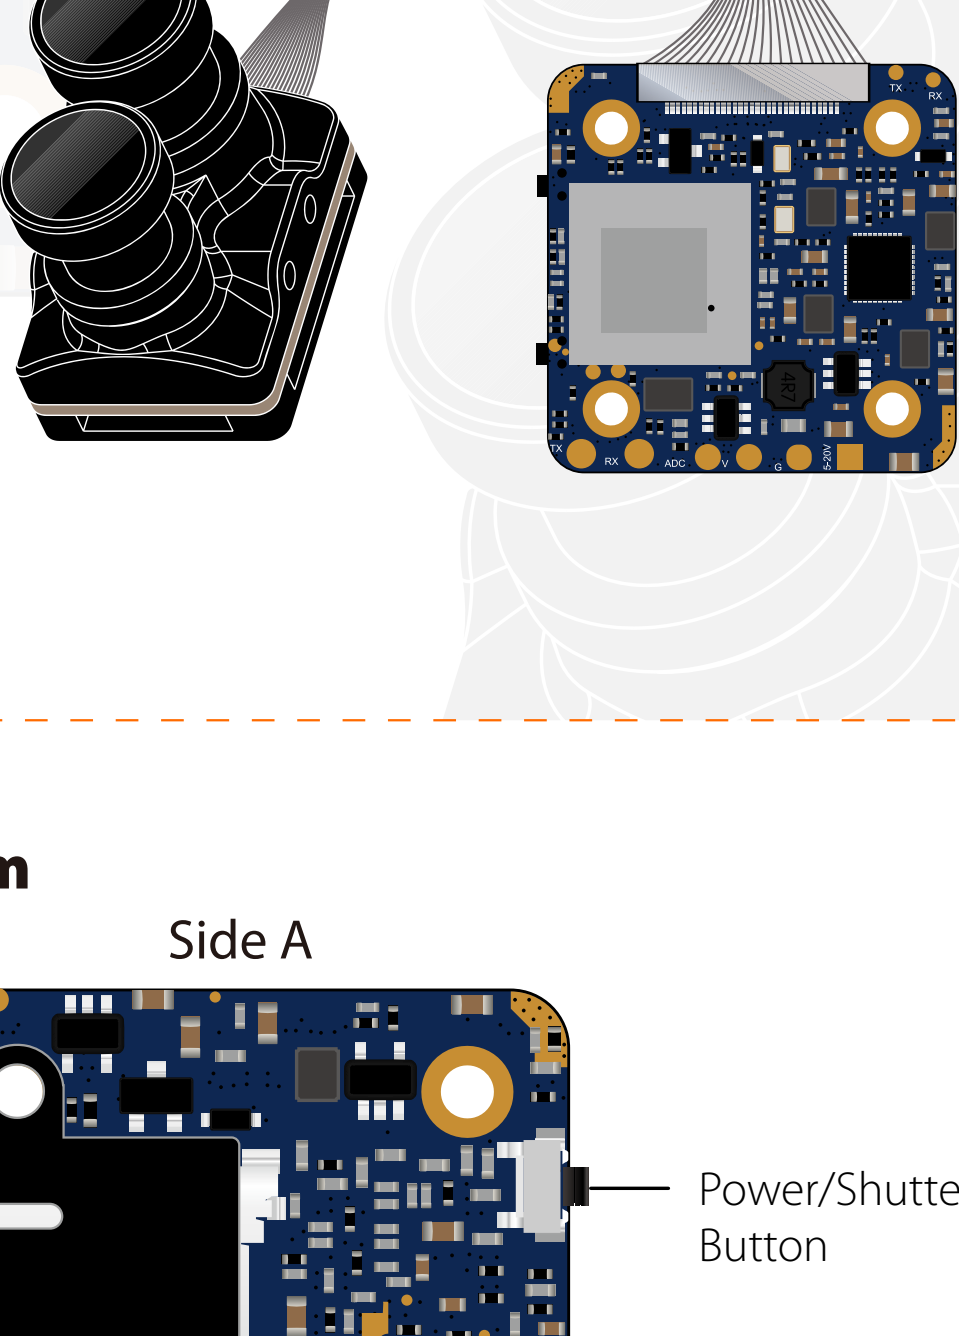


Instruction Diagram


Side A

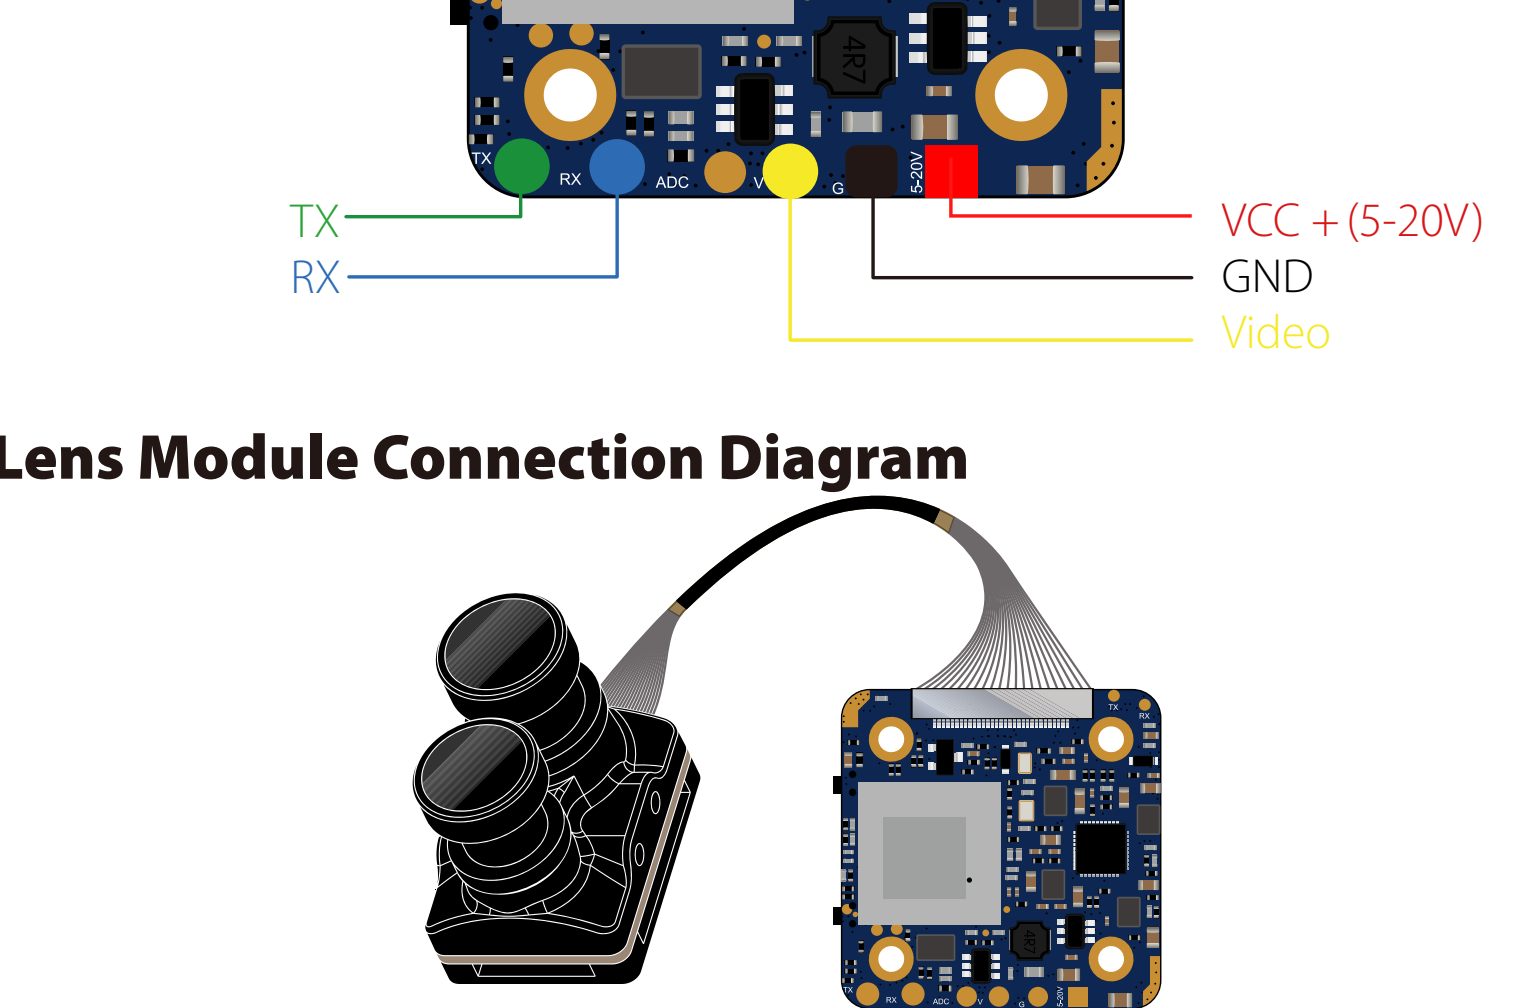

Side B

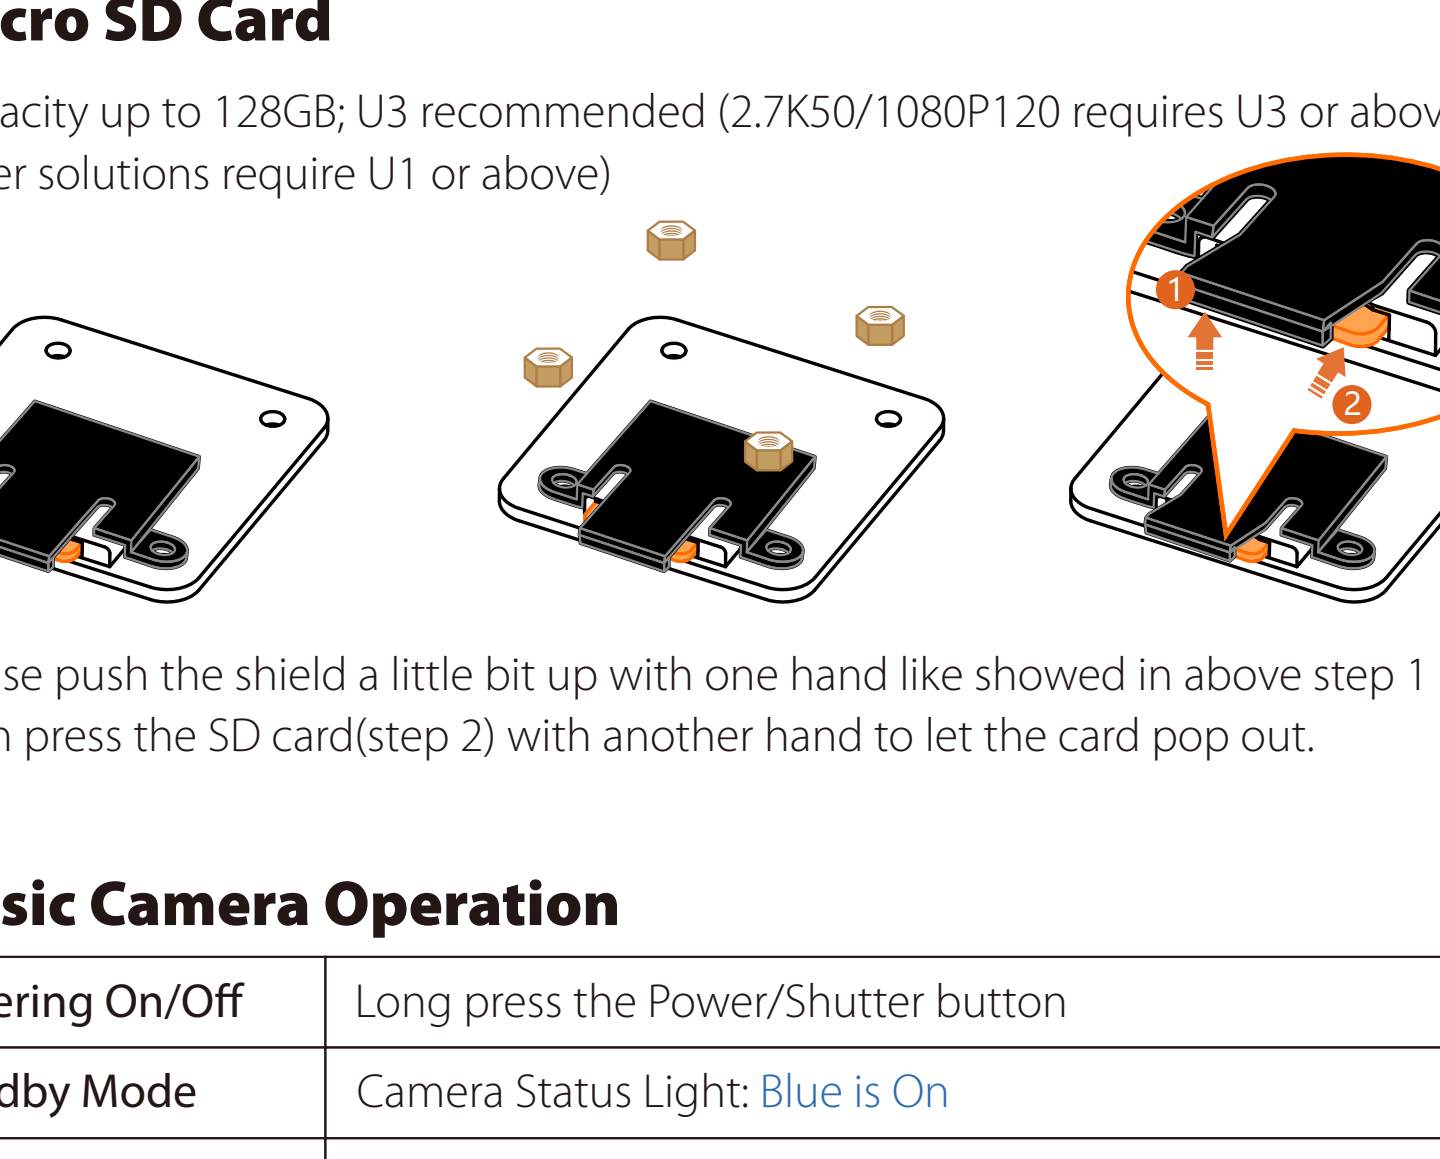


Lens Module Connection Diagram

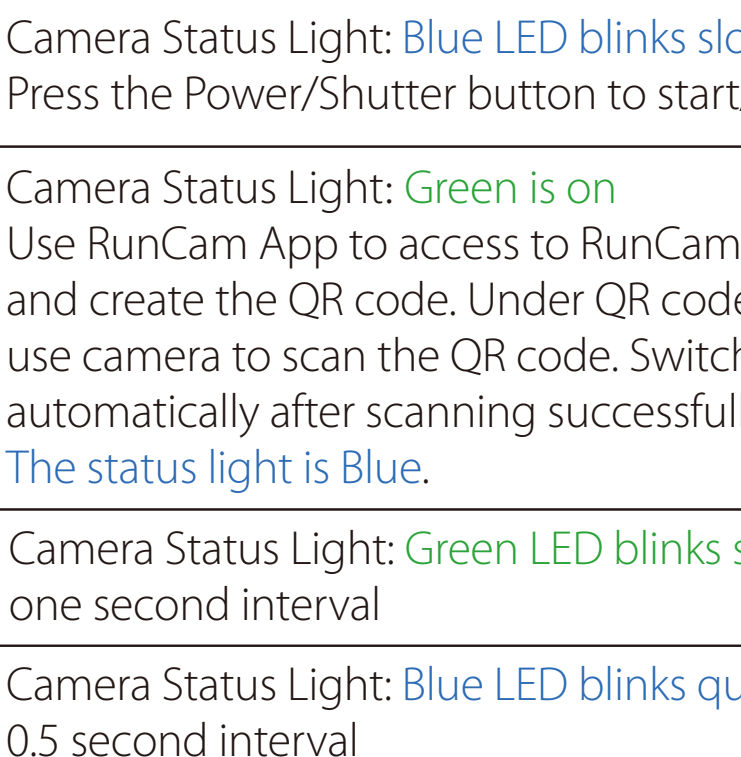

Micro SD Card

Capacity up to 128GB; U3 recommended (2.7K50/1080P120 requires U3 or above; other solutions require U1 or above)

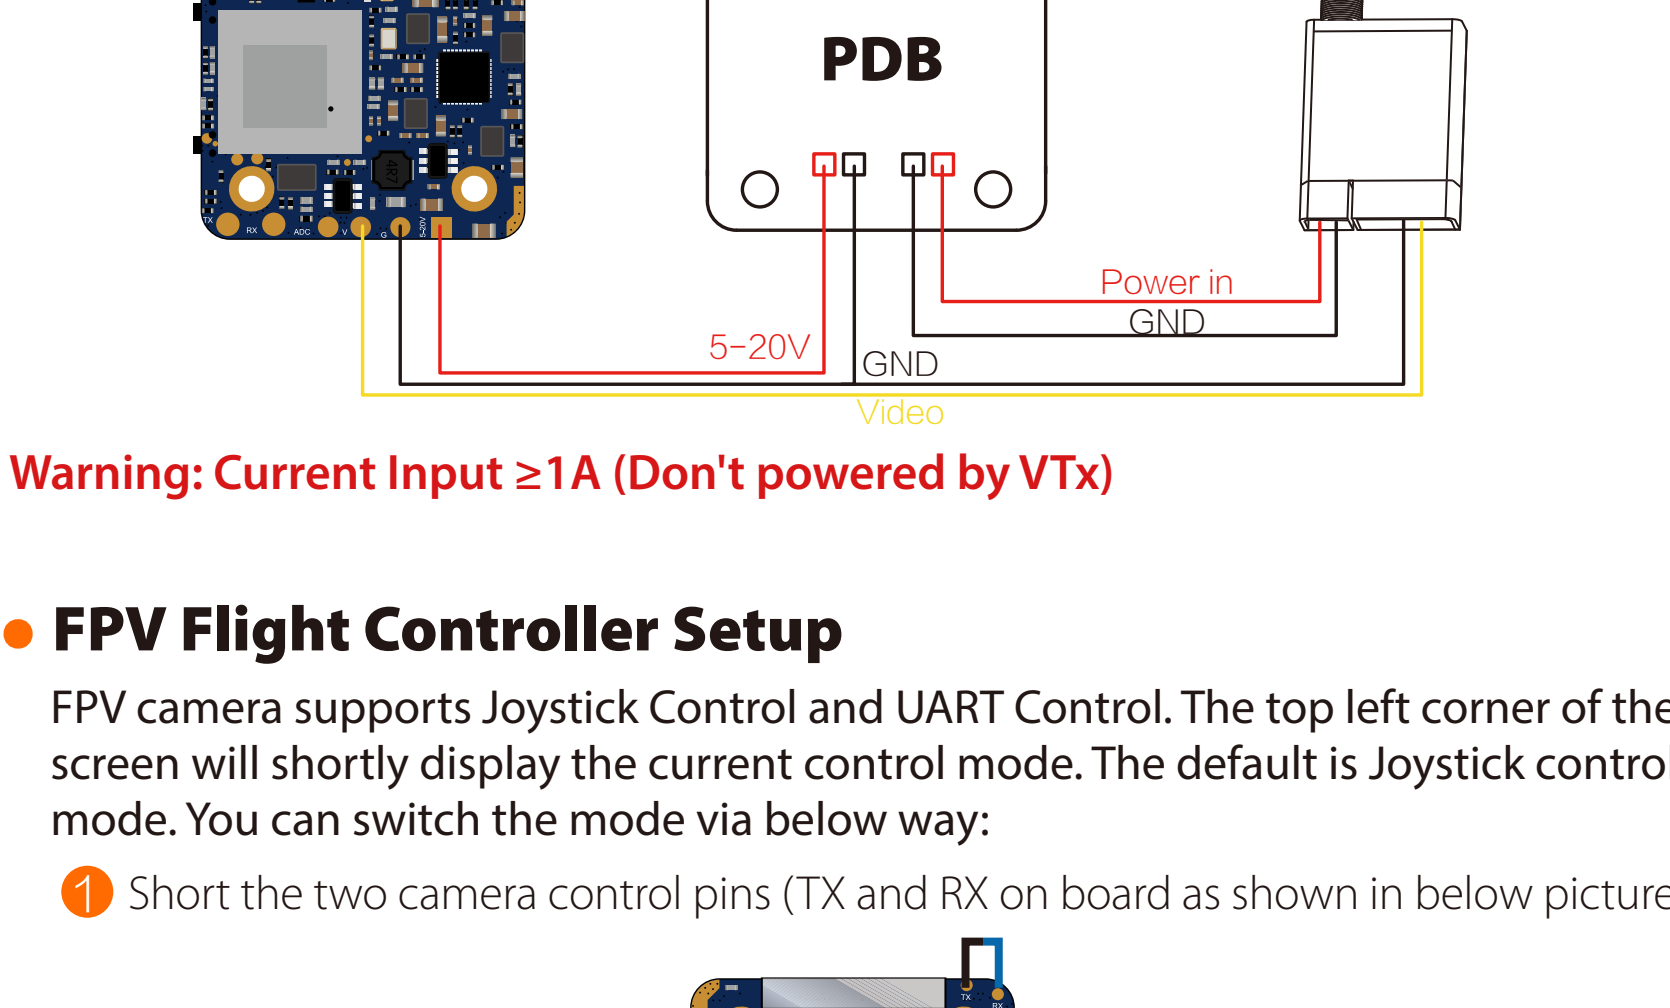


Please push the shield a little bit up with one hand like showed in above step 1 and then press the SD card(step 2) with another hand to let the card pop out.

Basic Camera Operation

Powering On/Off	Long press the Power/Shutter button
Standby Mode	Camera Status Light: Blue is On
Mode Switching	In Standby Mode, long press the Mode Switch button to cycle through the recording mode and the QR code setting mode.
Video Mode	Camera Status Light: Blue LED blinks slowly, one second interval Press the Power/Shutter button to start/stop recording.
QR Code Setting	Camera Status Light: Green is on Use RunCam App to access the RunCam Hybrid interface, set it and create the QR code. Under QR code setting mode, use camera to scan the QR code. Switch to standby mode automatically after scanning successfully. The status light is Blue.
HD Recording Firmware Update	Camera Status Light: Green LED blinks slowly, one second interval
SD Card Issues	Camera Status Light: Blue LED blinks quickly, 0.5 second interval
Lens Module Bad Connection	Camera Status Light: Green LED blinks quickly, 0.5 second interval

Transmitter Connection Diagram

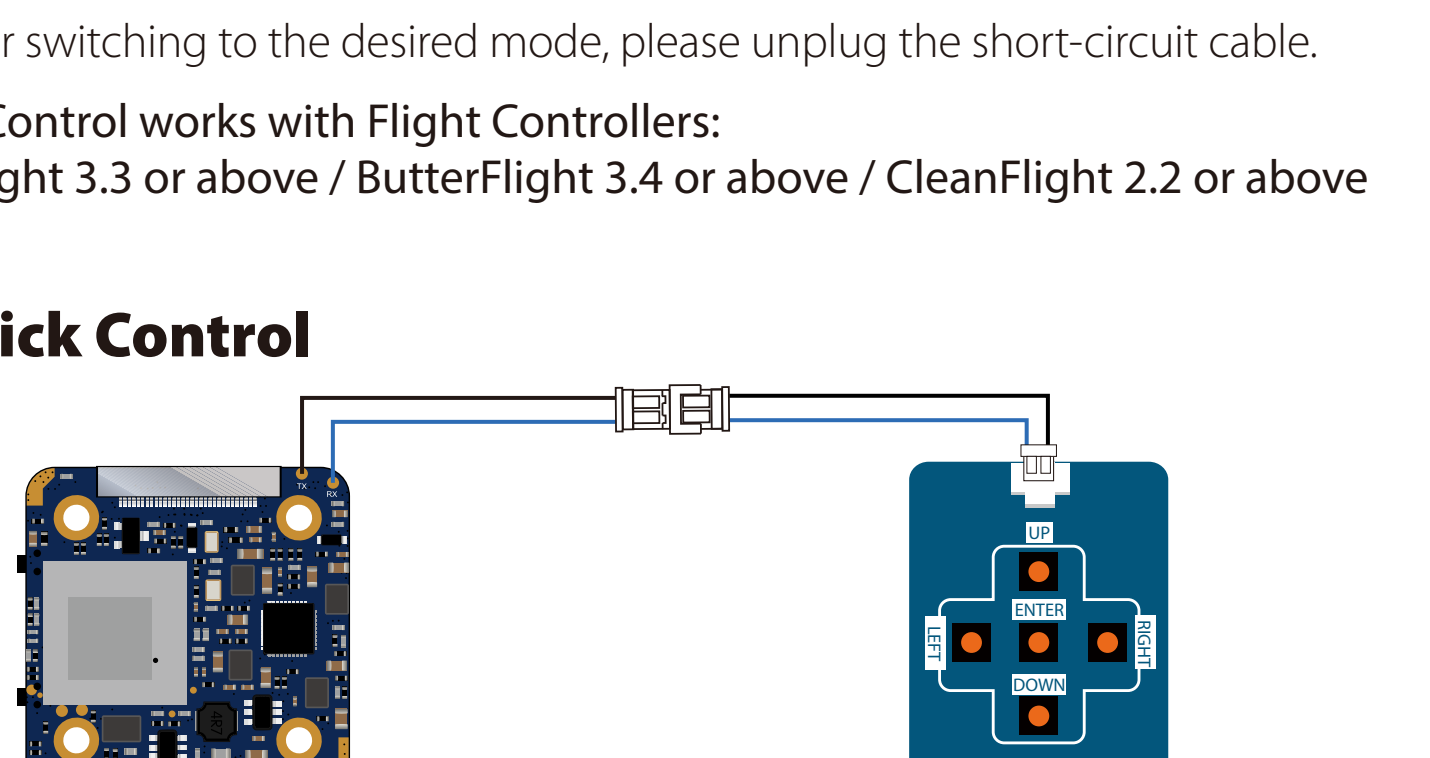


Warning: Current Input ≥1A (Don't powered by VTx)


FPV Flight Controller Setup

FPV camera supports Joystick Control and UART Control. The top left corner of the screen will shortly display the current control mode. The default is Joystick control mode. You can switch the mode via below way:

- Short the two camera control pins (TX and RX on board as shown in below picture)

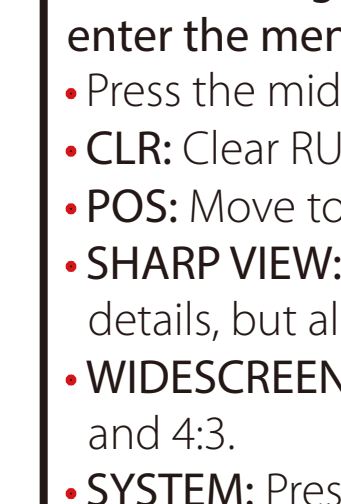


- Then power on, camera will auto switch between the two modes. The mode can be saved after power off.

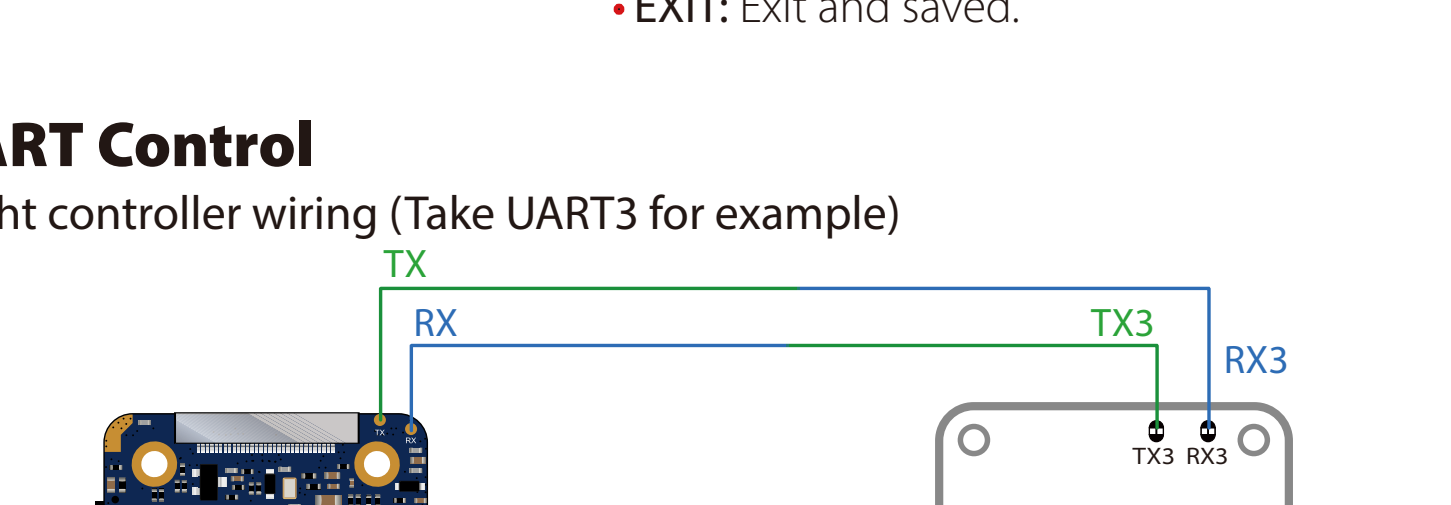

- After switching to the desired mode, please unplug the short-circuit cable.

UART Control works with Flight Controllers:
Betaflight 3.3 or above / Butterflight 3.4 or above / Cleanflight 2.2 or above

Joystick Control

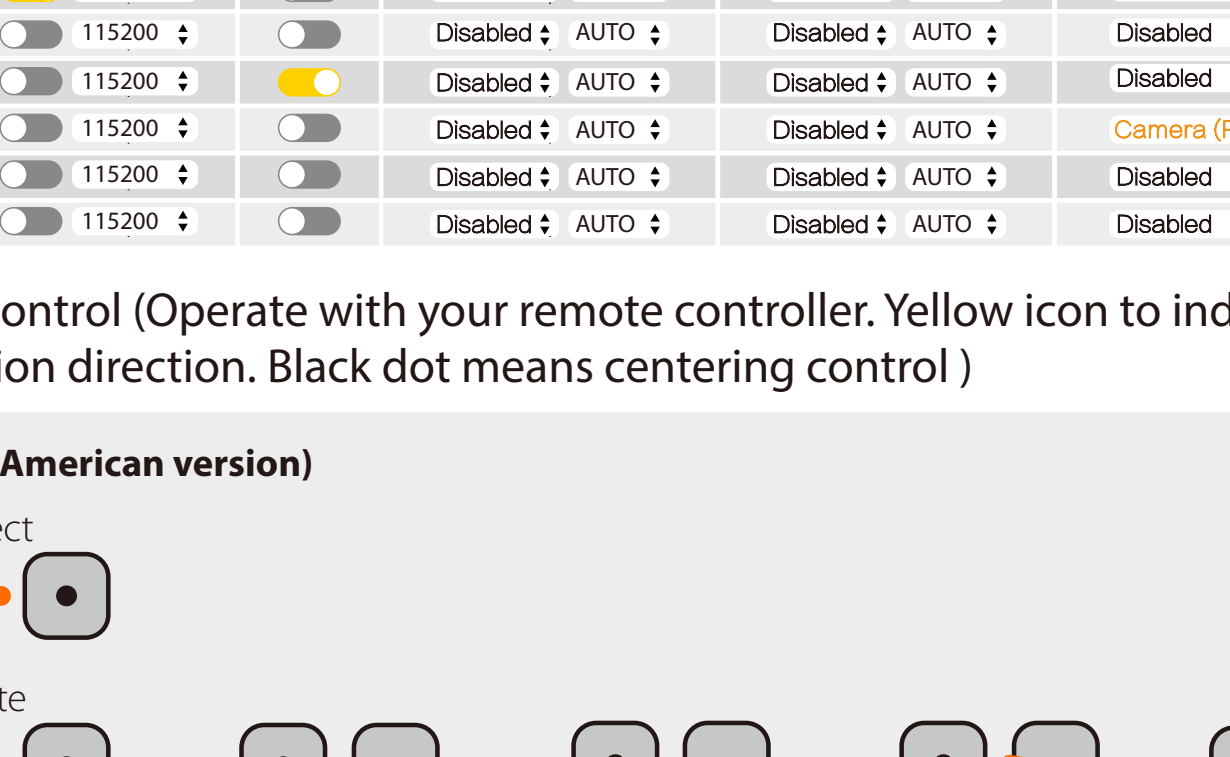

FPV OSD Menu

JOYSTICK CTRL CARD ERROR
4K 30FPS

- JOYSTICK CTRL: Camera is under Joystick Control and the icon remains for 5 seconds.
- CARD ERROR: Card error or no SD card
- CARD FULL: SD card is full
- 4K 30FPS: Current video resolution, remains for 10 seconds

0123456789ABCDEF GHIJ
KLMNOPQRSTUVWXYZ&=;/
CLR RUNCAM_ _ _

PIL0T : OFF POS ←

SHARP VIEW : ON

WIDESCREEN : 4:3

SYSTEM : NTSC


EXIT

Quick Setting (Long press the upper button to enter the menu)

- Press the middle button to switch ON / OFF
- CLR: Clear RUNCAM logo or pilot's name
- POS: Move to POS to adjust position
- SHARP VIEW: Turn on, it will increase the image details, but also noise
- WIDESCREEN: Switch image ratio between 16:9 and 4:3.
- SYSTEM: Press the middle button to switch NTSC/PAL. It will work only after you exit the menu and reboot.
- EXIT: Exit and saved.

UART Control

- Flight controller wiring (Take UART3 for example)

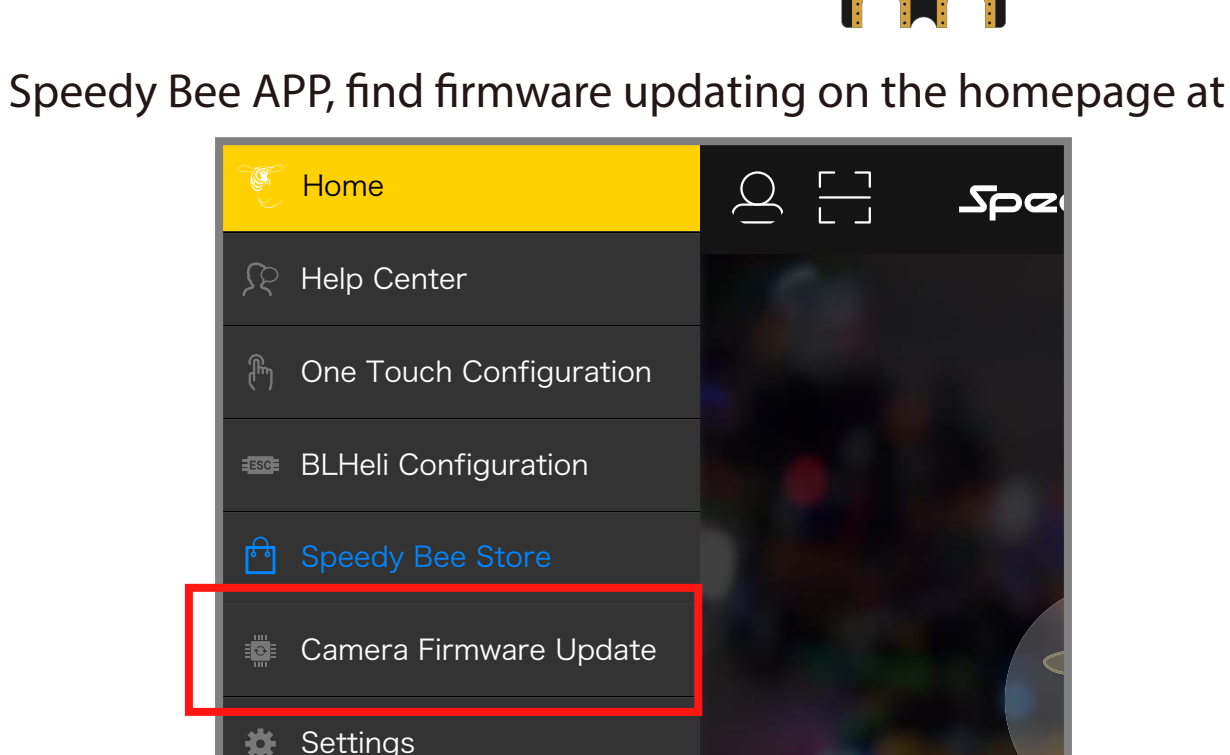

- Betaflight 3.3 or above setting

Just need to choose "Camera (RunCam Protocol)" on UART 3 as shown in below screenshot.

Identifier	Configuration/MS	Serial Rx	Telemetry Output	Sensor Input	Peripherals
USBVCP	115200	Off	Disabled ; AUTO ;	Disabled ; AUTO ;	Disabled ; AUTO ;
UART1	115200	Off	Disabled ; AUTO ;	Disabled ; AUTO ;	Disabled ; AUTO ;
UART2	115200	Off	Disabled ; AUTO ;	Disabled ; AUTO ;	Disabled ; AUTO ;
UART3	115200	Off	Disabled ; AUTO ;	Disabled ; AUTO ;	Camera (RunCam)
UART4	115200	Off	Disabled ; AUTO ;	Disabled ; AUTO ;	Disabled ; AUTO ;
UART5	115200	Off	Disabled ; AUTO ;	Disabled ; AUTO ;	Disabled ; AUTO ;

- UART Control (Operate with your remote controller. Yellow icon to indicate bar operation direction. Black dot means centering control)

Mode-2 (American version)

- Connect
- Operate
- Disconnect

Mode-1 (Japanese version)


- Connect
- Operate
- Disconnect

* When connected, the buzzer on Flight Controller will beep for 3 times; When disconnected, The buzzer on Flight Controller will beep for 2 times only. If connected successfully, you can long press the up button to enter the OSD menu; right button to switch preset scenes, left button to calibrate voltage and down button to reset OSD.


FPV camera Firmware Updating

* Tips: The firmware upgrade needs to switch to UART CTRL mode


- Connect the RX on the camera board to an unoccupied TX on your flight controller and TX to RX as shown in below picture.

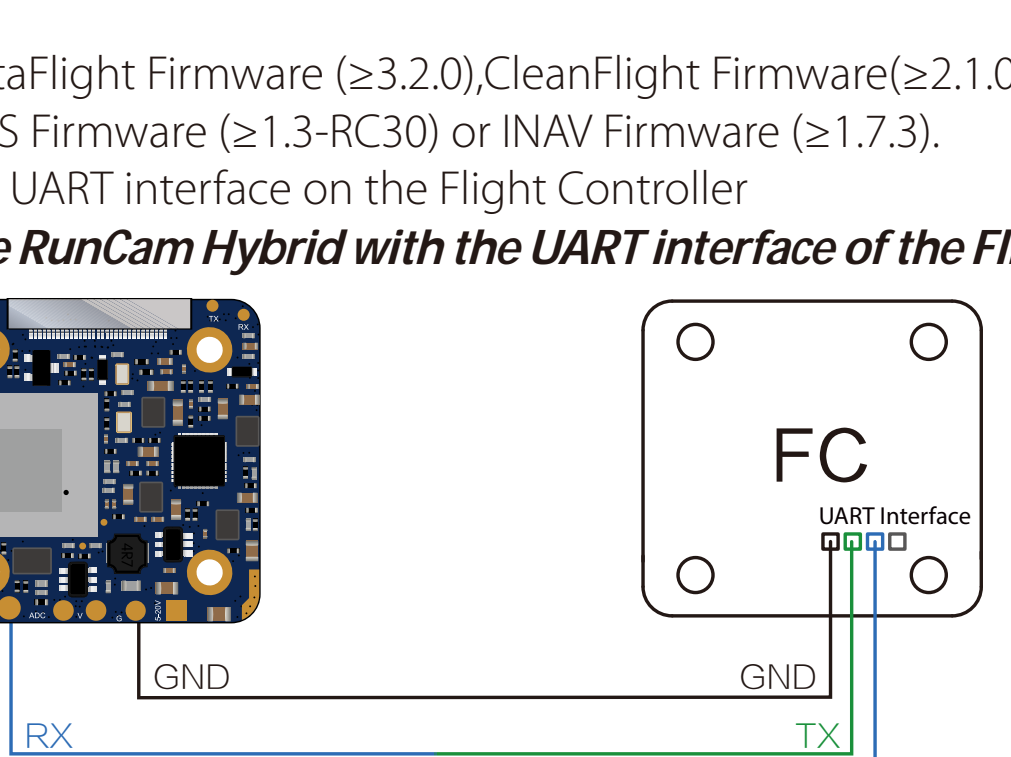

- Open Speedy Bee APP, find firmware updating on the homepage at the left side.

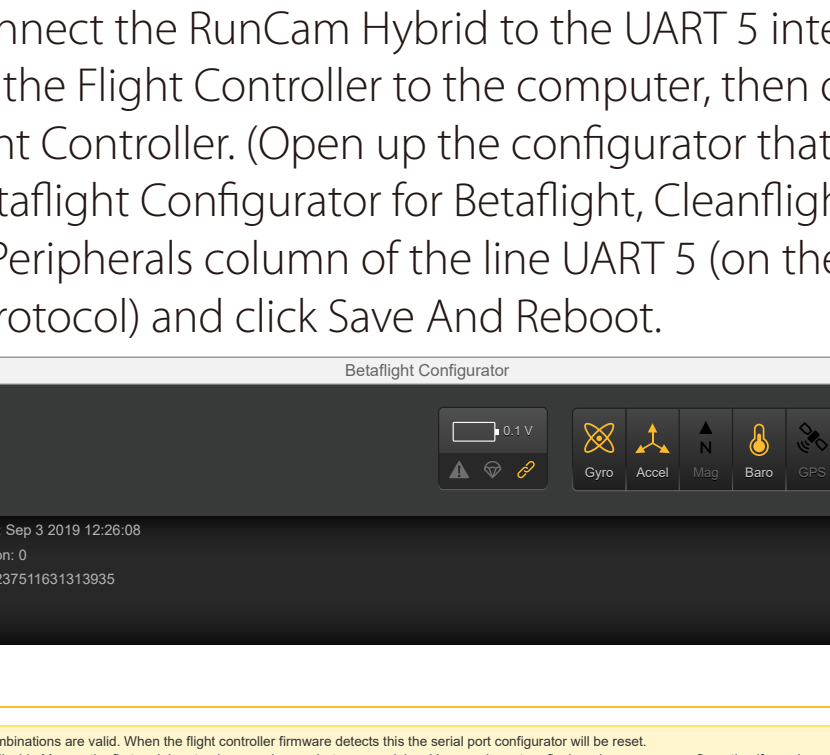

- Choose the right camera, wanted firmware version and flight controller version and then press the download button.

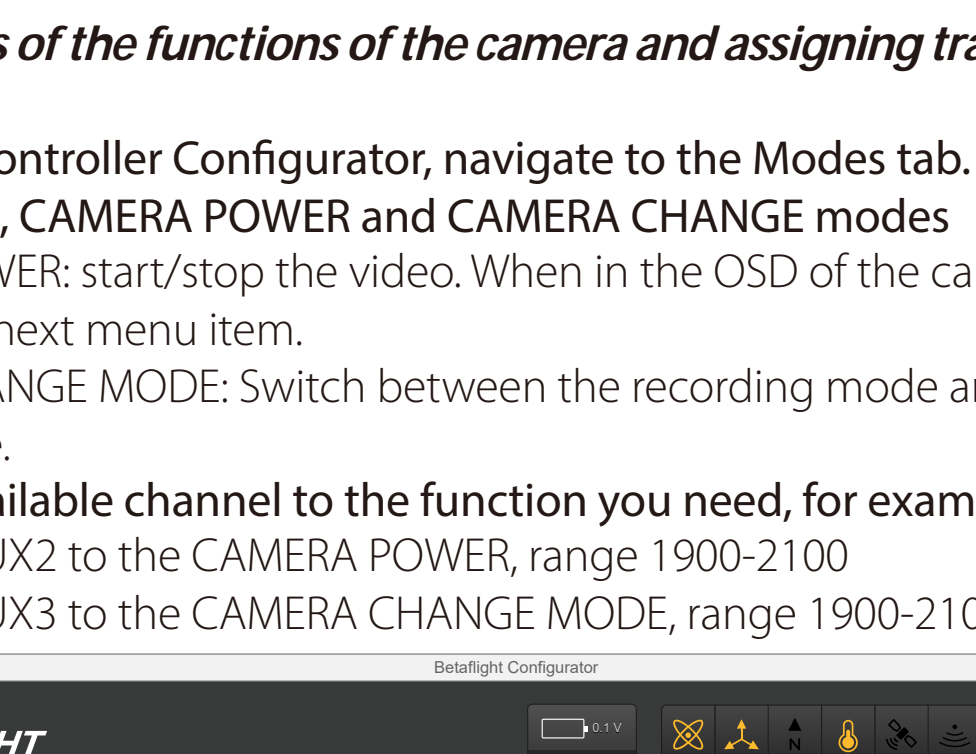


- Follow the APP guidance to finish the updating.

HD Flight Controller Set

Preparation


- Firmware: Betaflight Firmware (≥3.2.0), Cleanflight Firmware (≥2.1.0), KISS Firmware (≥1.3-RC30) or INAV Firmware (≥1.7.3).
- Any available UART interface on the Flight Controller

- Connect the RunCam Hybrid with the UART interface of the Flight Controller

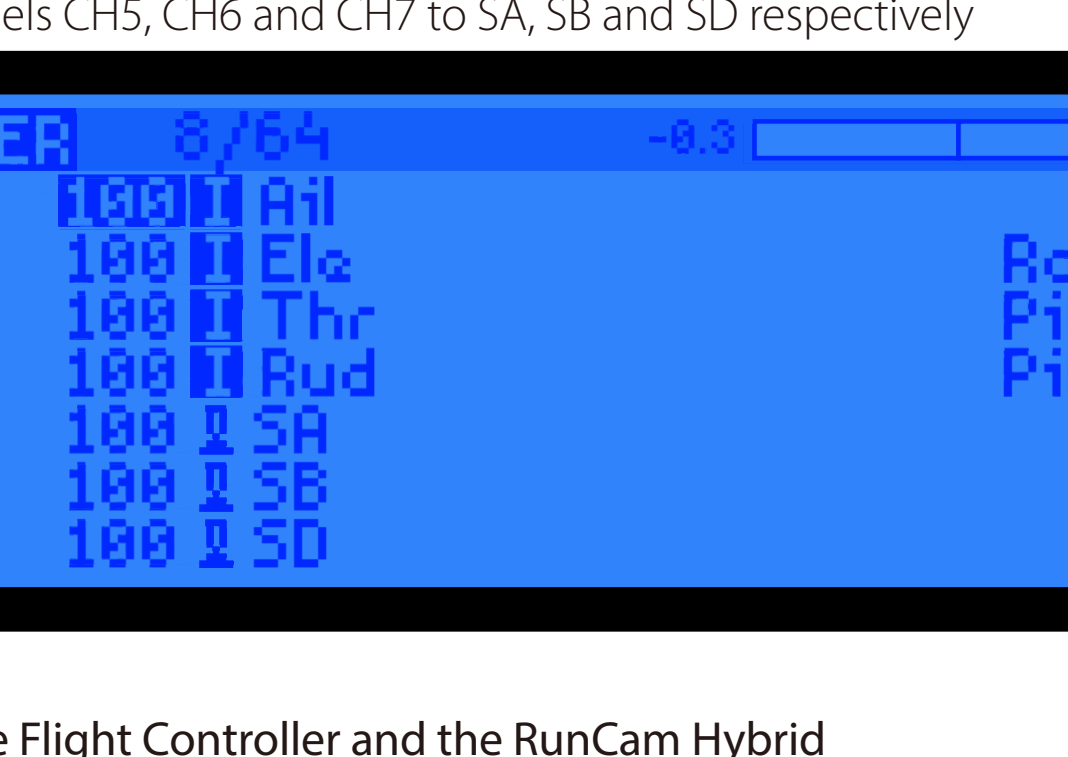

- Make the Flight Controller recognize the RunCam Hybrid

For example, we connect the RunCam Hybrid to the UART 5 interface on the Flight Controller: connect the Flight Controller to the computer, then open the configurator software of the Flight Controller. (Open up the configurator that matches the firmware you are running, Betaflight Configurator for Betaflight, Cleanflight Configurator for Cleanflight). In the Peripherals and column of the line UART 5 (on the Ports tab), select Camera (RunCam Protocol) and click Save And Reboot.

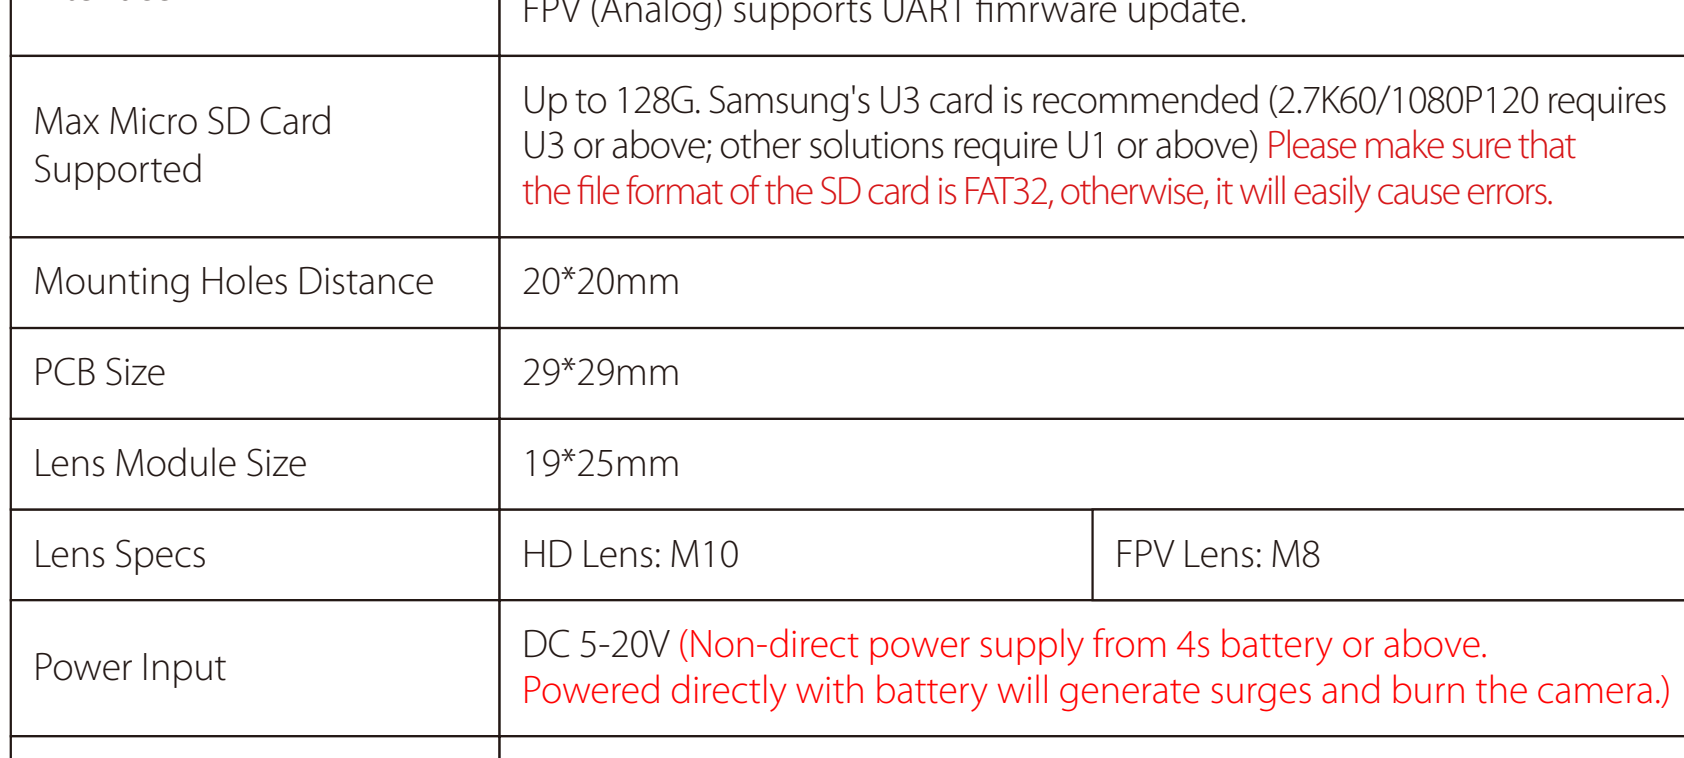

- Instructions of the functions of the camera and assigning transmitter channels to them

In the Flight Controller Configurator, navigate to the Modes tab. There are new CAMERA WI-FI, CAMERA POWER and CAMERA CHANGE modes

- CAMERA POWER: start/stop the video. When in the OSD of the camera, this is used to move to the next menu item.
- CAMERA CHANGE MODE: Switch between the recording mode and the QR code setting mode.

Assign any available channel to the function you need, for example:

- Assign the AUX2 to the CAMERA POWER, range 1900-2100
- Assign the AUX3 to the CAMERA CHANGE MODE, range 1900-2100

- Assign the channel to the switch of the controller

Please choose your Model on the controller, then assign to the MIXER interface and assign the channel to the switch of the controller. Take opentx 2.2.0 for example, assign the channels CH5, CH6 and CH7 to SA, SB and SD respectively

- Test

- Power the Flight Controller and the RunCam Hybrid
- Set the SA to the bottom, the camera starts/stops the video
- Set the SD to the bottom, the camera switches among the two modes: video and OSD setting mode

Technical Support

Please visit: <https://support.runcam.com>

Parameter

HD sensor	SONY 8MP
Analog sensor	SONY 1.3MP
Field of View(FOV)	HD Recording FOV 145°; (FPV FOV 150° @4:3)
Video Resolution	4K@30fps / 2.7K@60fps / 2.7K@50fps / 1080P@120fps / 1080P@100fps / 1080P@60fps / 1080P@50fps
Video File Format	MP4
TV Mode	NTSC (720*480)/PAL (720*576) Switchable
Interface	HD supports UART firmware; FPV (Analog) supports UART firmware update.
Max Micro SD Card Supported	Up to 128G, Samsung's U3 card is recommended (2.7K60/1080P120 requires U3 or above; other solutions require U1 or above). Please make sure that the file format of the SD card is FAT32, otherwise, it will easily cause errors.
Mounting Holes Distance	20*20mm
PCB Size	29*29mm
Lens Module Size	19*25mm
Lens Specs	HD Lens: M10 FPV Lens: M8
Power Input	DC 5-20V (Non-direct power supply from 4s battery or above. Powered directly with battery will generate surges and burn the camera.)
Working Current	480mA @5V / 140mA @12V
Weight	18g