



## WCS1000C / WCS1000D - USER'S MANUAL – ENGLISH



### DISPOSAL OF OLD ELECTRICAL & ELECTRONIC EQUIPMENT

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

### SAFETY INSTRUCTIONS

- **CAUTION** - Before using this product read carefully the following safety instructions. Take a look of this manual entirely and preserve it for future reference. When using any electric product, basic precautions should always be taken, including the following: To reduce the risk, close supervision is necessary when the product is used near children. Protect the apparatus from atmospheric agents and keep it away from water, rain and high humidity places. This product should be site away from heat sources such as radiators, lamps and any other device that generate heat. Care should be taken so that objects and liquids do not go inside the product. The product should be connected to a power supply only of the type described on the operating instructions or as marked on the product.

### IN CASE OF FAULT

- In case of fault or maintenance this product should be inspected only by qualified service personnel when: Liquids have spilled inside the product. The product has fallen and been damaged. The product does not appear to operate normally or exhibits a marked change in performance. Do not operate on the product, it has no user-serviceable parts inside. Refer servicing to an authorized maintenance center.

### WARRANTY AND PRODUCTS RETURN

- Proel warrants all materials, workmanship and proper operation of this product for a period of two years from the original date of purchase. If any defects are found in the materials or workmanship or if the product fails to function properly during the applicable warranty period, the owner should inform about these defects the dealer or the distributor, providing receipt or invoice of date of purchase and defect detailed description. This warranty does not extend to damage resulting from improper installation, misuse, neglect or abuse. Proel S.p.A. will verify damage on returned units, and when the unit has been properly used and warranty is still valid, then the unit will be replaced or repaired. Proel S.p.A. is not responsible for any "direct damage" or "indirect damage" caused by product defectiveness.


### CE CONFORMITY

PROEL S.p.A hereby, declares that this product complies with the essential requirements and other relevant provisions of: Directive LVD 2006/95/EC, as stated in EN 60065 and EN 62479 standard.

Directive R&TTE 1999 / 5 / EC as stated in EN 300422-1; EN 300422-2; EN 301489-1; EN 300489-9 standard.

### WCS1000C and WCS1000D TRANSMITTER UNIT INSTRUCTIONS

1. MICROPHONE: Microphone capsule with a hyper-cardioid unidirectional pattern.
2. TALK LIGHT: This indicator is on when microphone is active.
3. DOWN button: Use this button to reduce the unit's microphone level.
4. UP button: Use this button to increase the unit's microphone level.
5. MUTE: To mute temporarily the conversation.
6. TALK button: Press this button to talk.
7. PRIORITY button: This button is present only on the WCS1000C chairman transmitter unit: when pressed the chairman takes its priority over all the delegates units.
8. DISPLAY: The Display shows current mode status, room number, unit number, channel number, volume setting, battery status.
9. POWER button: To turn on the unit press and hold this button until the display appears: if that doesn't happen, replace the battery pack with a new one fully charged. To turn off the unit press and hold again the button.

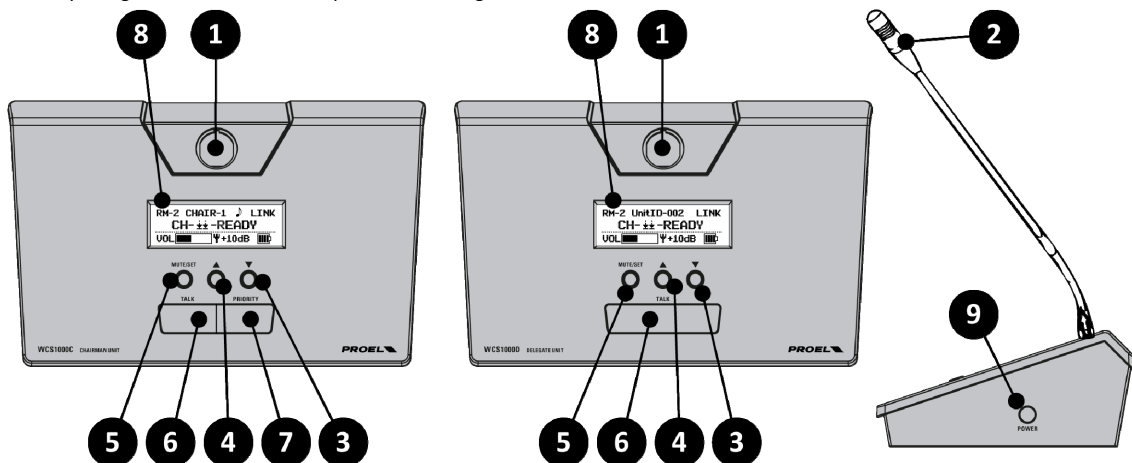

For detailed instructions see the WCS1000 Conference System USER MANUAL

96MAN00111-REV.20/15

PROEL S.p.A. - Via alla Ruenia 37/43 64027 Sant'Omero (Te) - Italy - Tel: +39 0861 81241 Fax: +39 0861 887862 [www.proel.com](http://www.proel.com)



## WCS1000C / WCS1000D – MANUALE D’USO - ITALIANO



### TRATTAMENTO DEL DISPOSITIVO ELETTRICO OD ELETTRONICO A FINE VITA

Il marchio riportato sul prodotto o sulla documentazione indica che il prodotto non deve essere smaltito con altri rifiuti domestici al termine del ciclo di vita. Per evitare eventuali danni all’ambiente si invita l’utente a separare questo prodotto da altri tipi di rifiuti e di riciclarlo in maniera responsabile per favorire il riutilizzo sostenibile delle risorse materiali. Gli utenti domestici sono invitati a contattare il rivenditore presso il quale è stato acquistato il prodotto o l’ufficio locale preposto per tutte le informazioni relative alla raccolta differenziata e al riciclaggio per questo tipo di prodotto. Gli utenti aziendali sono invitati a contattare il proprio fornitore e verificare i termini e le condizioni del contratto di acquisto. Questo prodotto non deve essere smaltito unitamente ad altri rifiuti commerciali.

### AVVERTENZE PER LA SICUREZZA

- **ATTENZIONE** - Prima di utilizzare il prodotto, si prega di leggere attentamente le seguenti istruzioni per la sicurezza. Prendere visione del manuale d’uso e conservarlo per successive consultazioni. Durante l’uso di un prodotto elettrico devono essere sempre prese precauzioni di base onde evitare danni a cose o persone, incluse le seguenti: In presenza di bambini, controllare che il prodotto non rappresenti un pericolo. Posizionare l’apparecchio al riparo dagli agenti atmosferici e a distanza di sicurezza dall’acqua, dalla pioggia e dai luoghi ad alto grado di umidità. Collocare o posizionare il prodotto lontano da fonti di calore quali radiatori, griglie di riscaldamento e ogni altro dispositivo che produca calore. Evitare che qualsiasi oggetto o sostanza liquida entri all’interno del prodotto. Il prodotto deve essere connesso esclusivamente alla alimentazione elettrica delle caratteristiche descritte nel manuale d’uso o scritte sul prodotto.

### IN CASO DI GUASTO

- In caso di guasto o manutenzione questo prodotto deve essere ispezionato da personale qualificato quando: Sostanze liquide sono penetrate all’interno del prodotto. Il prodotto è caduto e si è danneggiato. Il prodotto non funziona normalmente esibendo un marcato cambio di prestazioni. Non intervenire sul prodotto. Rivolgersi a un centro di assistenza autorizzato Proel.

### GARANZIE E RESI

- La garanzia di funzionamento è di 24 mesi dopo la data di acquisto. I difetti rilevati entro il periodo di garanzia sui prodotti venduti, attribuibili a materiali difettosi o difetti di costruzione, devono essere tempestivamente segnalati al proprio rivenditore o distributore, allegando evidenza scritta della data di acquisto e descrizione del tipo di difetto riscontrato. Sono esclusi dalla garanzia difetti causati da uso improprio o manomissione. Proel SpA constata tramite verifica sui resi la difettosità dichiarata, correlata all’appropriato utilizzo, e l’effettiva validità della garanzia; provvede quindi alla sostituzione o riparazione dei prodotti, declinando tuttavia ogni obbligo di risarcimento per danni diretti o indiretti eventualmente derivanti dalla difettosità.

### AVVERTENZE PER L’UTILIZZO E CONFORMITÀ CE


PROEL S.p.A dichiara che questo prodotto è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalle:

Direttiva LVD 2006/95/EC, secondo lo standard EN 60065 ed EN 62479.

Direttiva R&TTE 1999 / 5 / EC secondo gli standard EN 300422-1; EN 300422-2; EN 301489-1; EN 300489-9.

### WCS1000C e WCS1000D UNITÀ TRASMETTITORE - ISTRUZIONI

1. MICROFONO: Capsula microfono con caratteristica unidirezionale ipercardioide.
2. LUCE TALK: Questo indicatore si accende quando il microfono è attivo.
3. tasto GIÙ: Usare questo tasto per ridurre il livello del microfono.
4. tasto SU: Usare questo tasto per aumentare il livello del microfono.
5. Tasto MUTE: Per chiudere temporaneamente la conversazione.
6. Tasto TALK: Premere questo tasto per conversare.
7. Tasto PRIORITY: Questo tasto è presente solo sull’unità WCS1000C chairman: quando premuto il chairman prende la priorità su tutti i delegati.
8. DISPLAY: Il display mostra lo stato corrente, numero room, numero unità, numero canale, suoneria, volume, stato della batteria.
9. Tasto POWER: Per accendere l’unità tenere premuto questo tasto finché il display appare: qualora non accadesse, sostituire il pacco batterie con uno nuovo completamente ricaricato. Per spegnere l’unità tenere premuto ancora questo tasto.

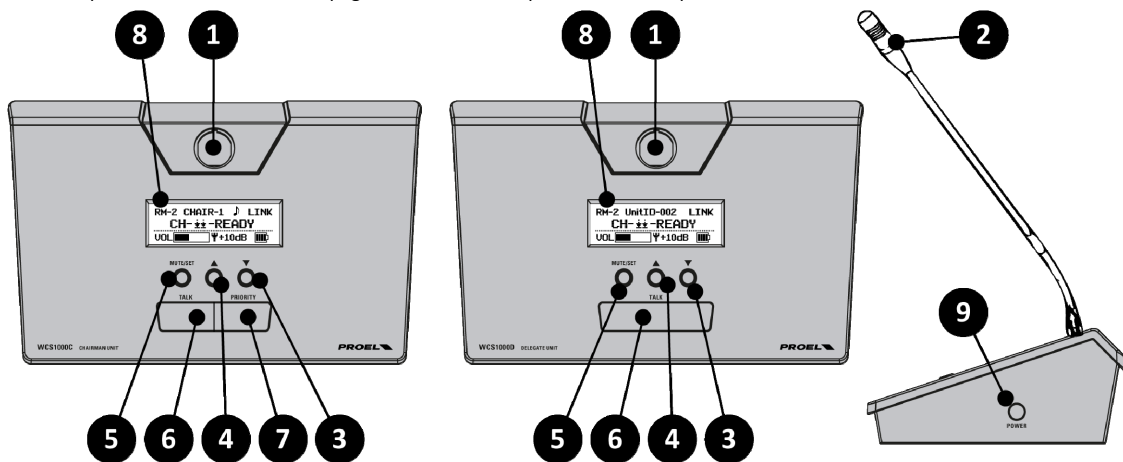

Per le istruzioni dettagliate vedi il manuale d’uso del WCS1000 Conference System

96MAN00111-REV.20/15

PROEL S.p.A. - Via alla Ruenia 37/43 64027 Sant’Omero (Te) – Italy - Tel: +39 0861 81241 Fax: +39 0861 887862 [www.proel.com](http://www.proel.com)