


Винт-петля с метрической резьбой

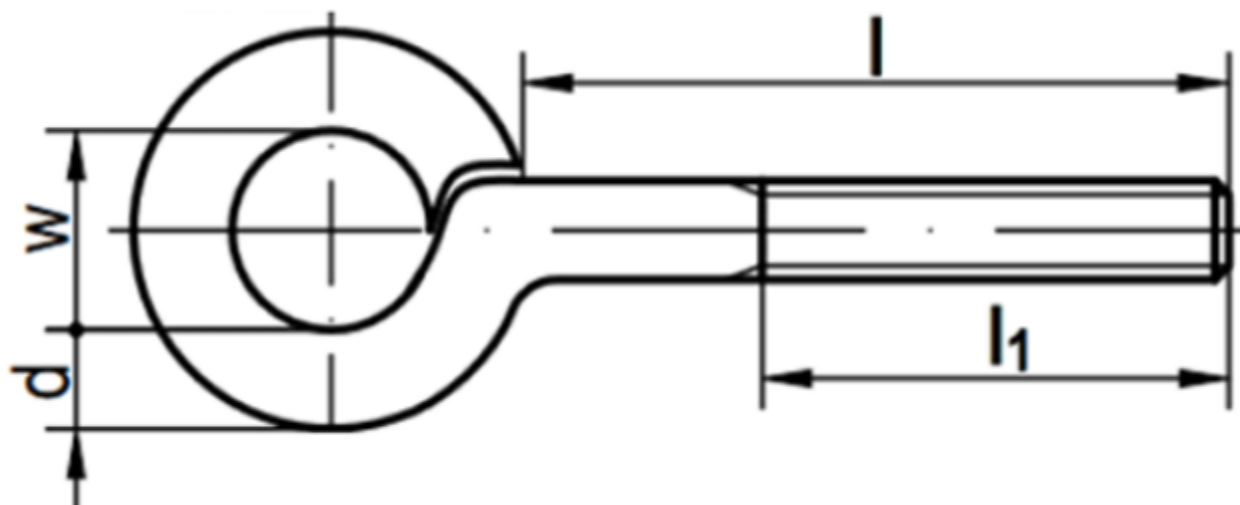

- $d_1=d$ – диаметр резьбы, диаметр стержня
- l_1 – длина резьбовой части
- w – диаметр кольца

d_1	l_1	w	d	Длина полная (с кольцом)
M5	40/60/80/100/120	14	5	63/83/103/123/143
M6	40/60/80/100/120/150/180	18	6	95/115/135/155/175/205/235

M8	80/100/120/150/180/200/230/260/280/300	20	8	125/145/165/195/225/255/285/305/325/345
M10	80/100/120/150/180/200/250/300	25	10	135/155/175/205/235/265/305/355
M12	100/120/150/180/200/250/300	30	12	165/185/205/225/245/275/305/325/365
M16	160/180/200/250/300	30	16	255/275/295/345/395