



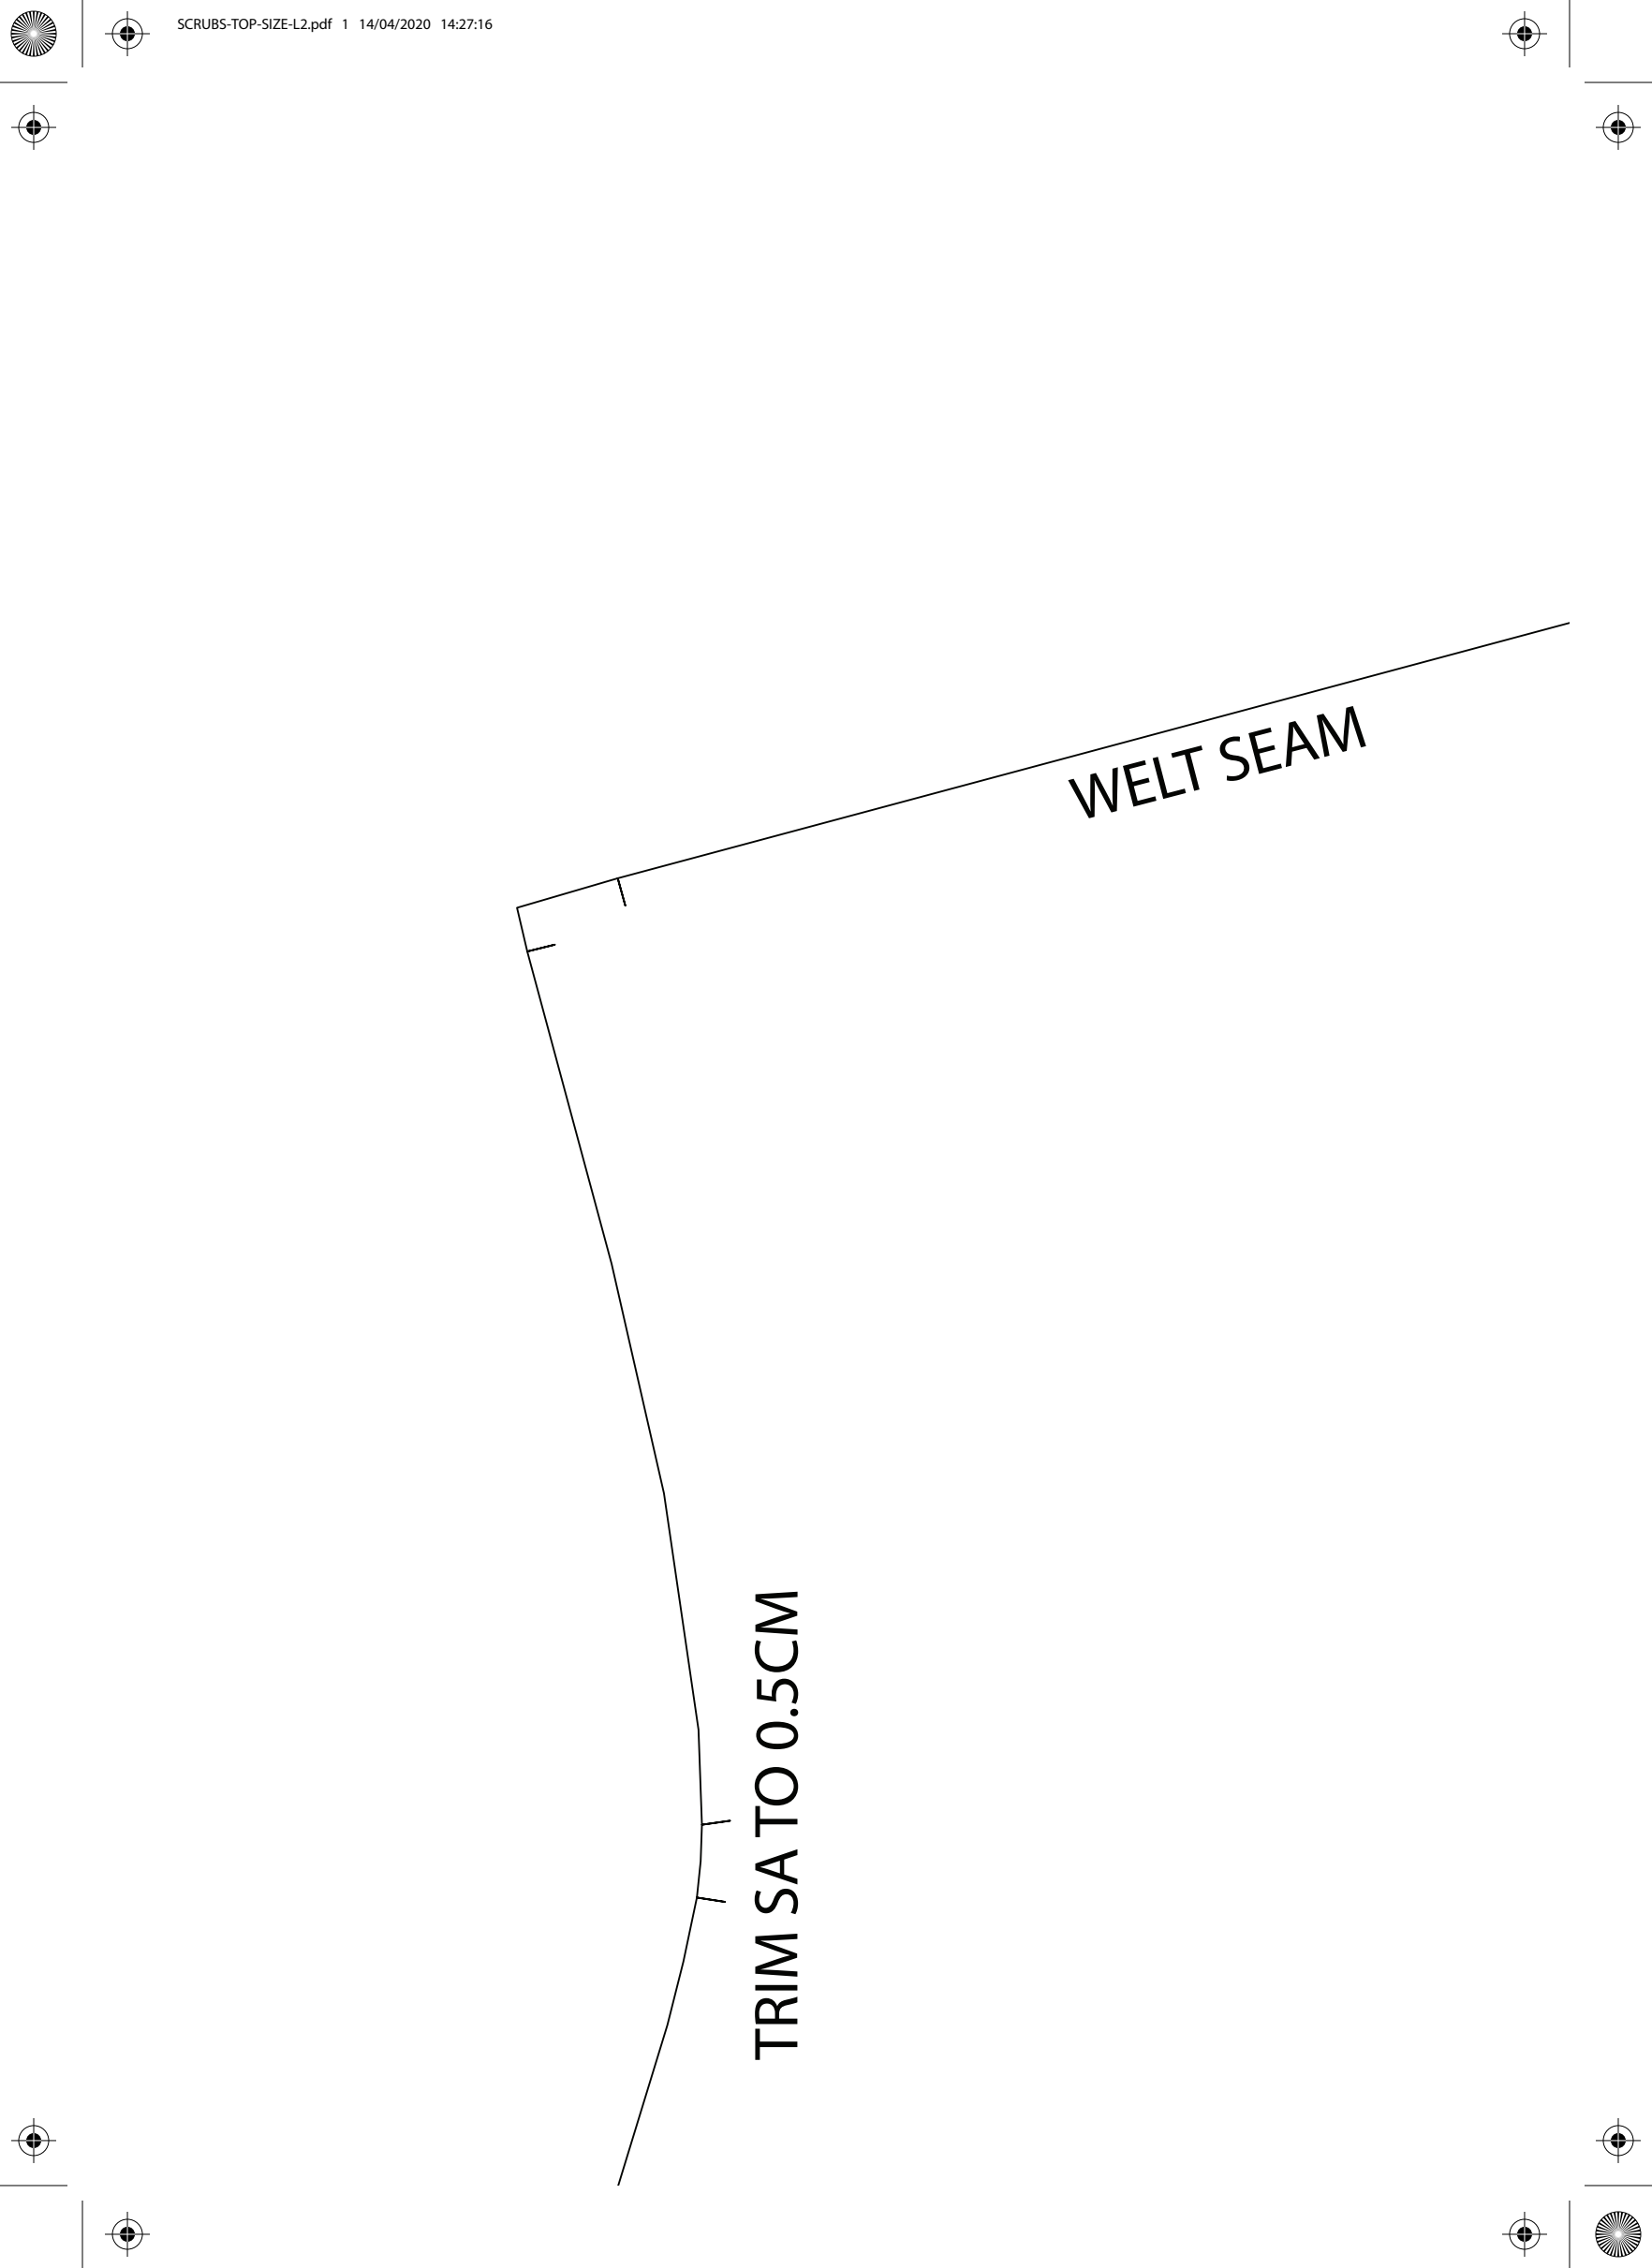


WELT SEAM

TRIM SA TO 0.5CM

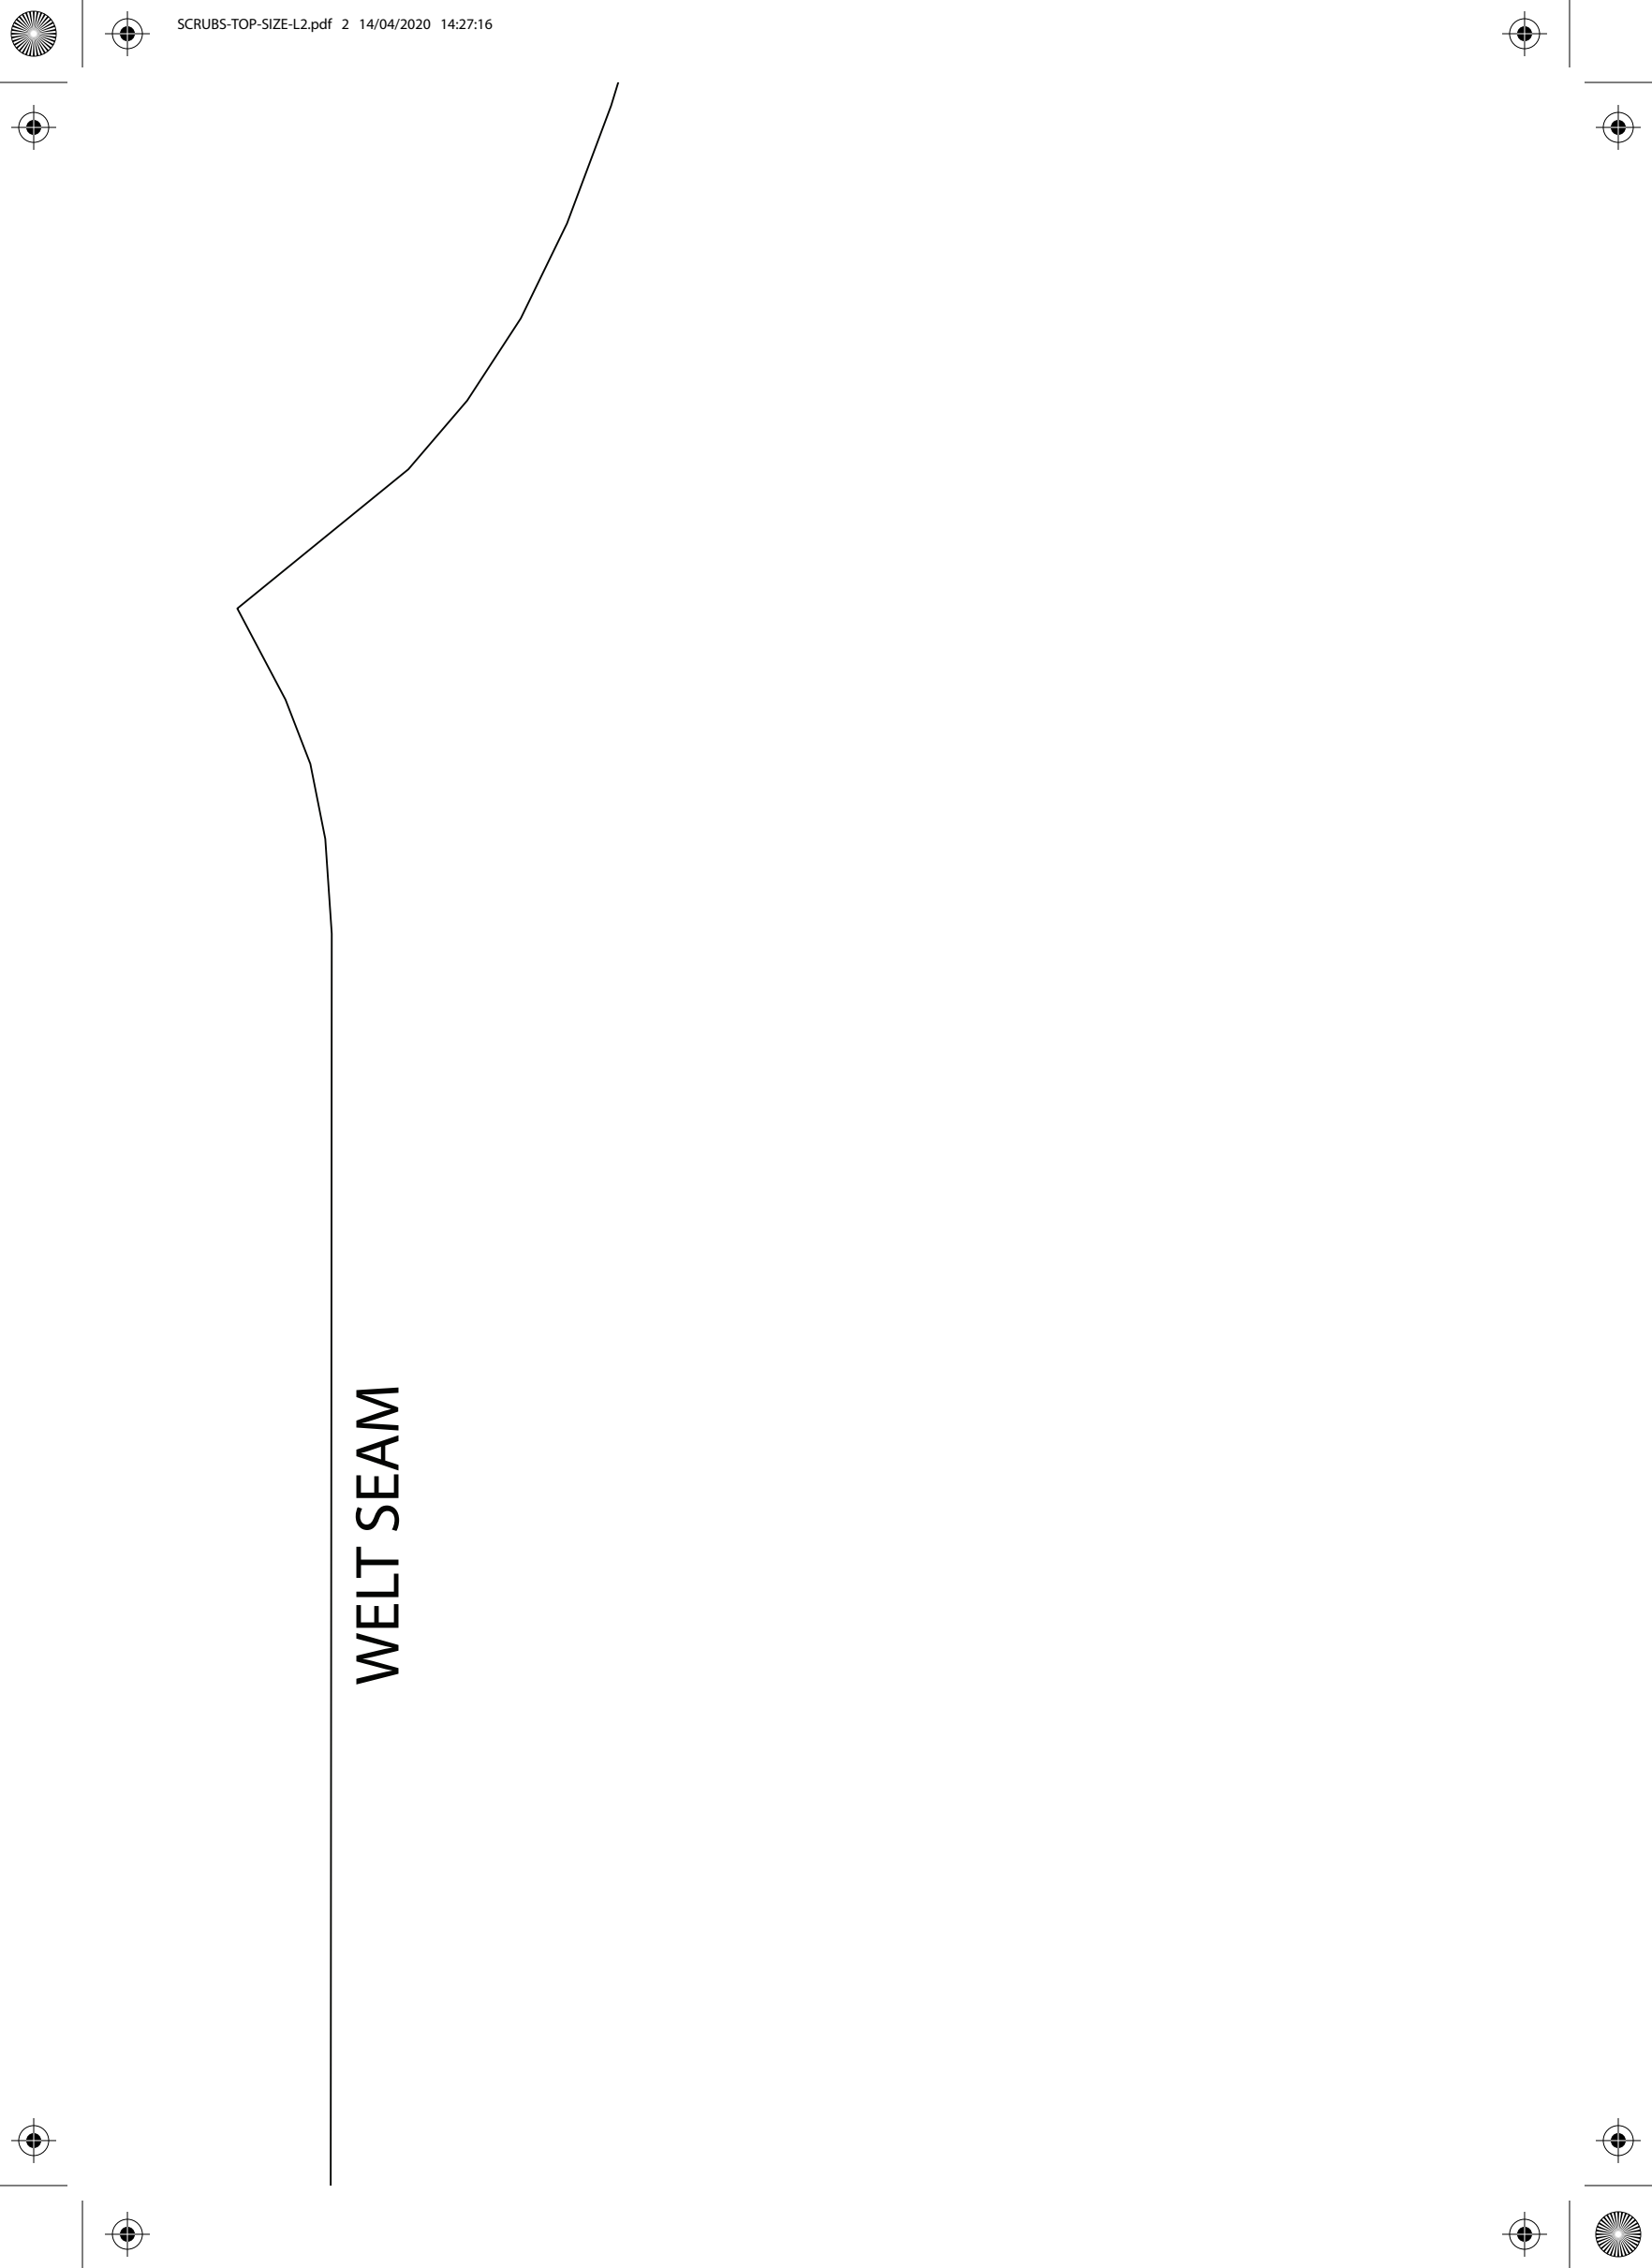


WELT SEAM

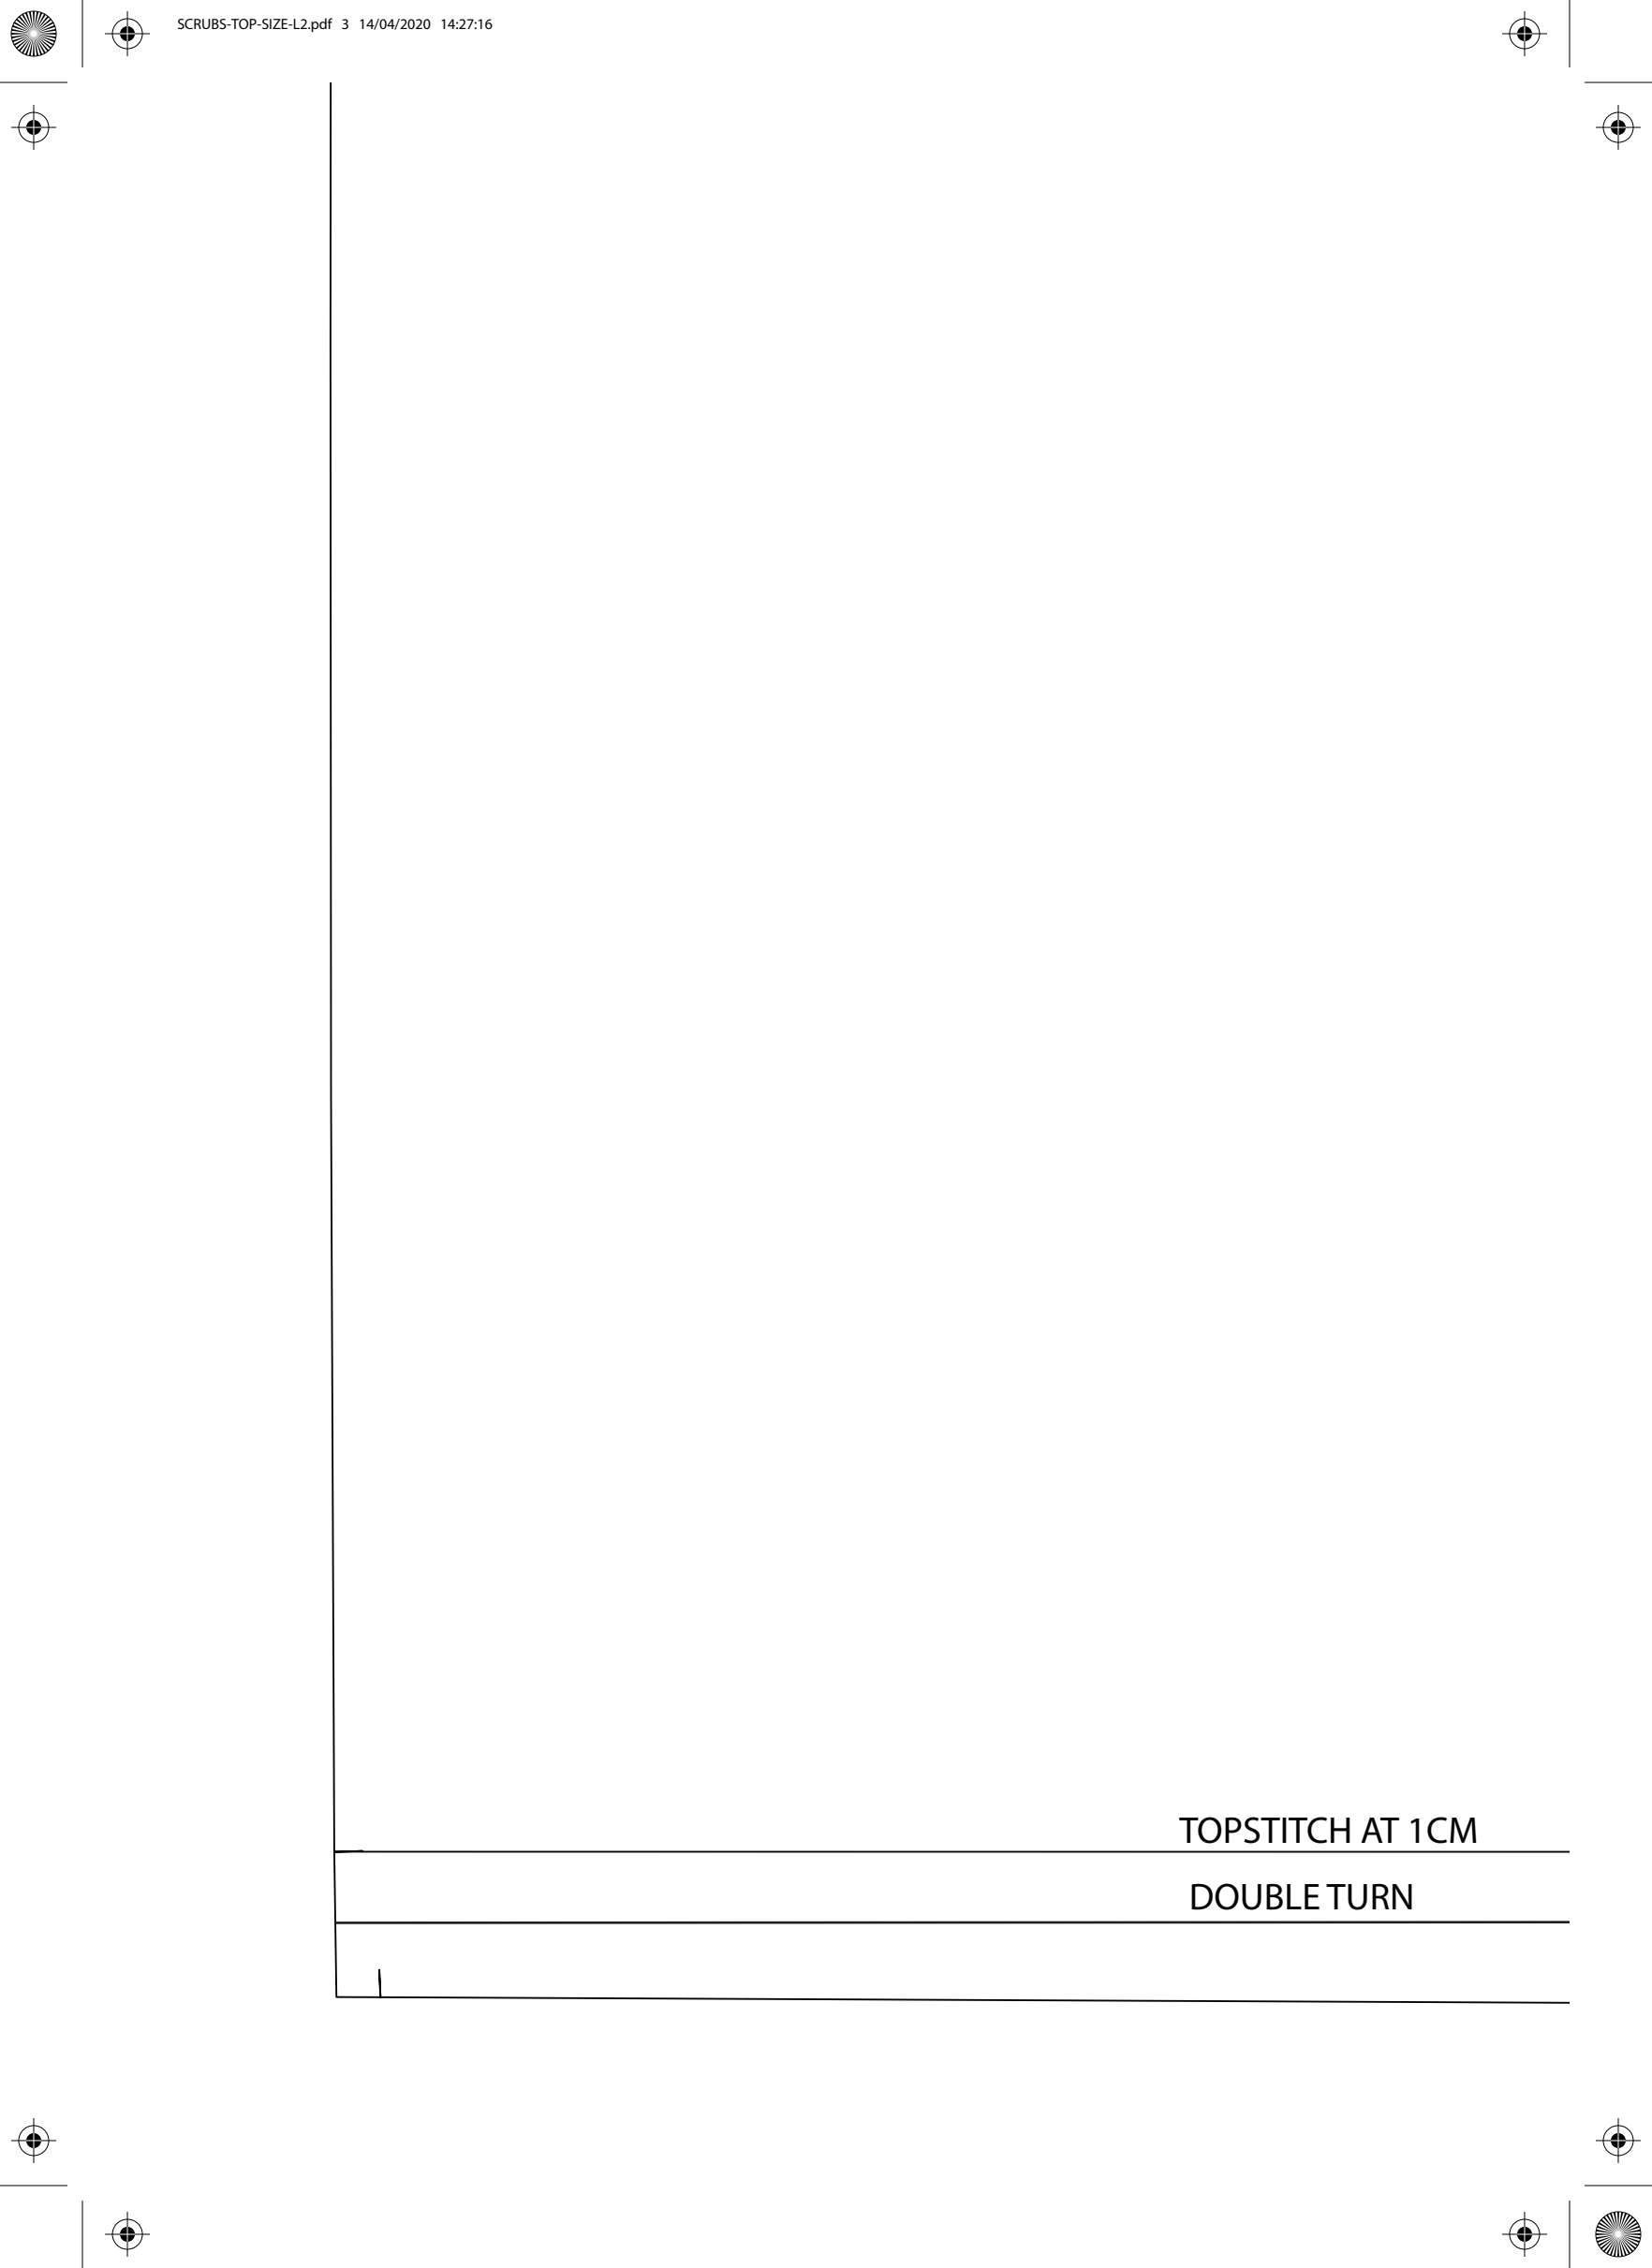

TOPSTITCH AT 1CM


DOUBLE TURN




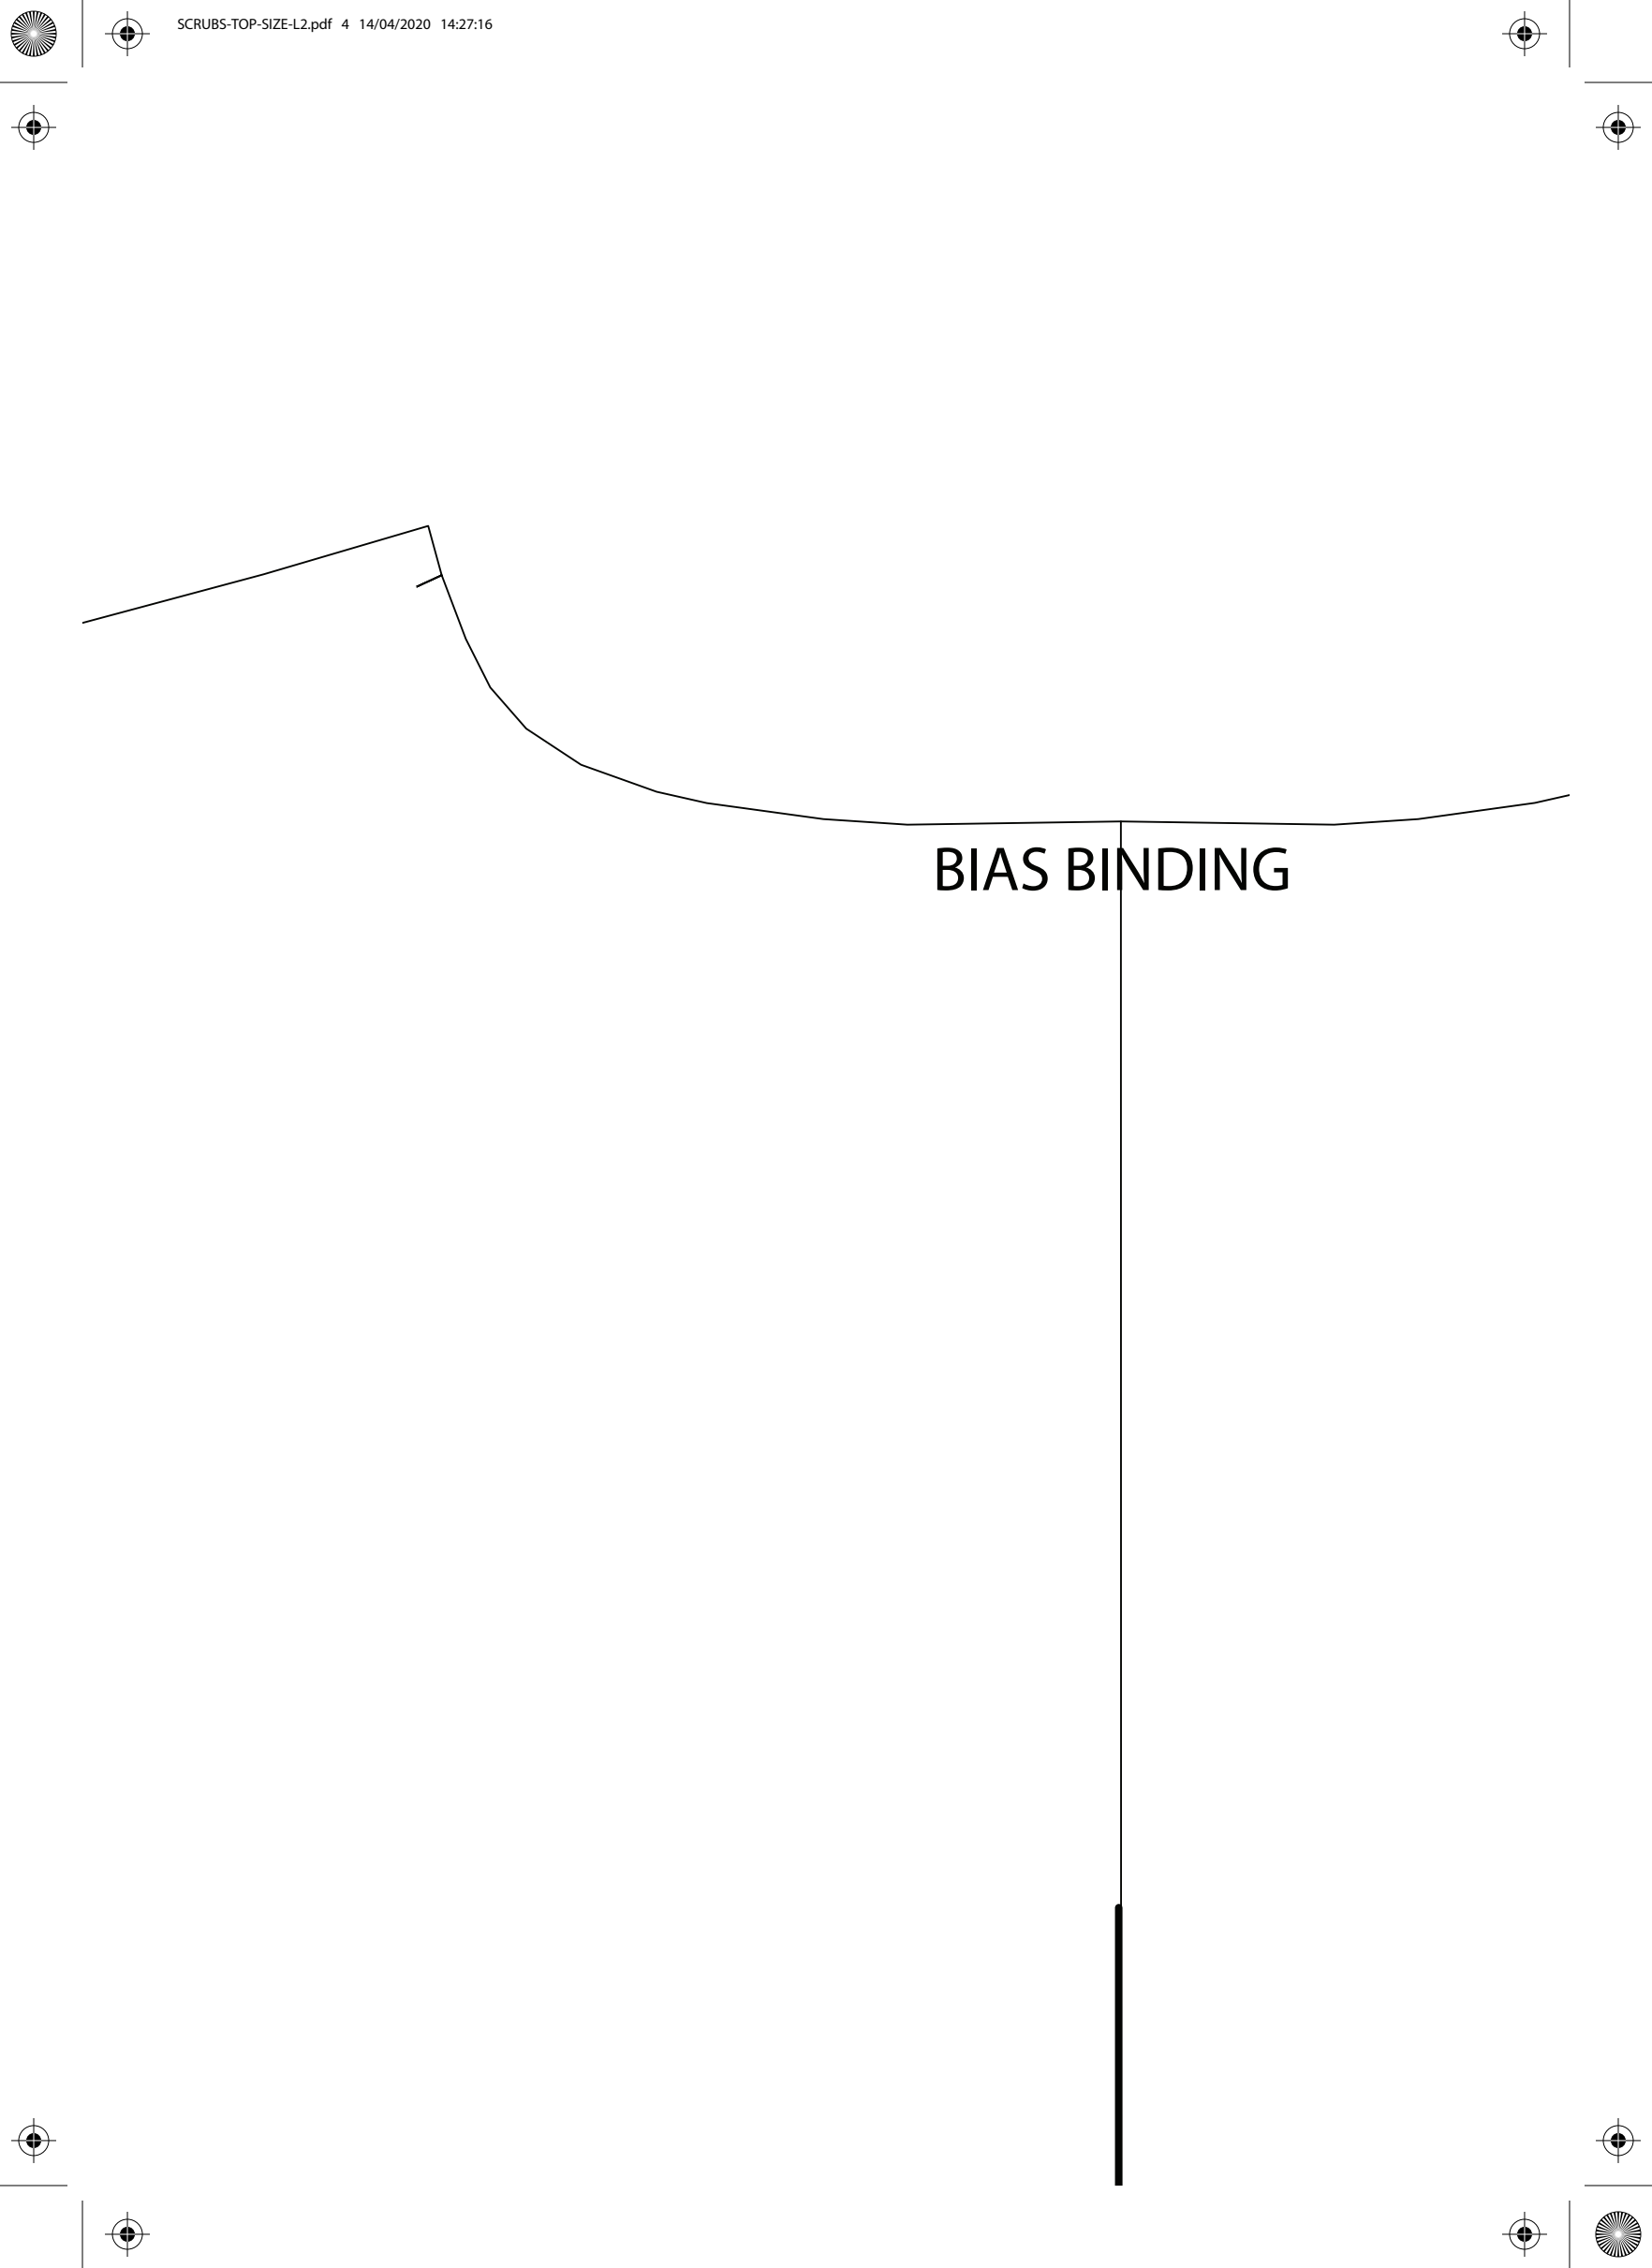



SCRUBS-TOP-5 L BACK PANEL CUTY X1 MAIN FABRIC

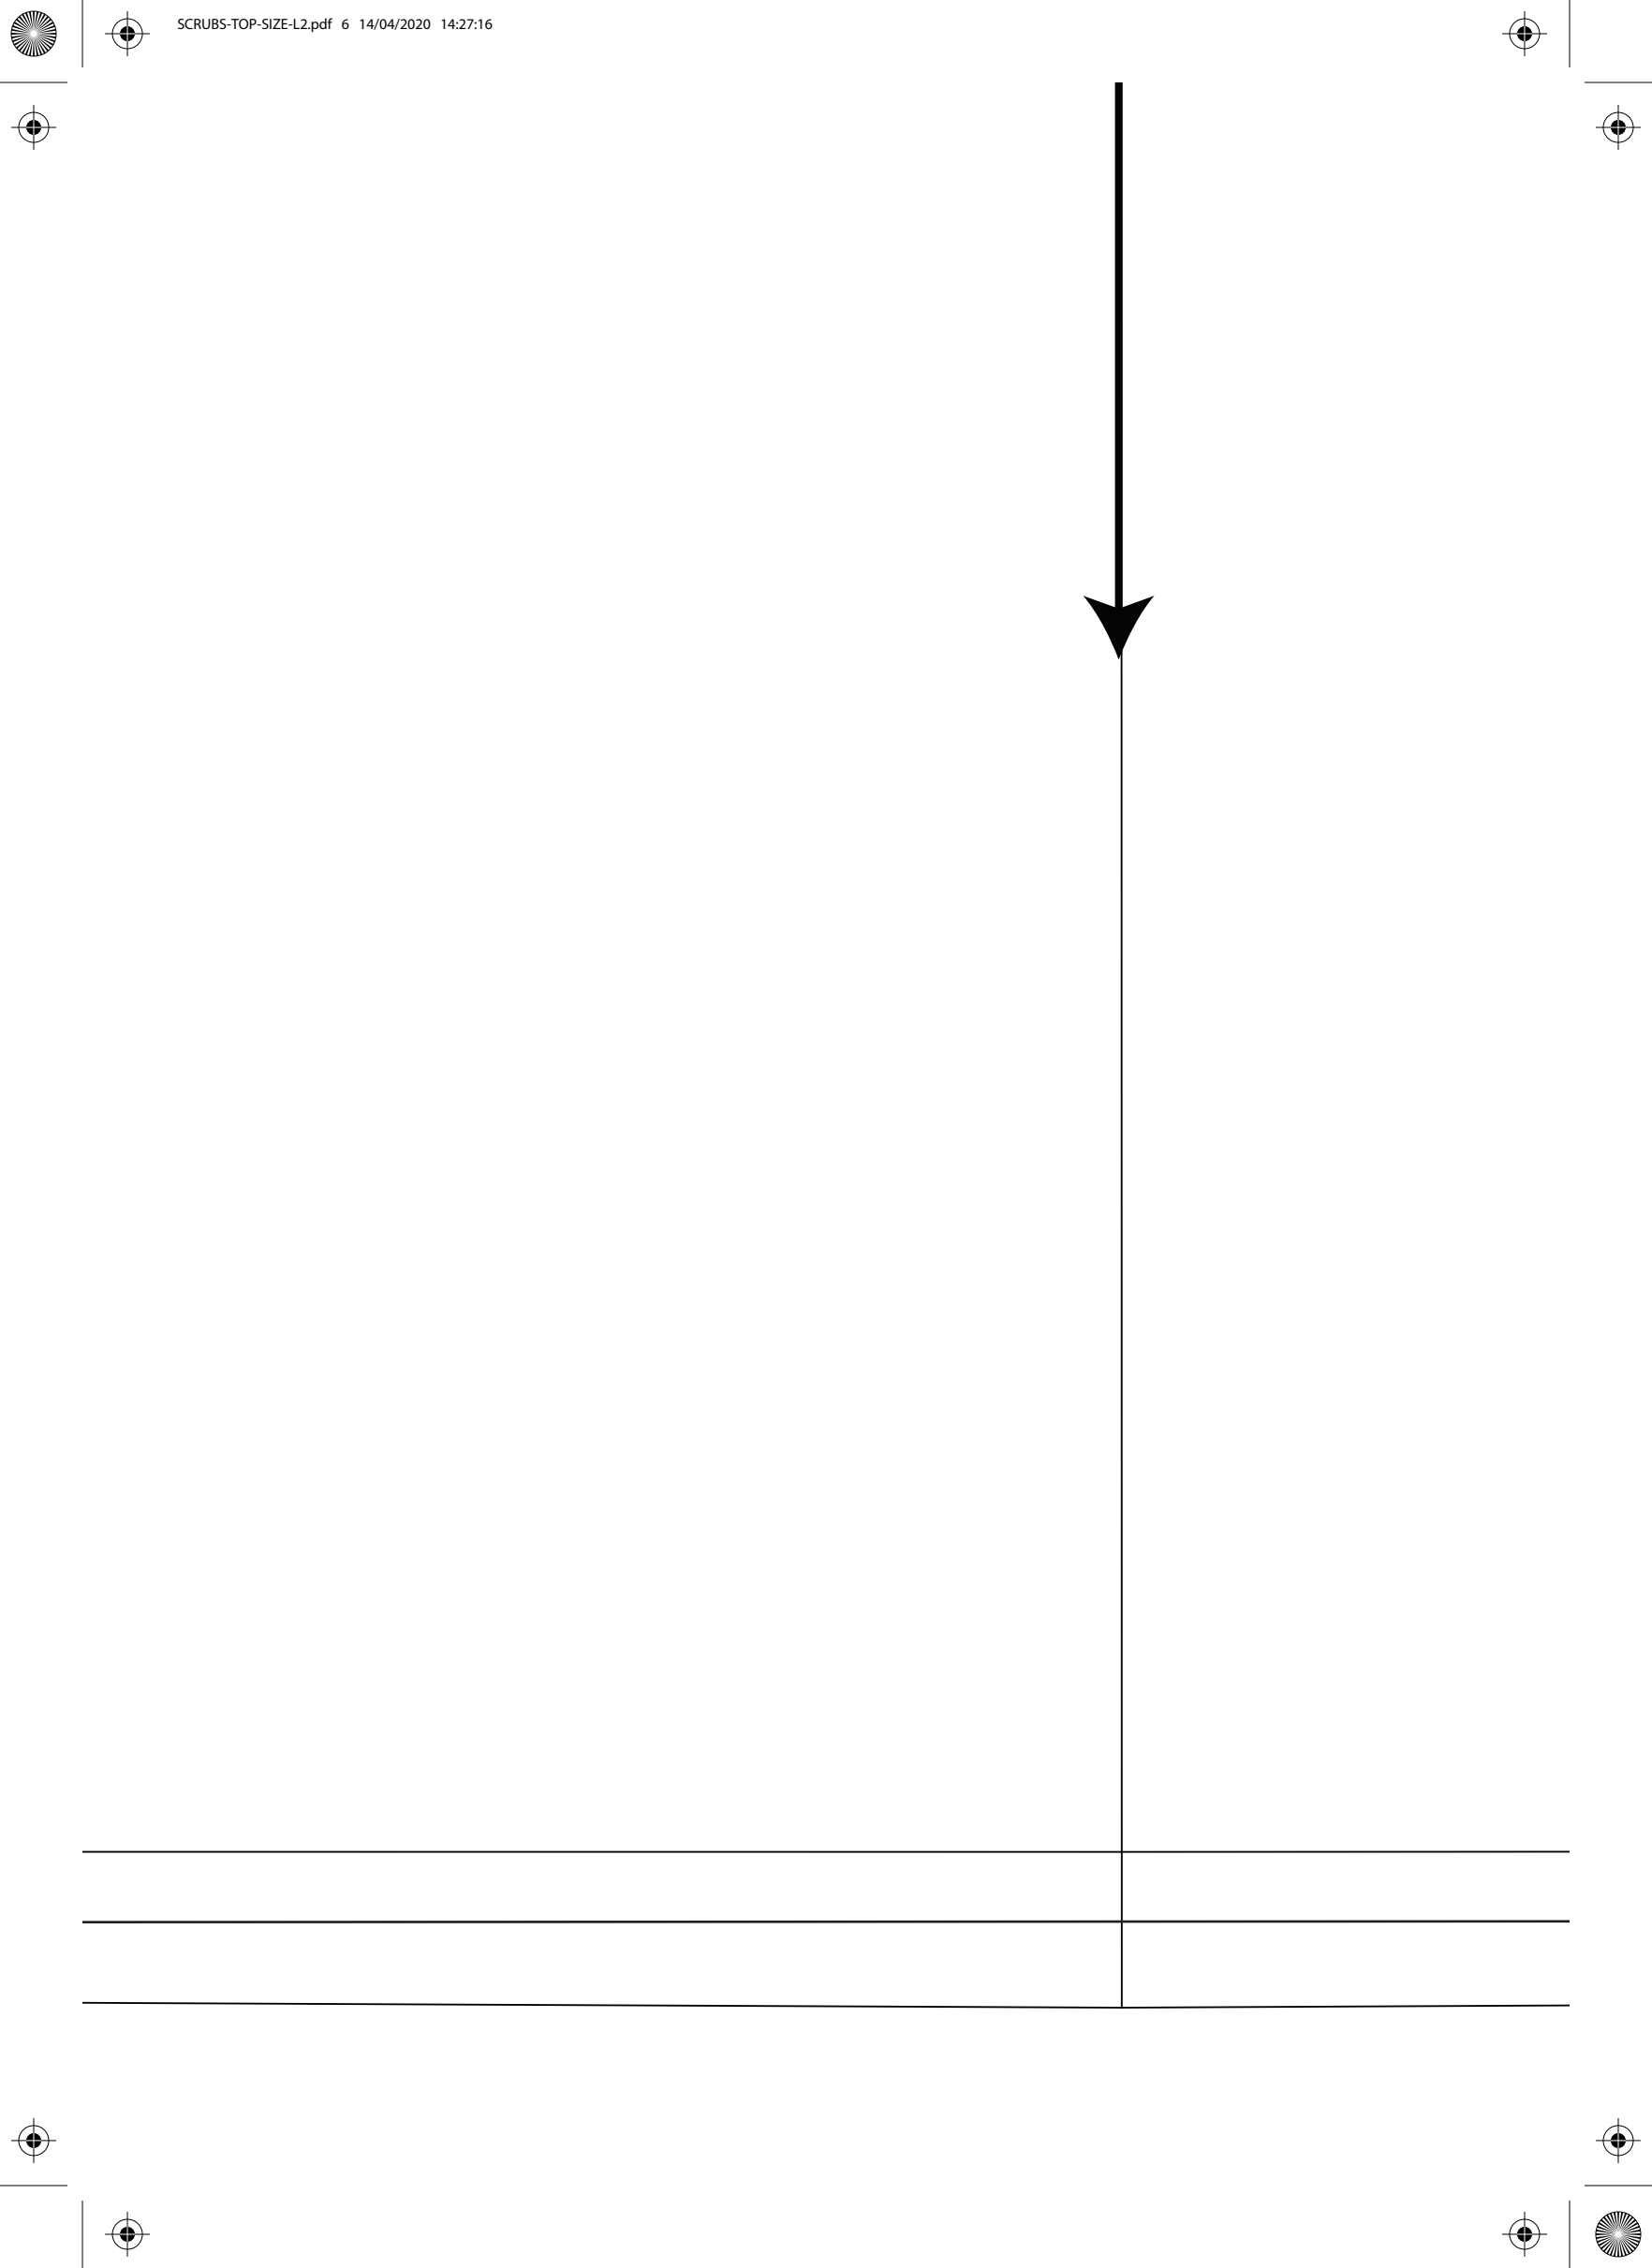

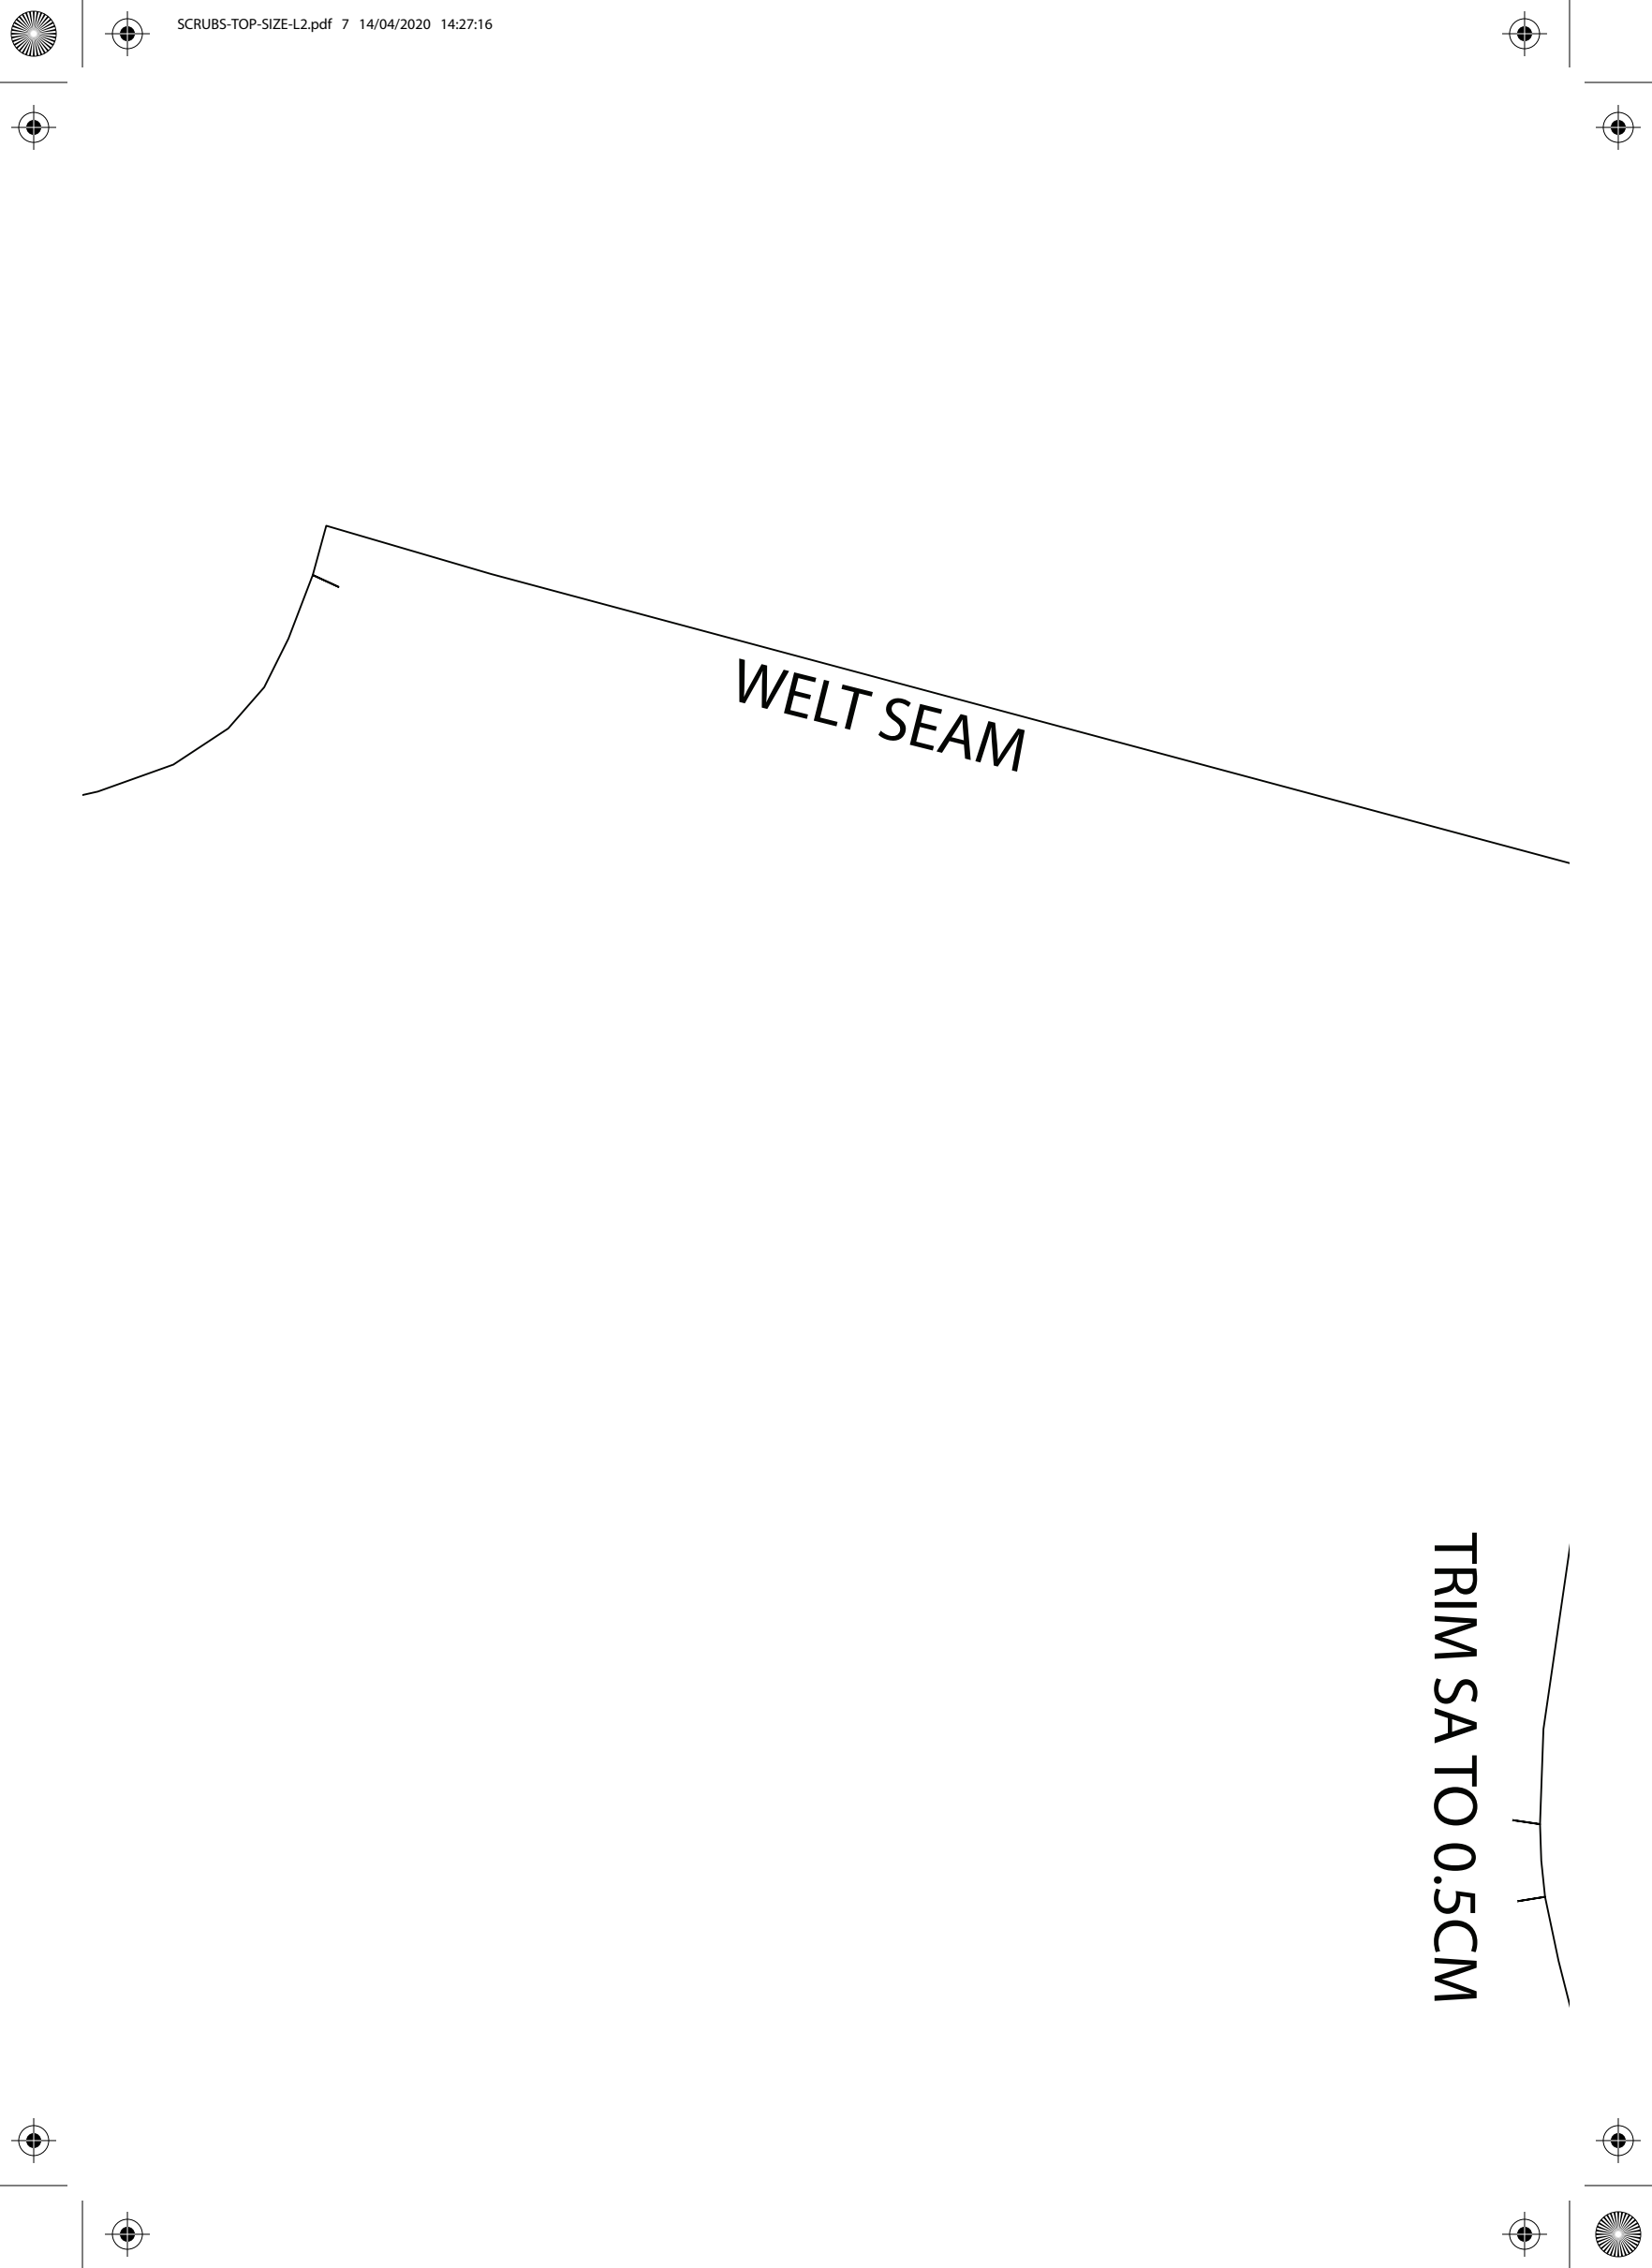

WELT SEAM

TRIM SA TO 0.5CM






TOPSTITCH AT 1CM

DOUBLE TURN



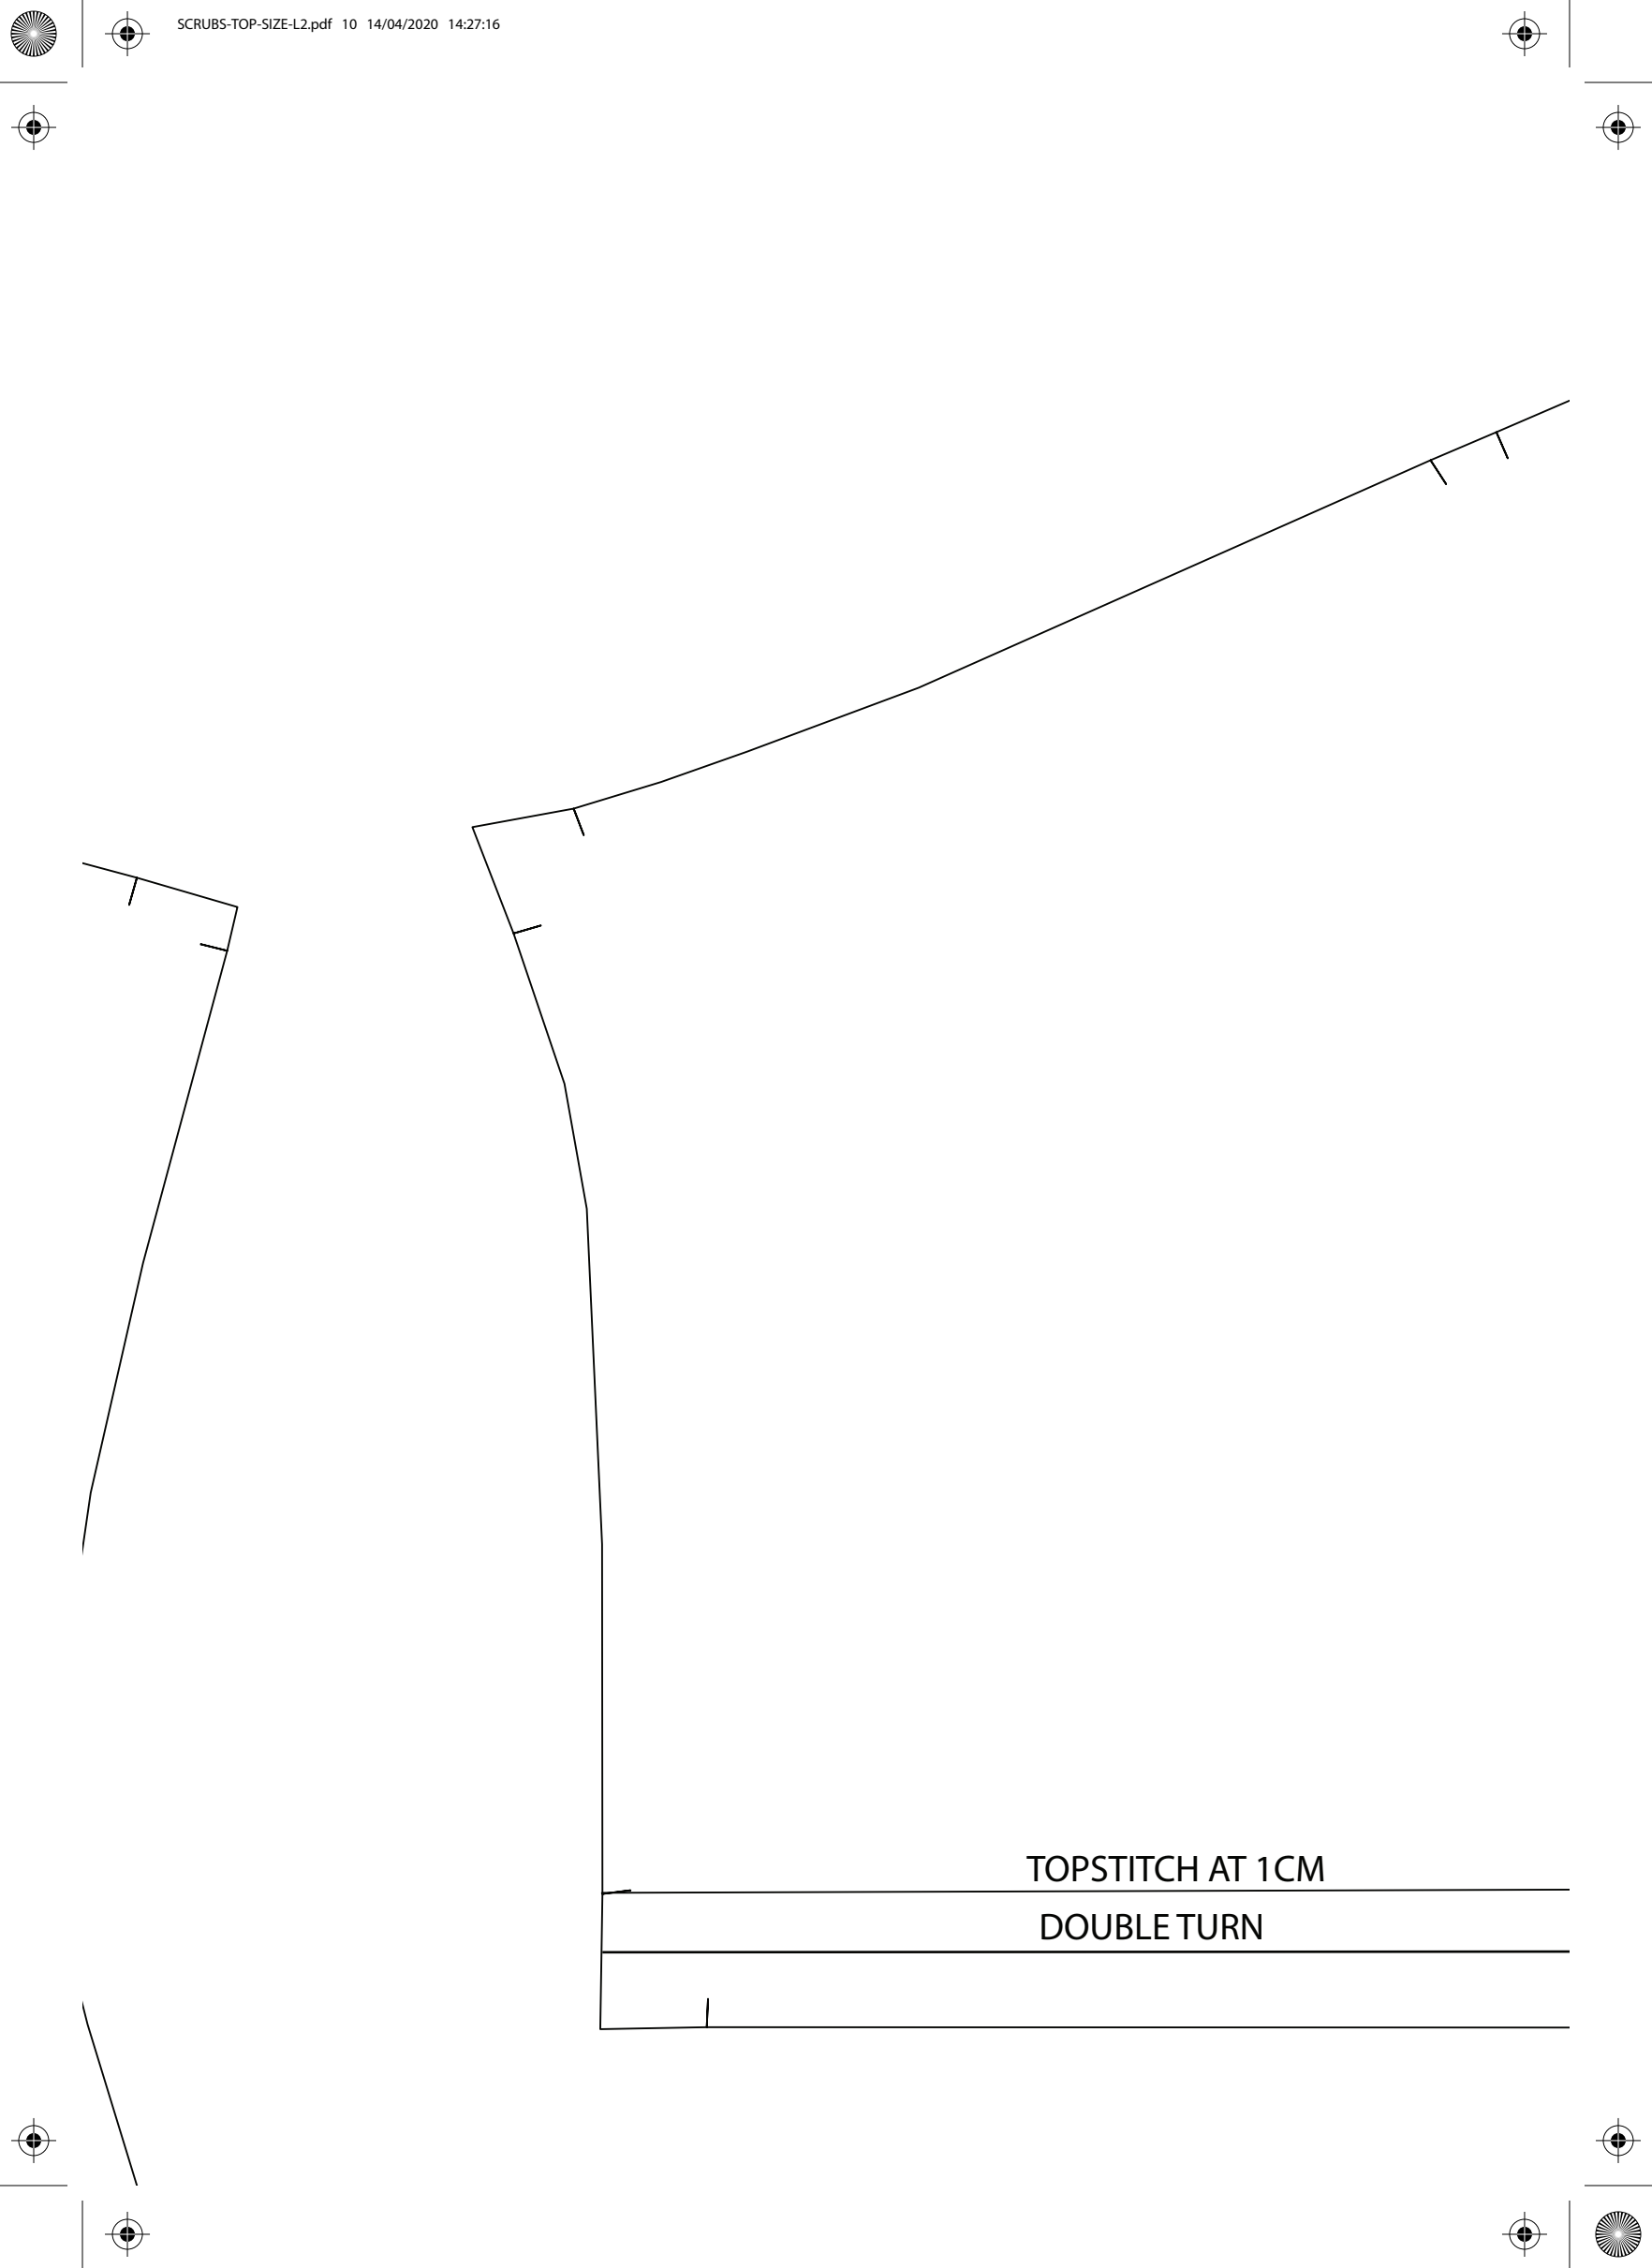

TOPSTITCH AT 1CM

DOUBLE TURN


WELT SEAM


DOUBLE FOLD TO OUTSIDE

TOPSTITCH EDGE


SCRUBS-TOP-3 L
CHEST POCKET
CUT X2 MAIN FABRIC



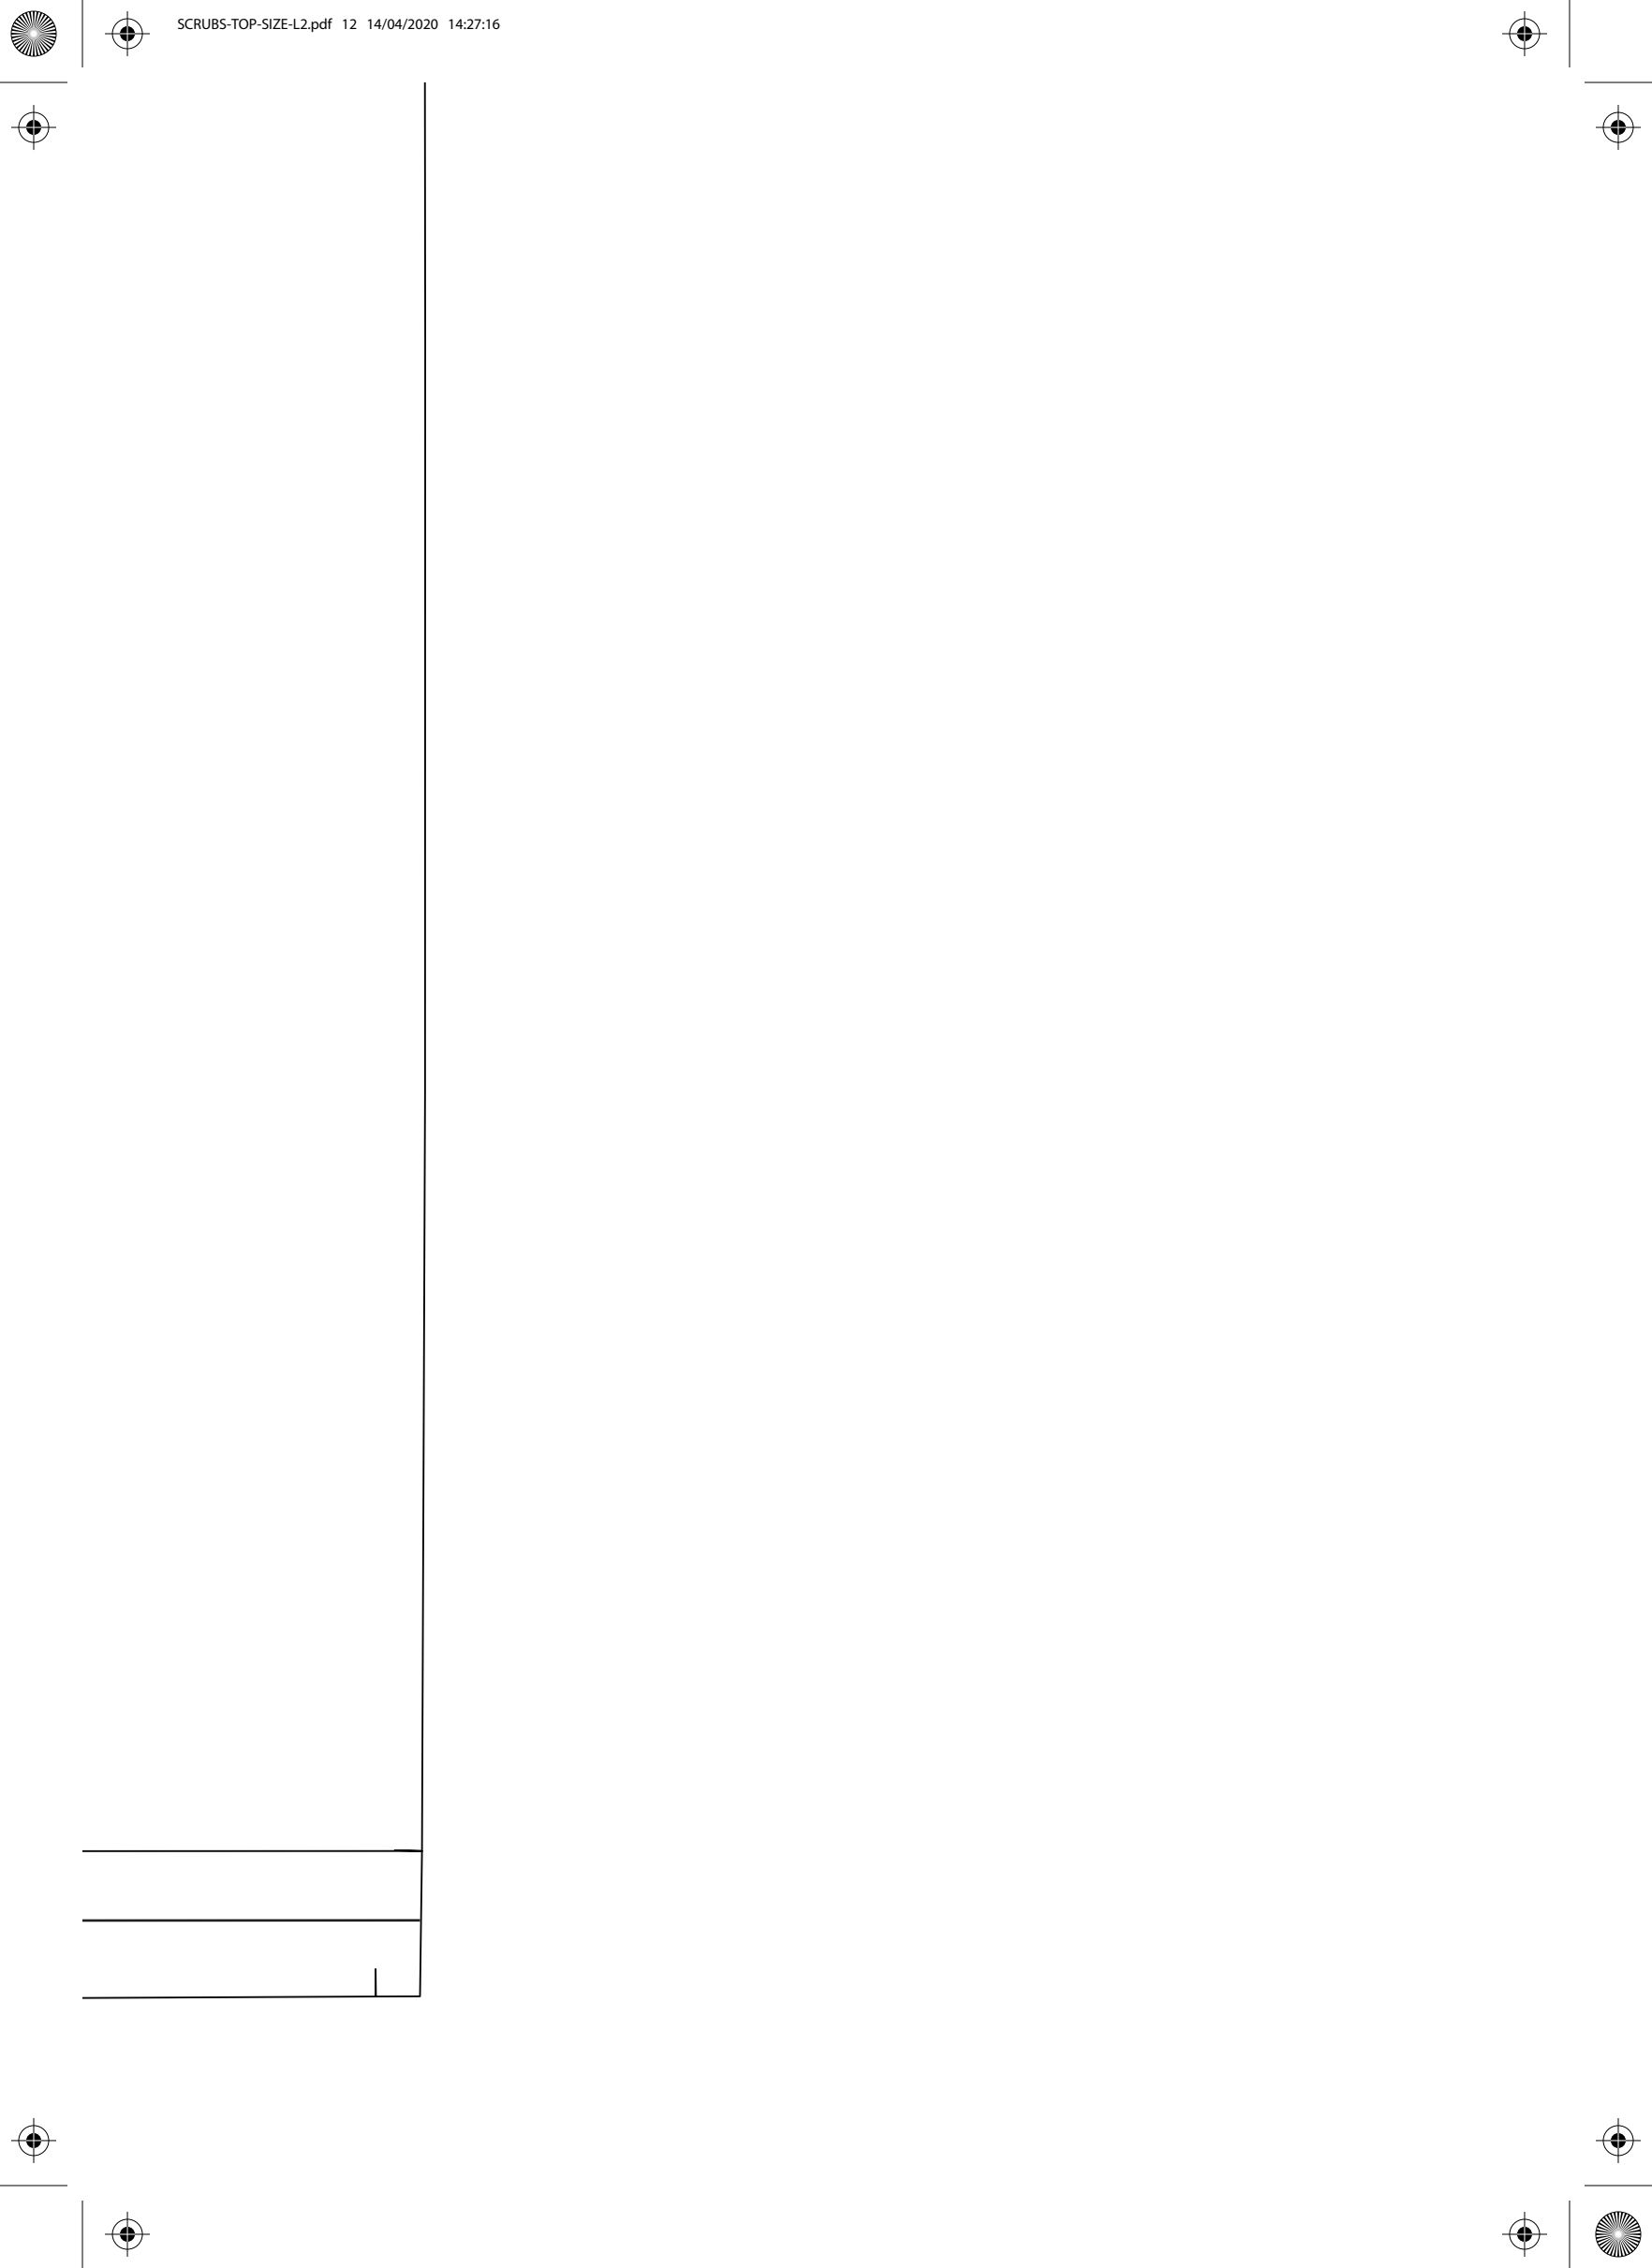

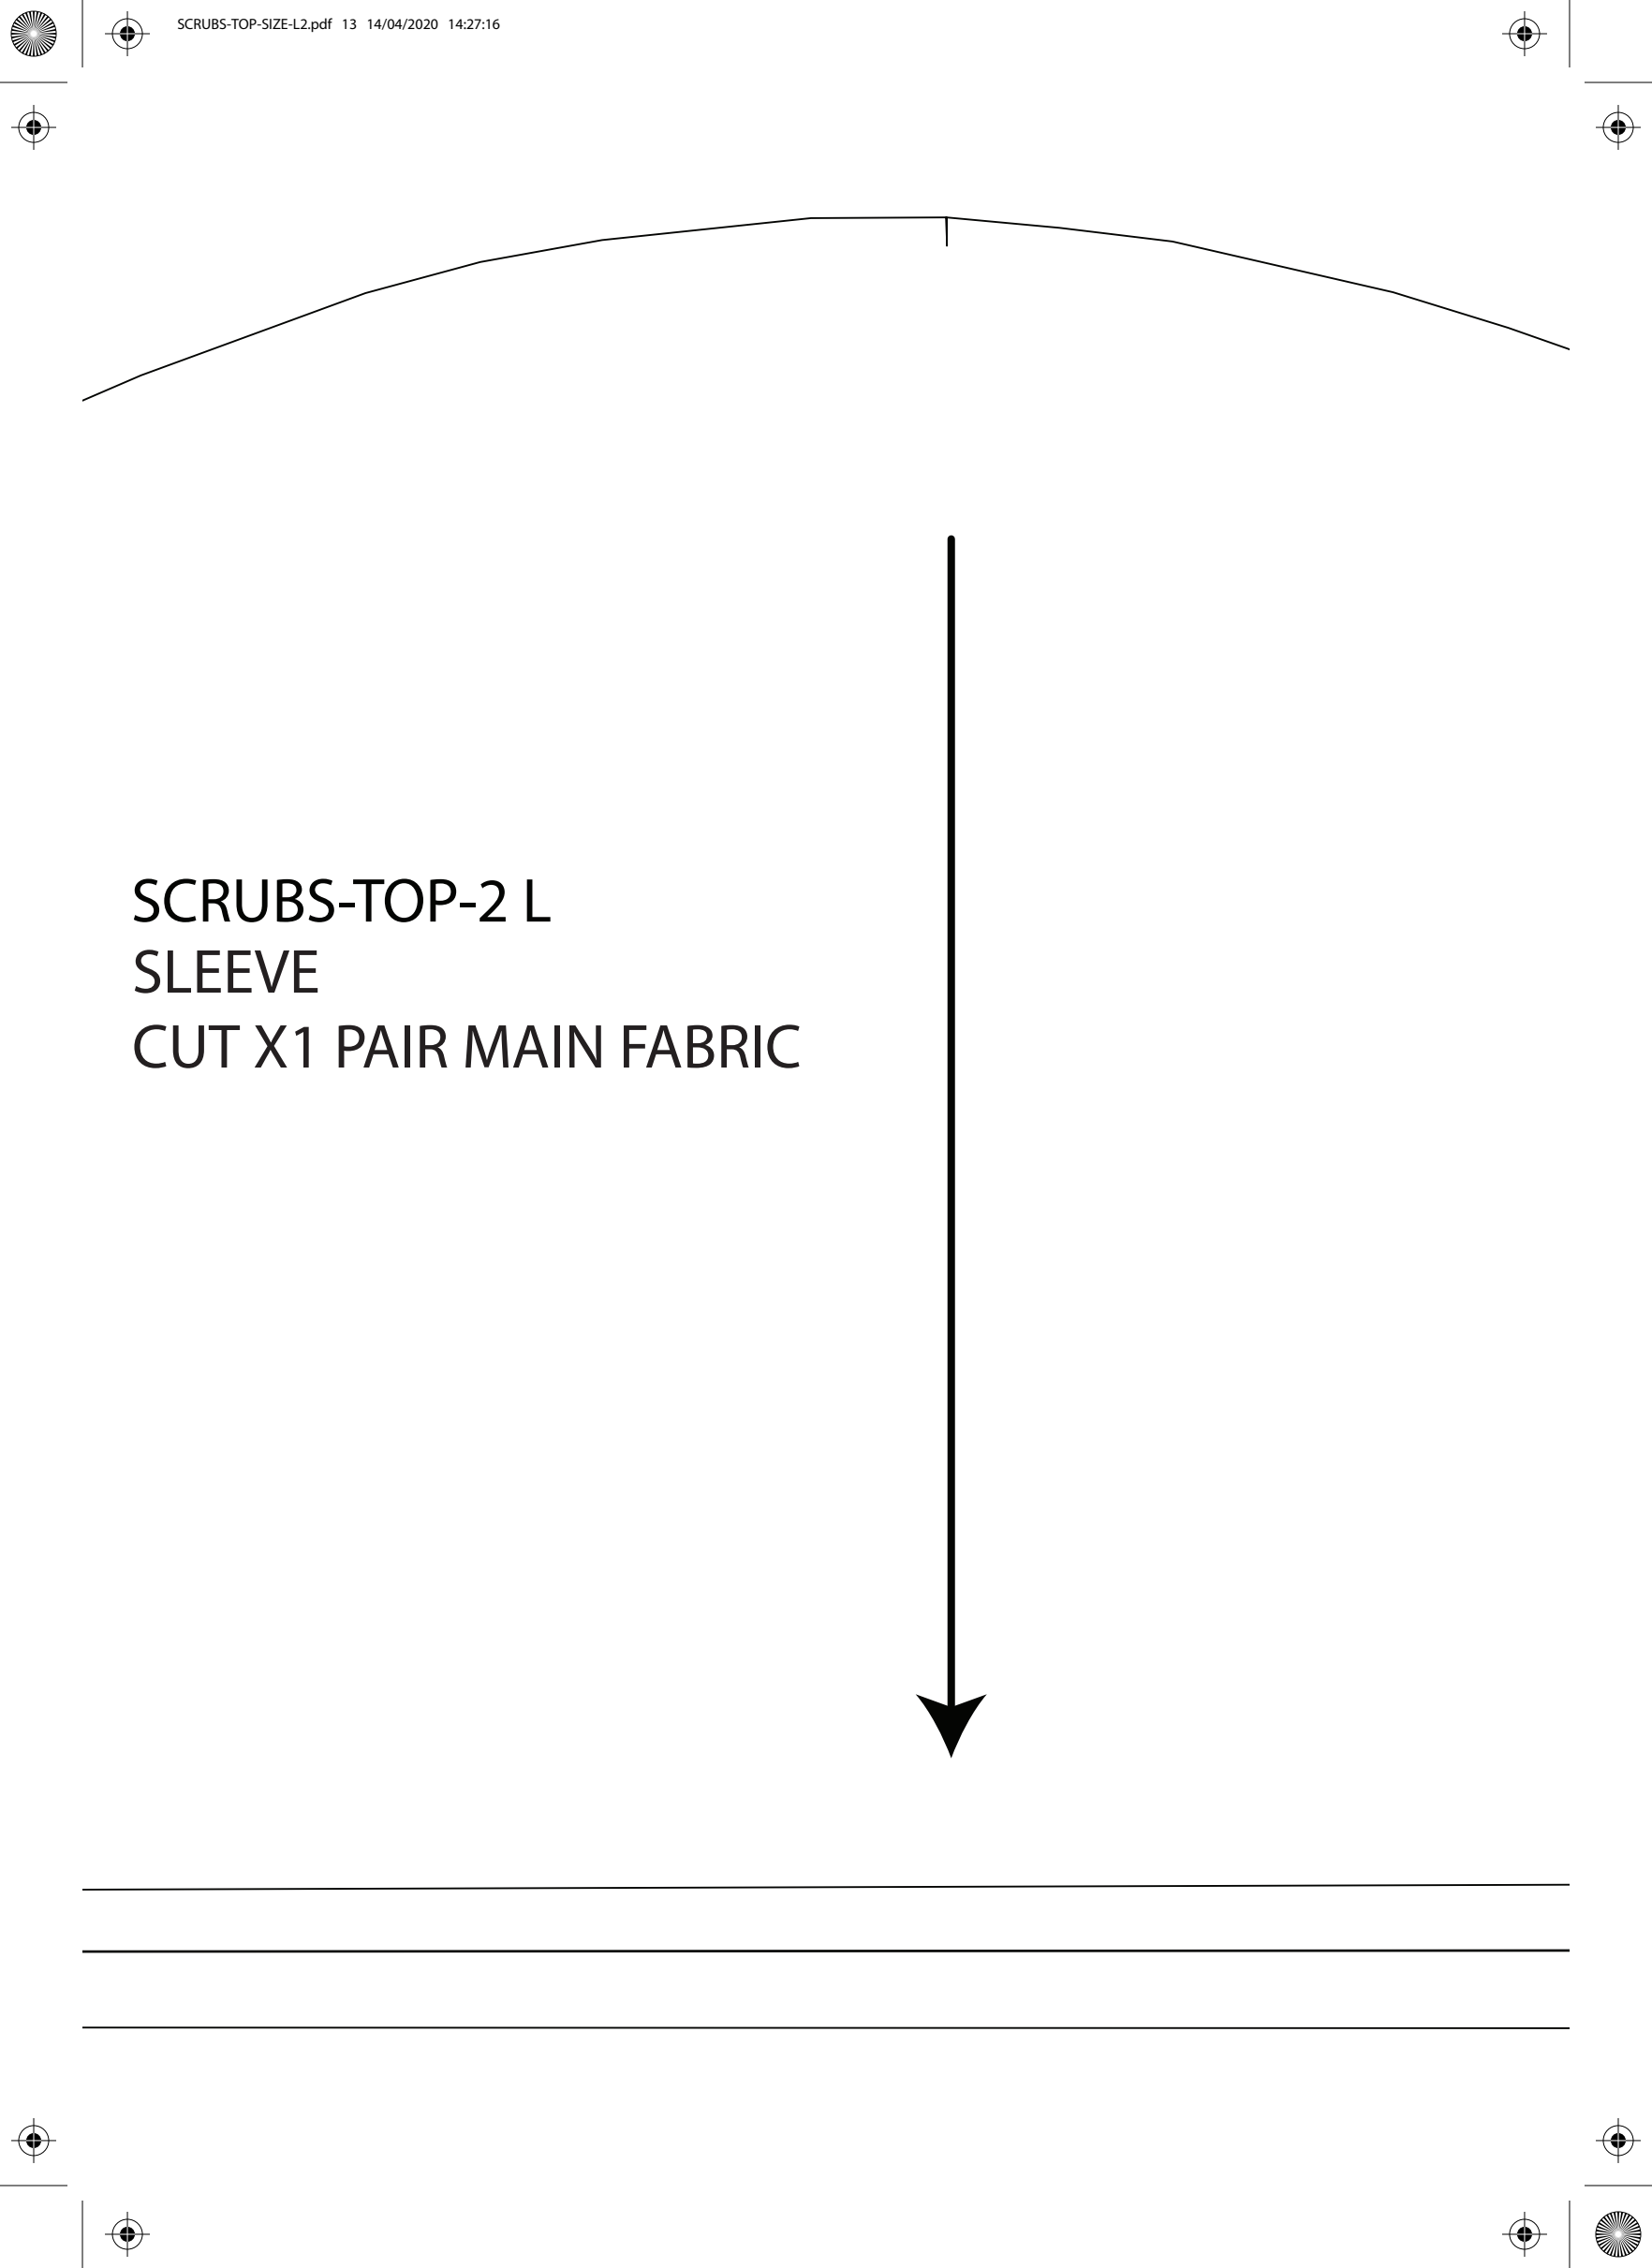

SCRUBS-TOP-2 L
SLEEVE
CUT X1 PAIR MAIN FABRIC

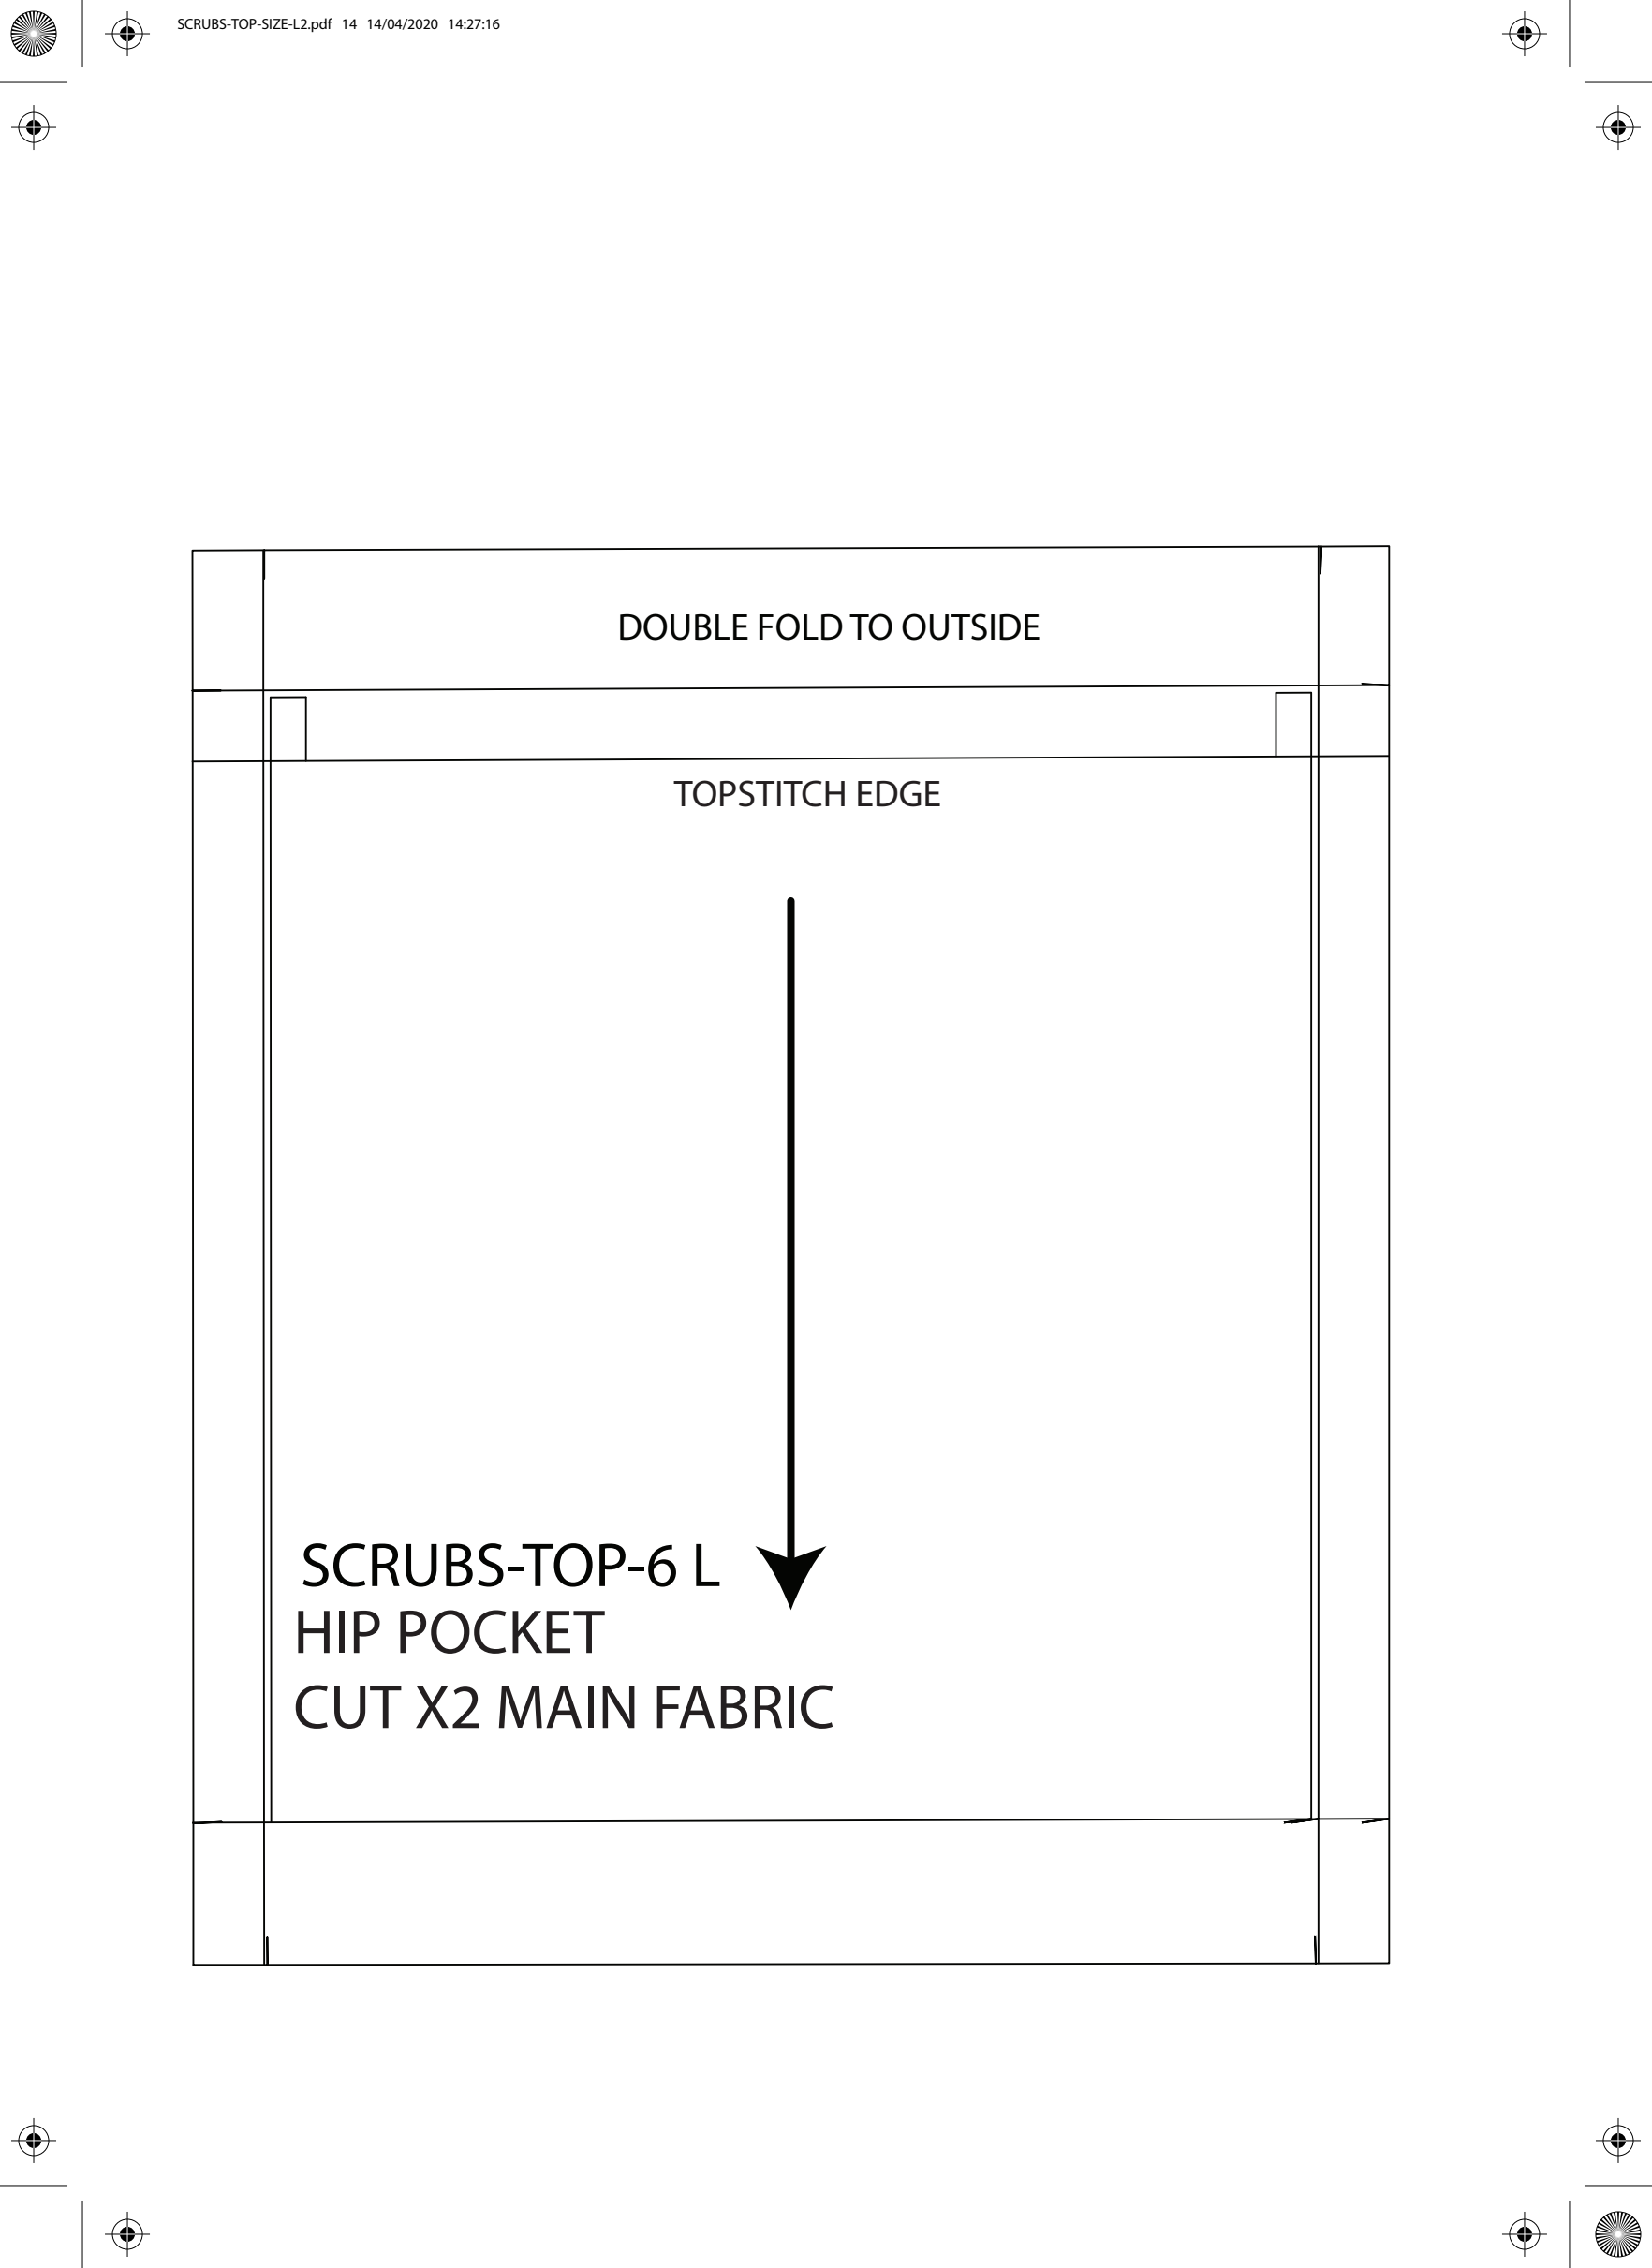



DOUBLE FOLD TO OUTSIDE


TOPSTITCH EDGE


SCRUBS-TOP-6 L
HIP POCKET
CUT X2 MAIN FABRIC


SCRUBS-TOP-7 L
BACK NECK BIAS BINDING
CUT X1 MAIN / CONTRAST FABRIC

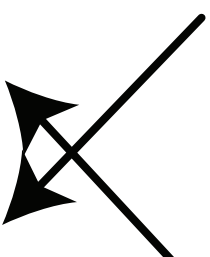

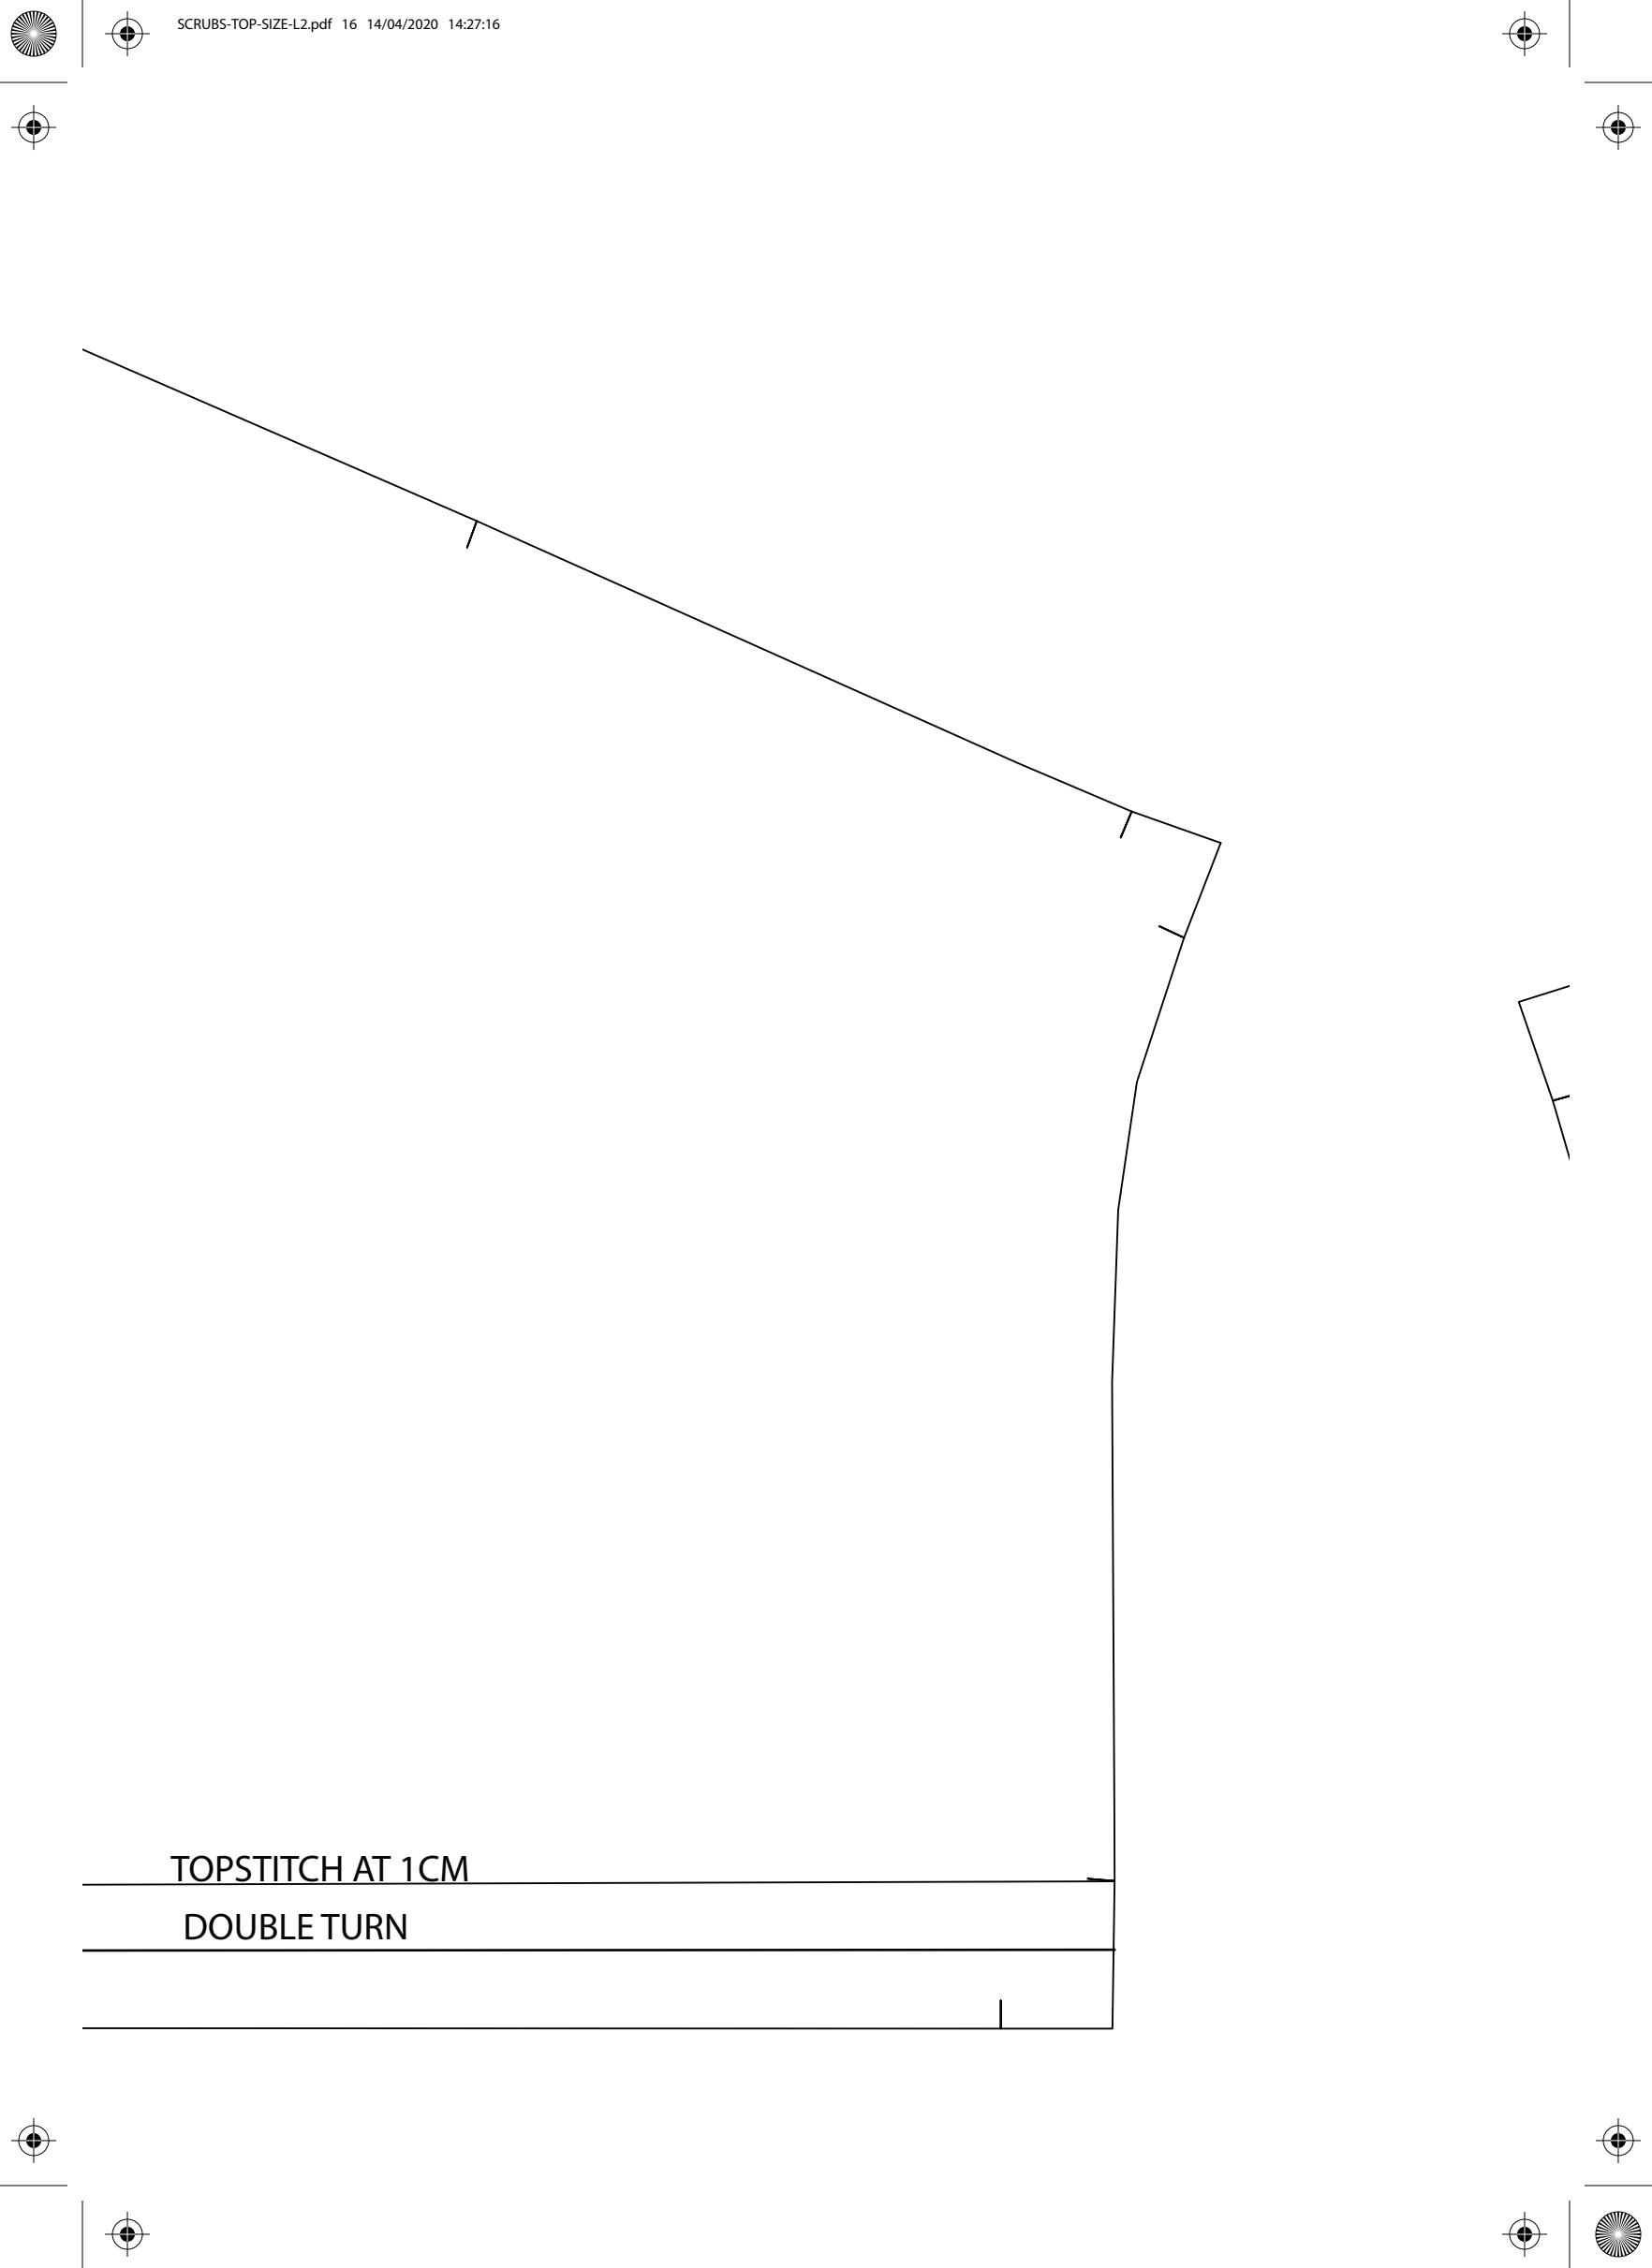

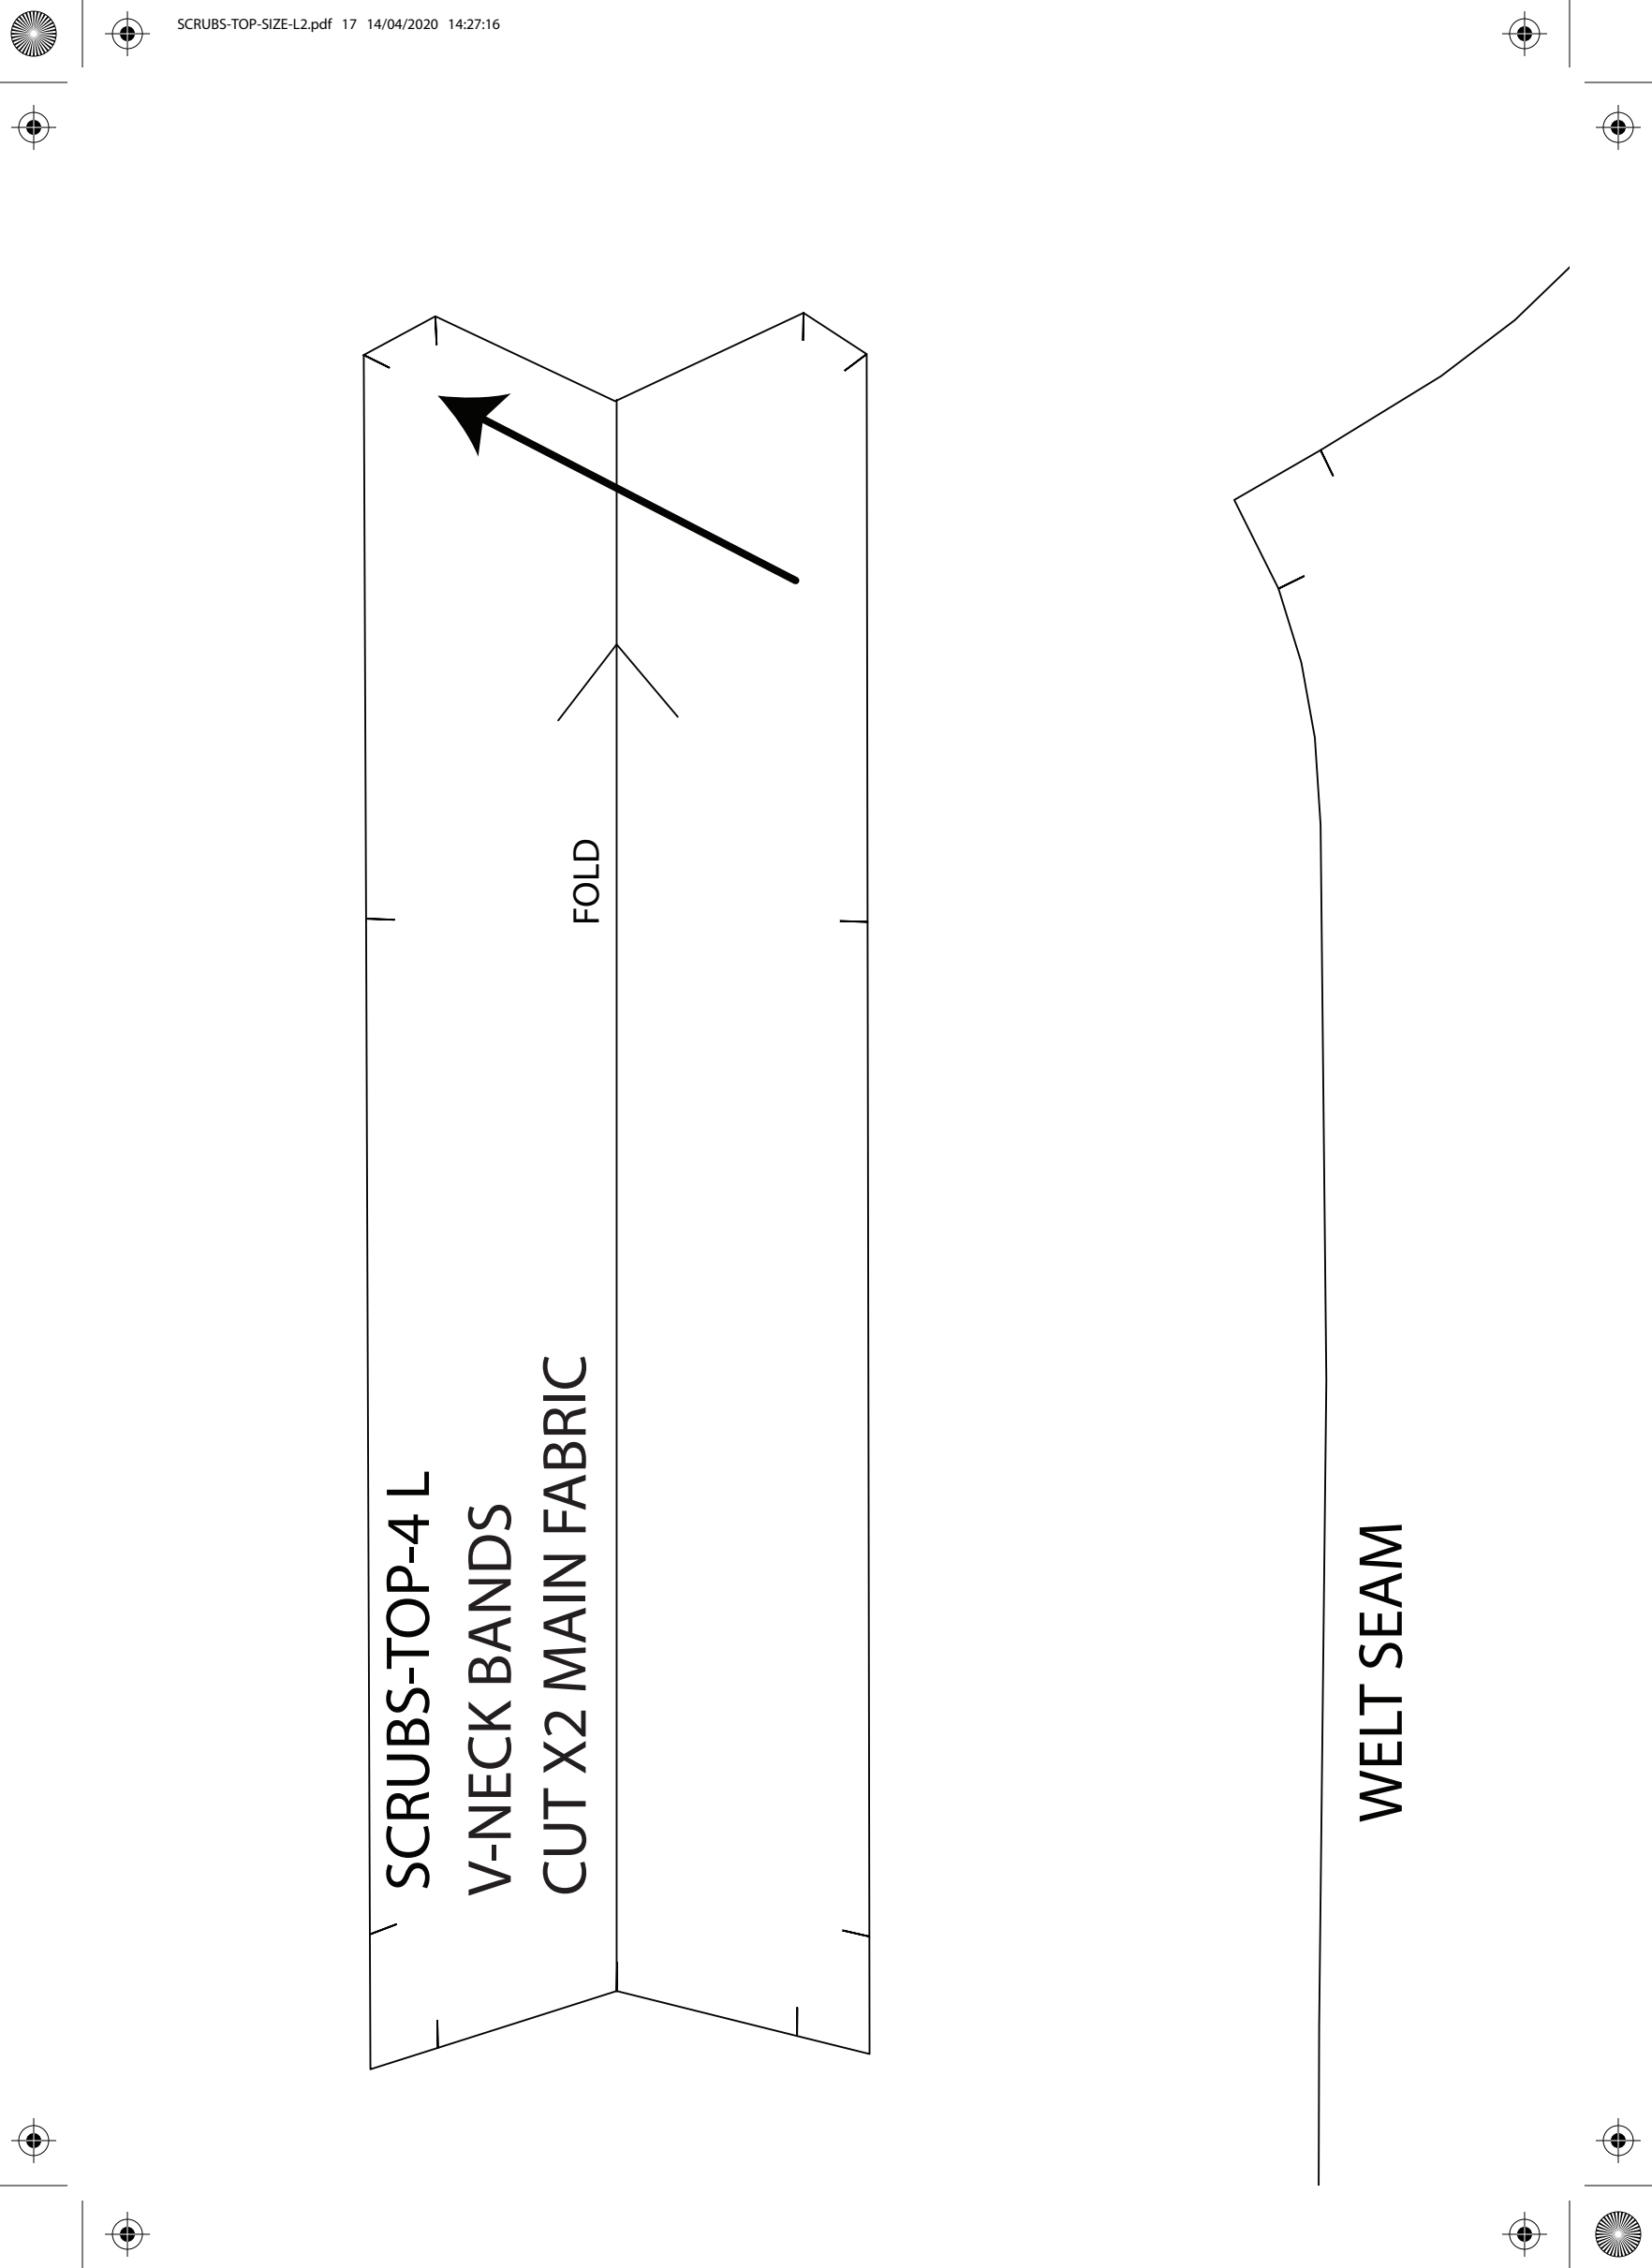

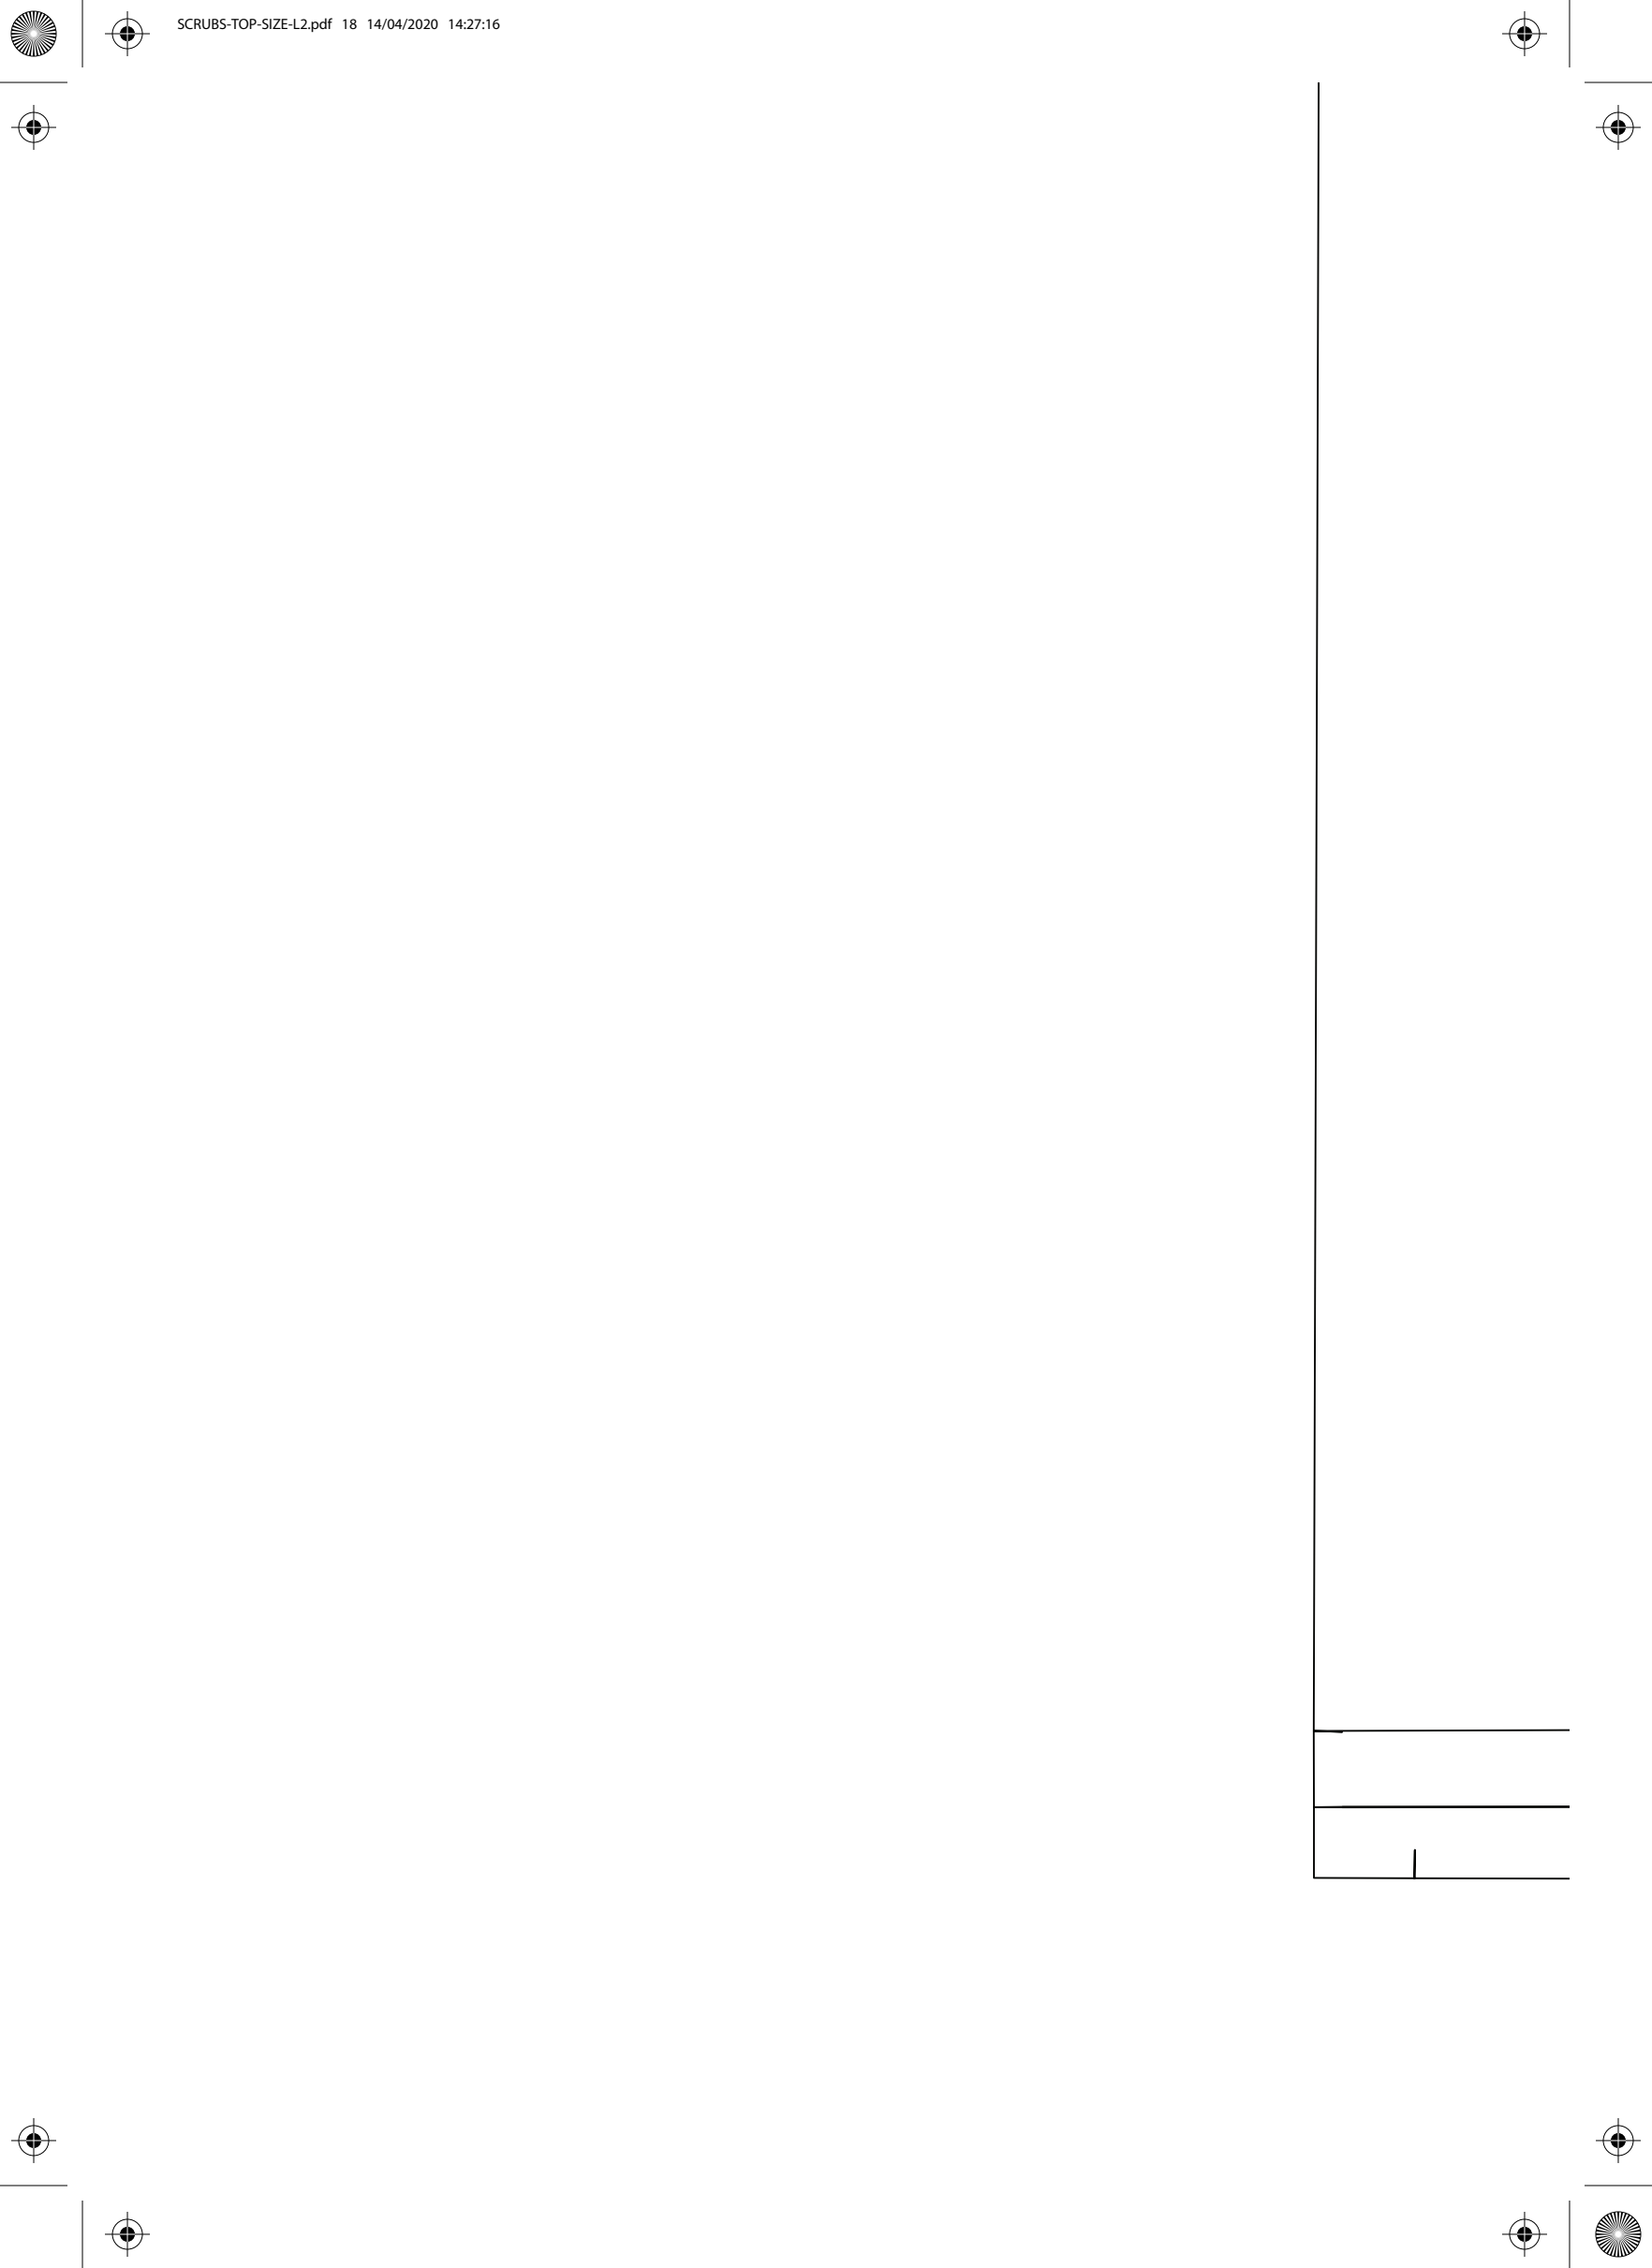

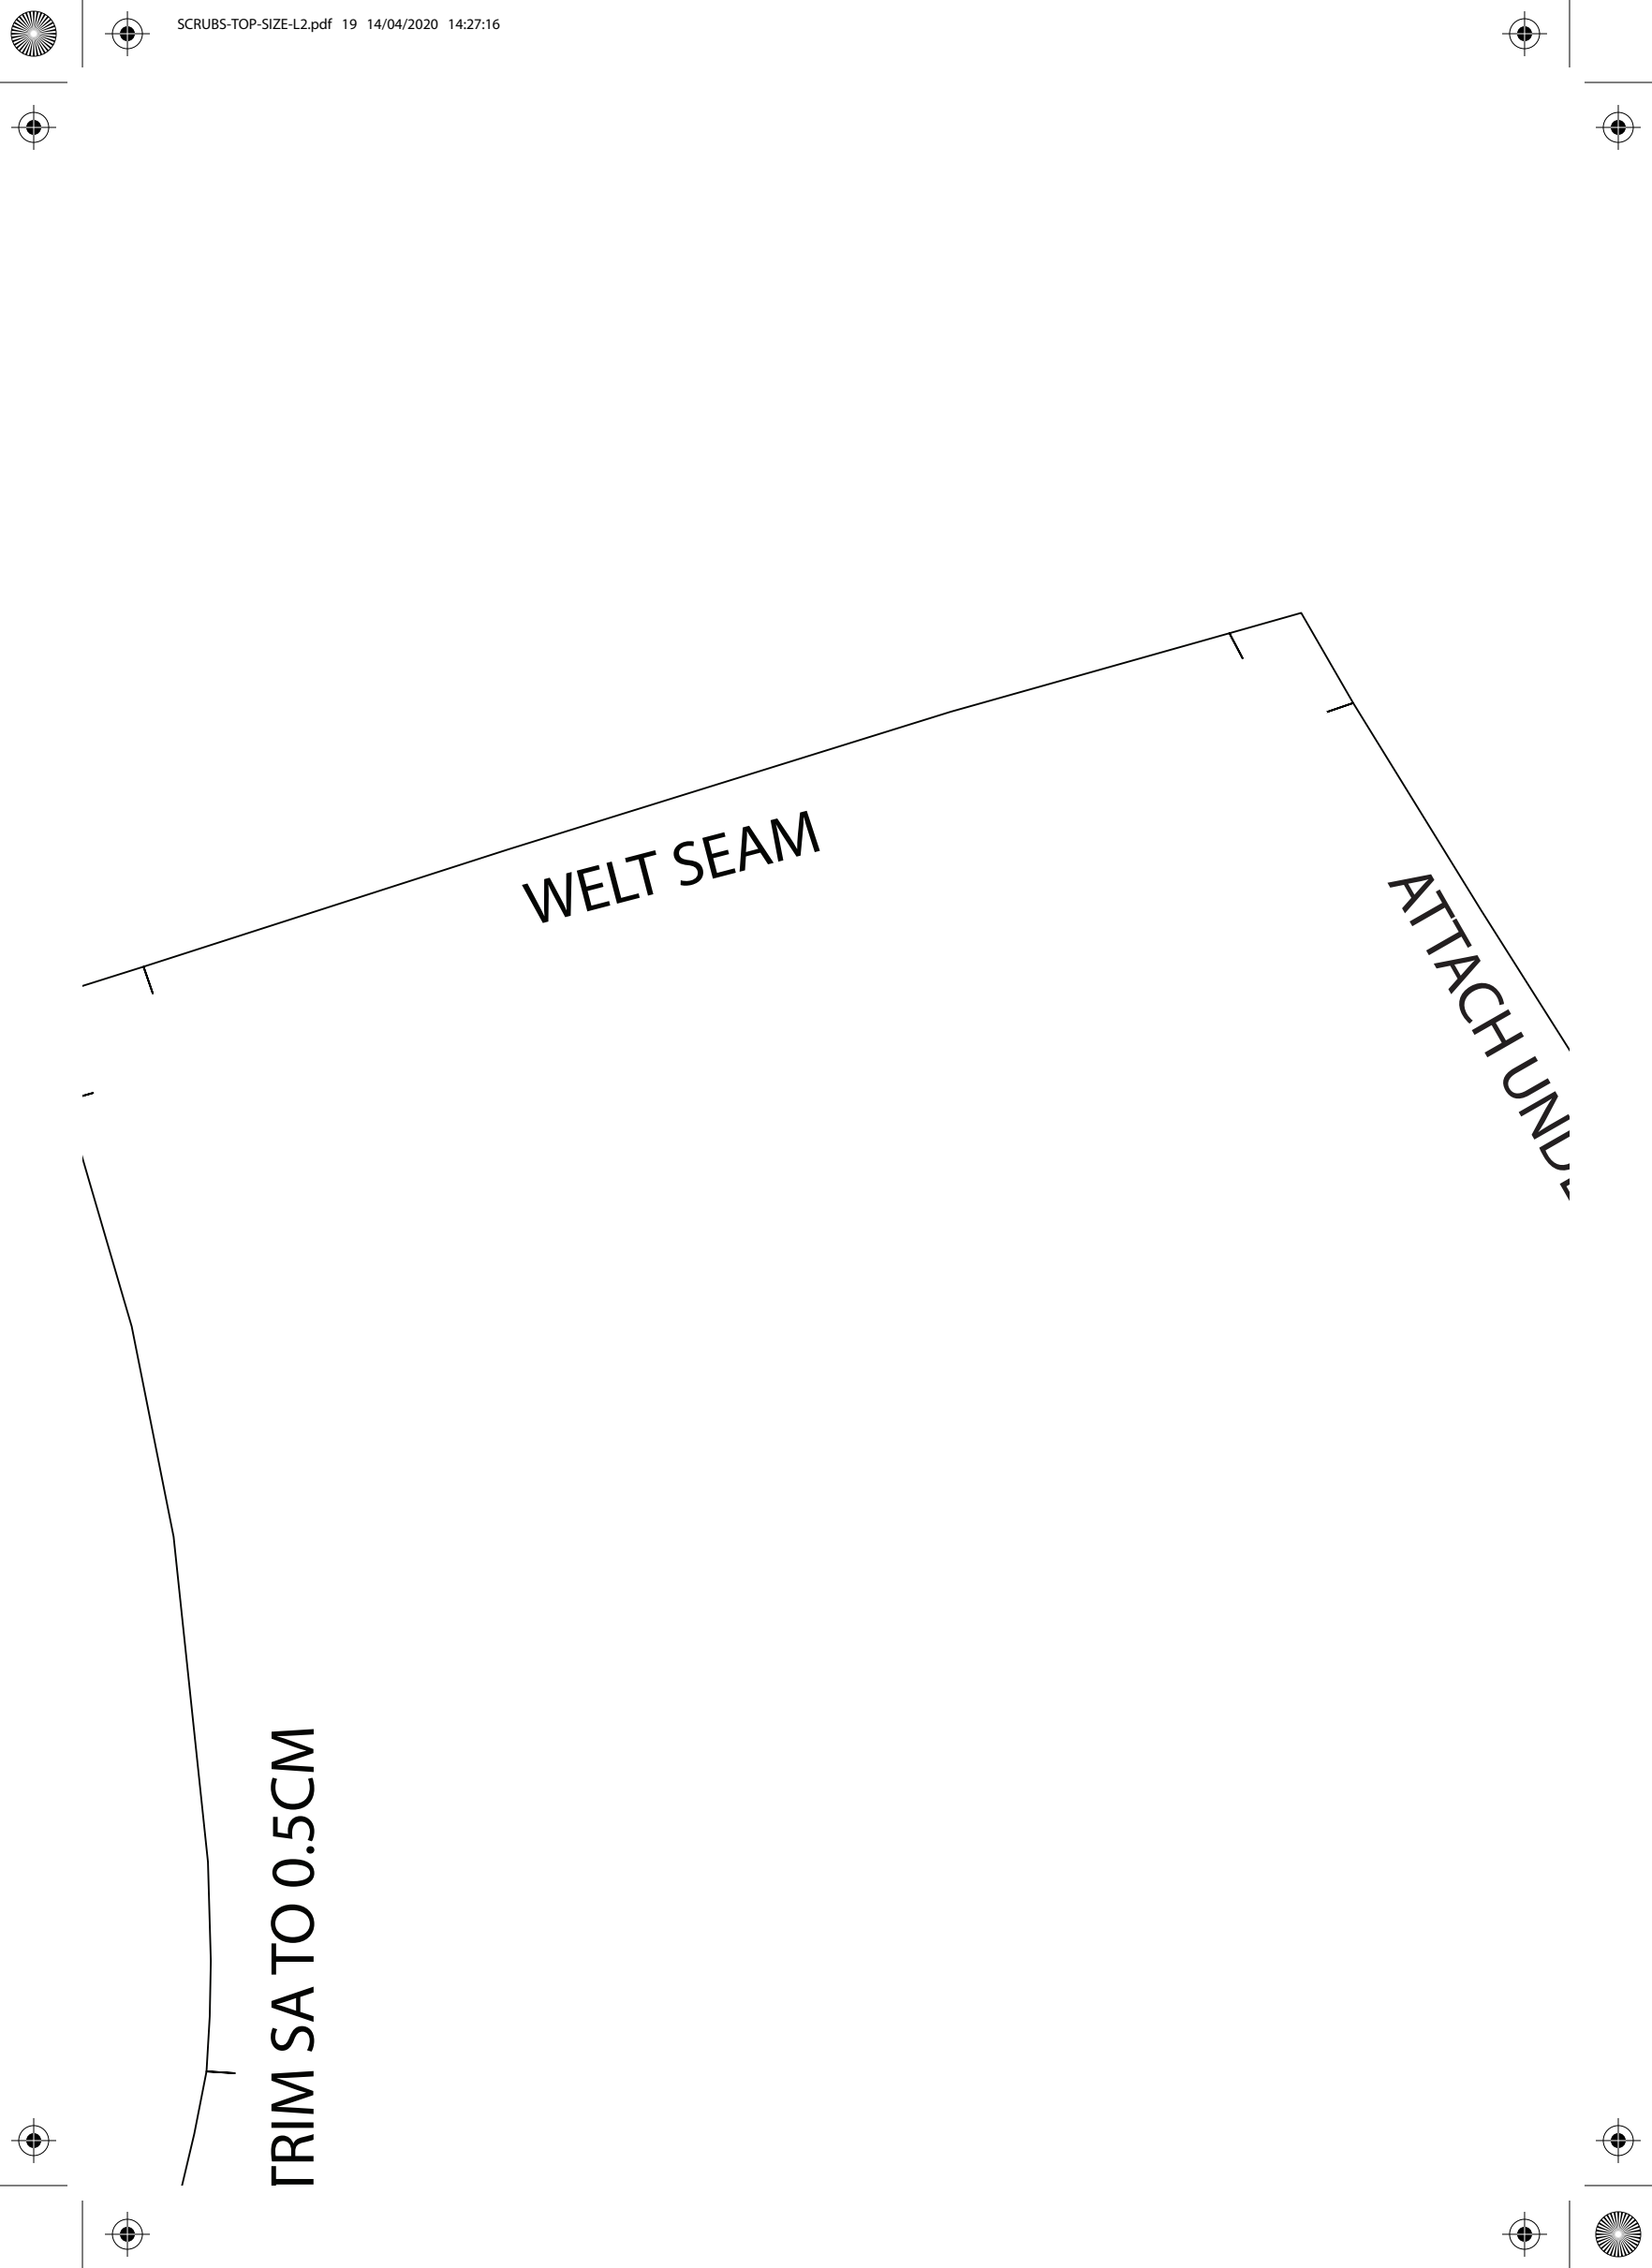

WELT SEAM


ATTACH UNDER

TRIM SA TO 0.5CM

TRIM

POCKET POSITION




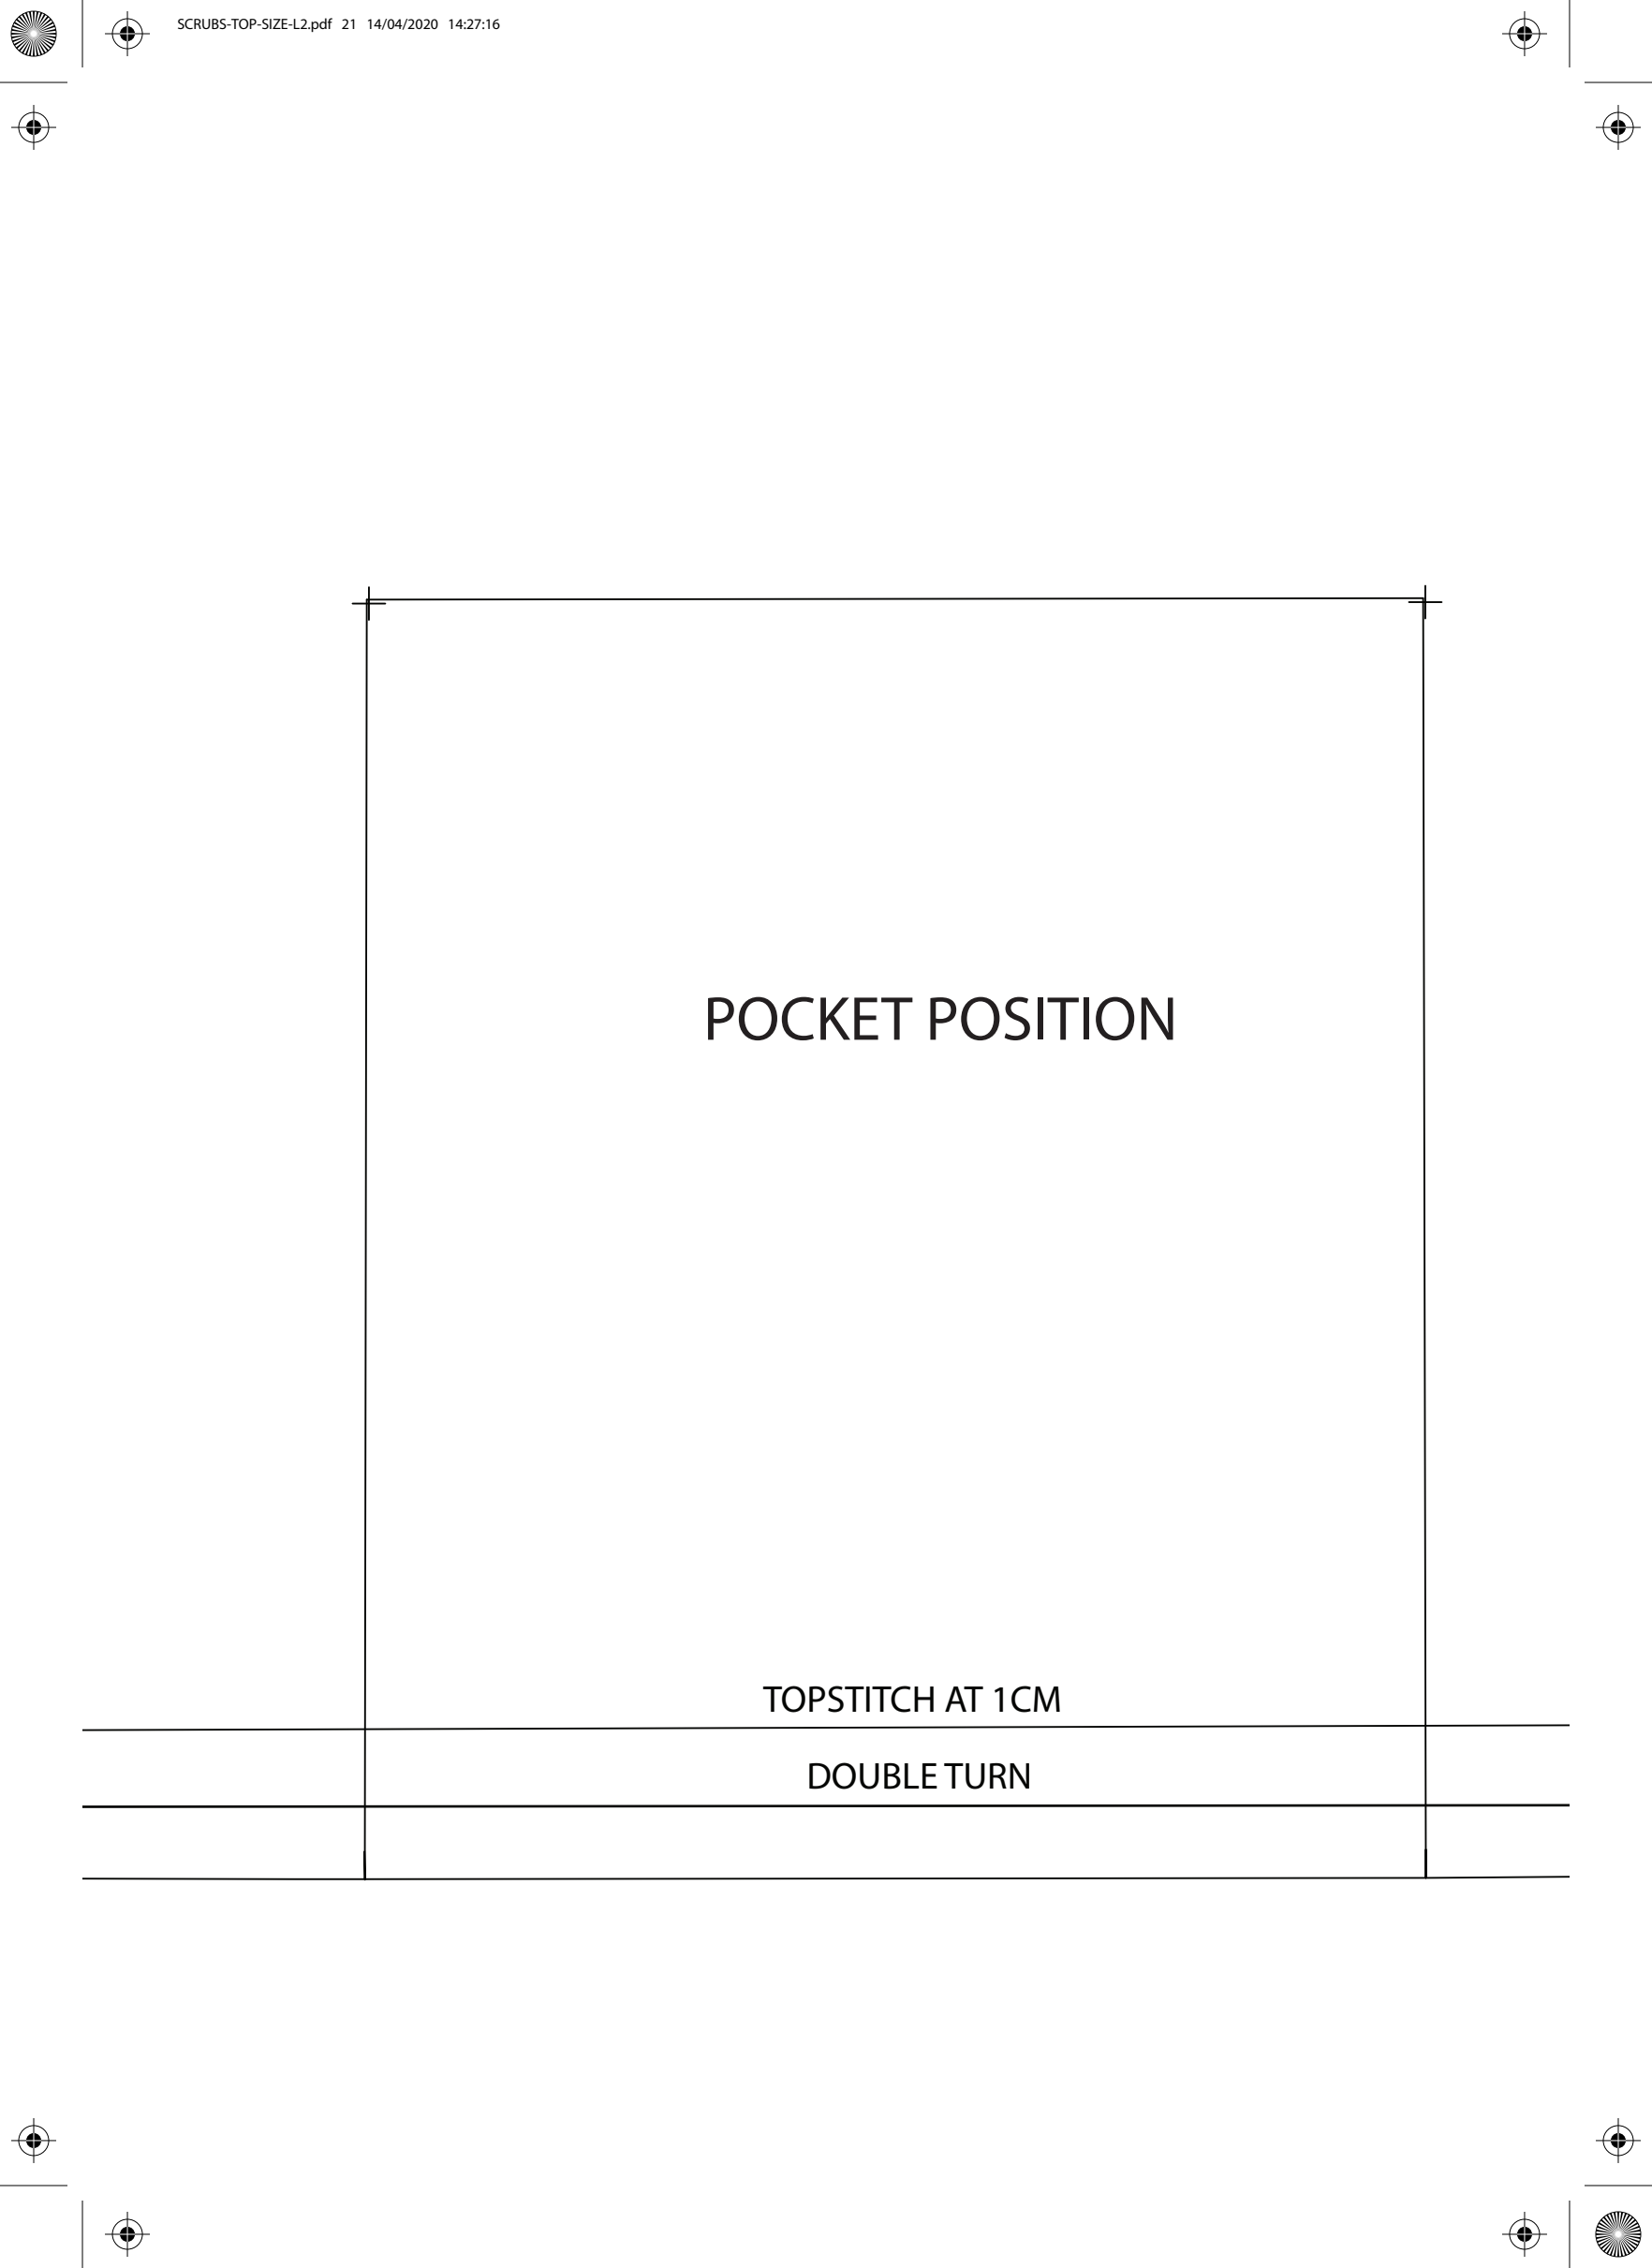


POCKET POSITION

TOPSTITCH AT 1CM


DOUBLE TURN

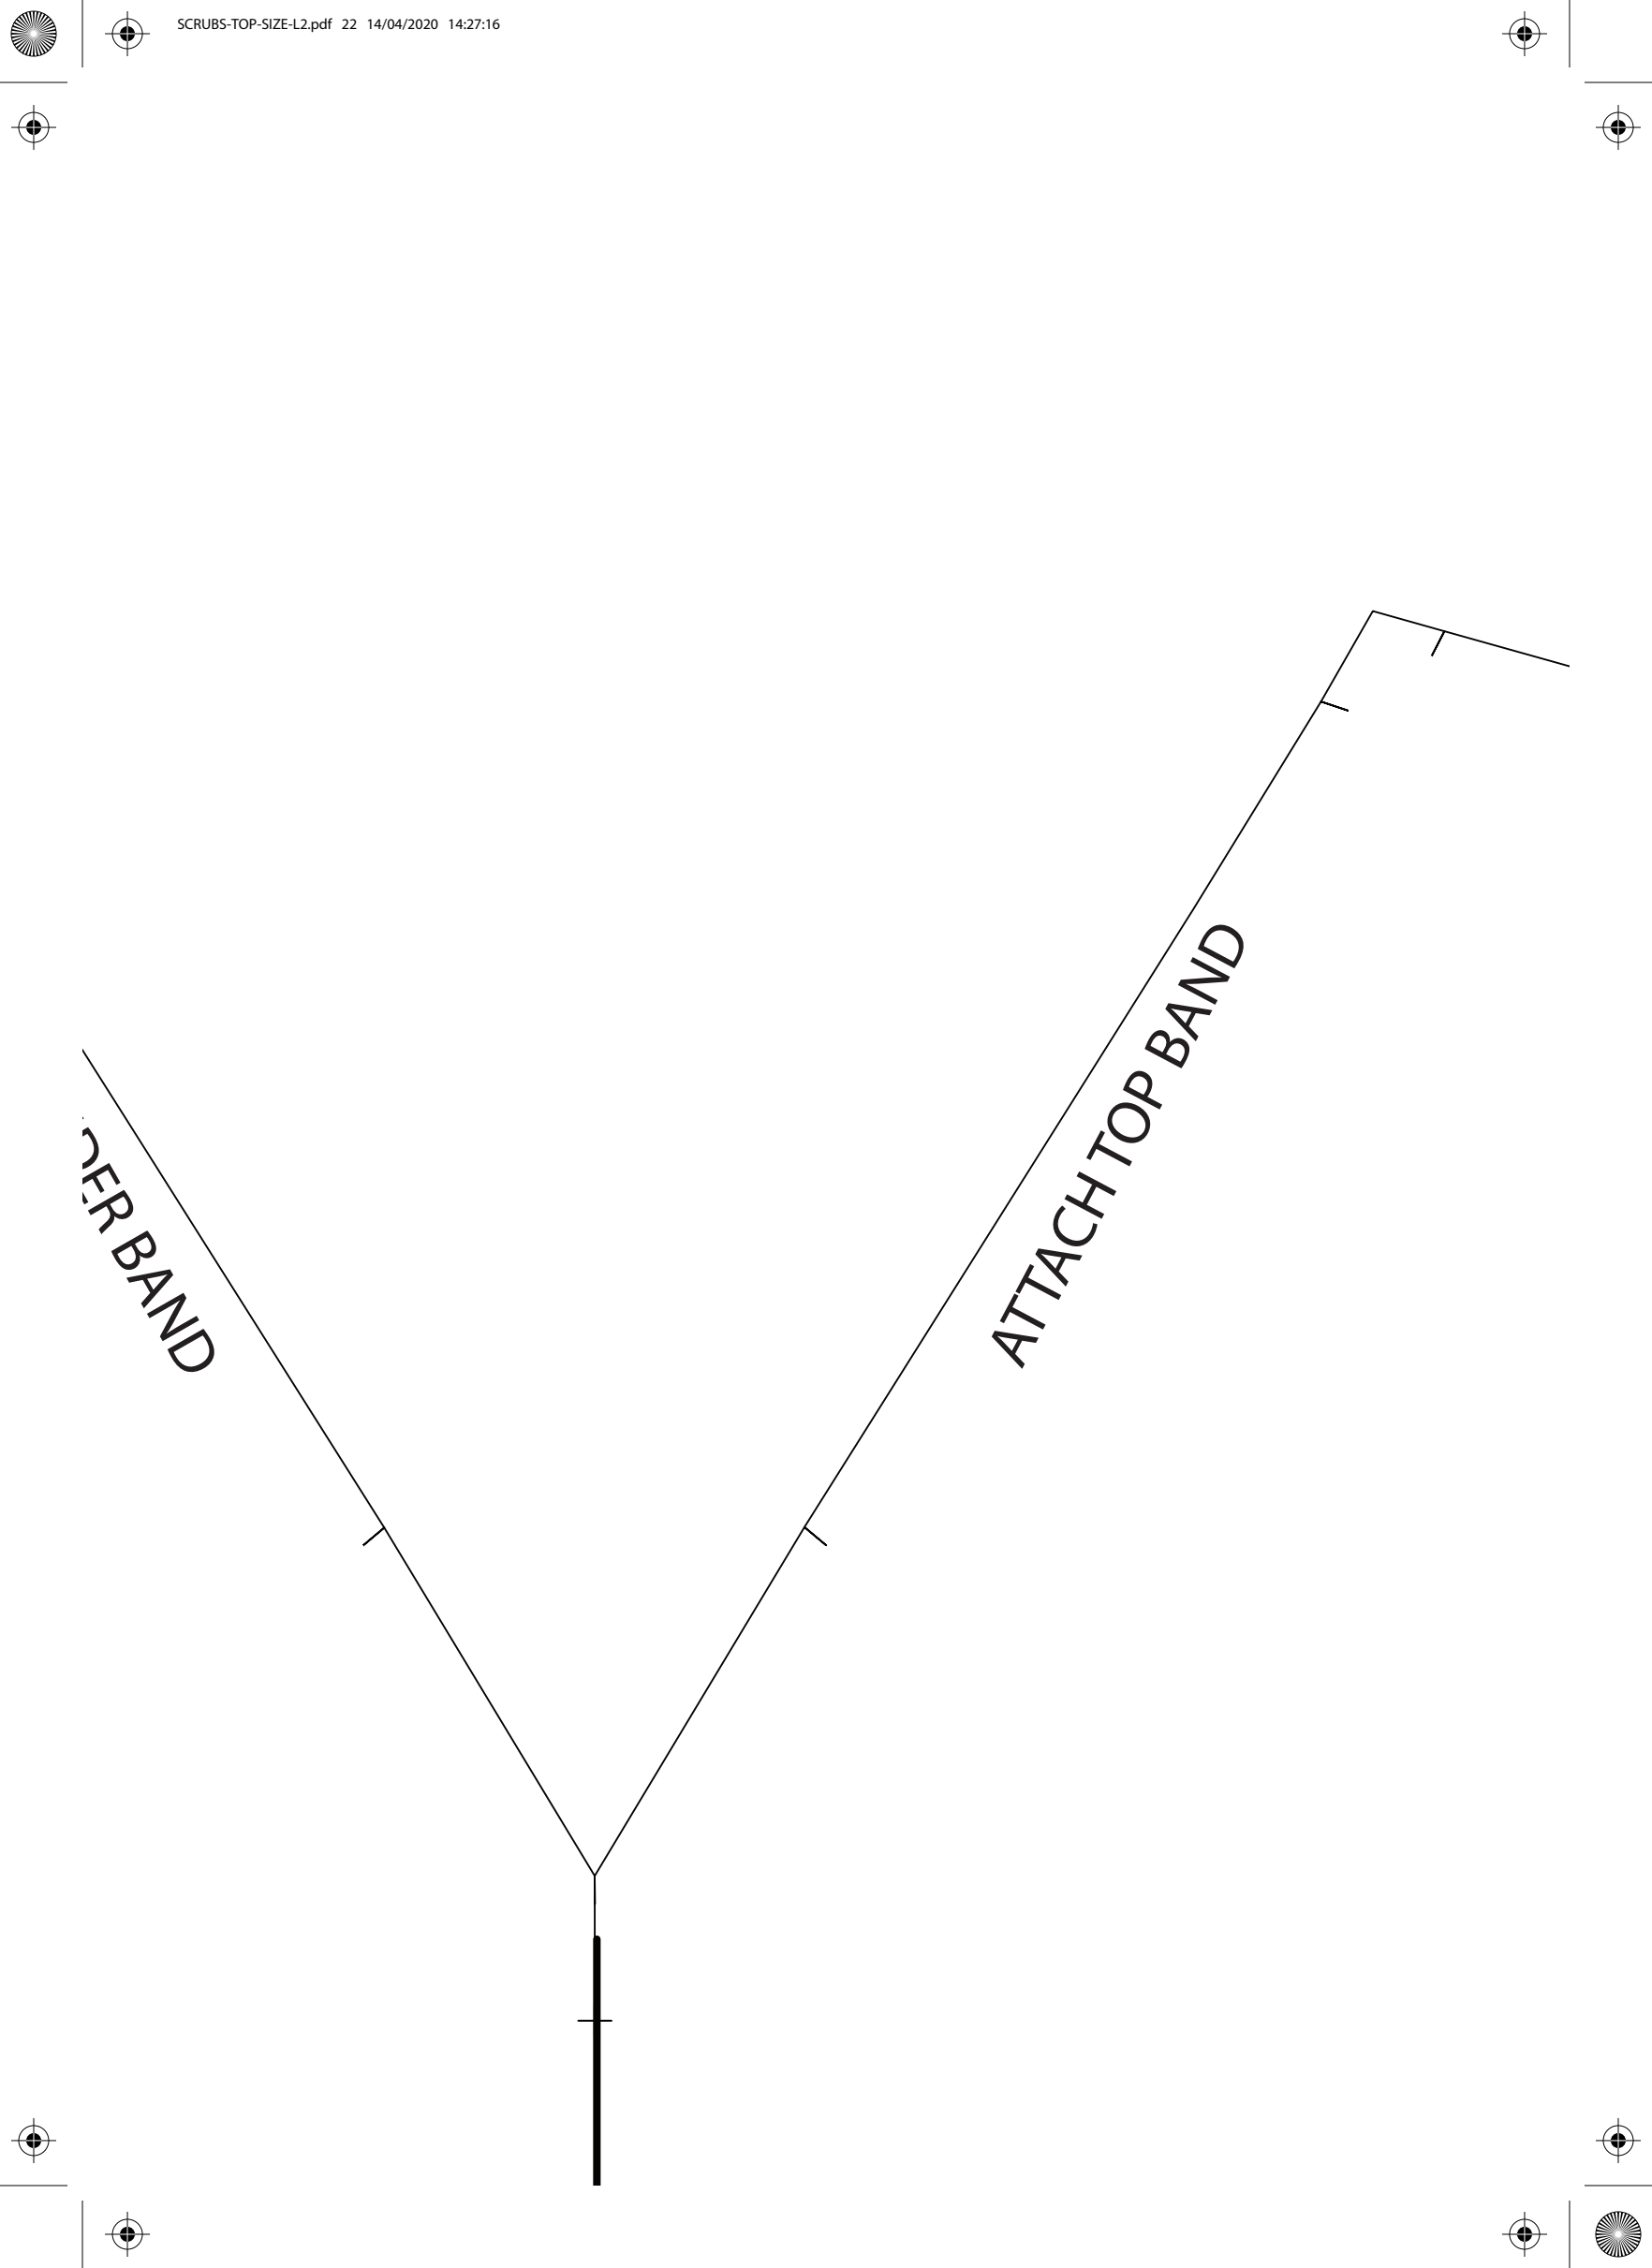


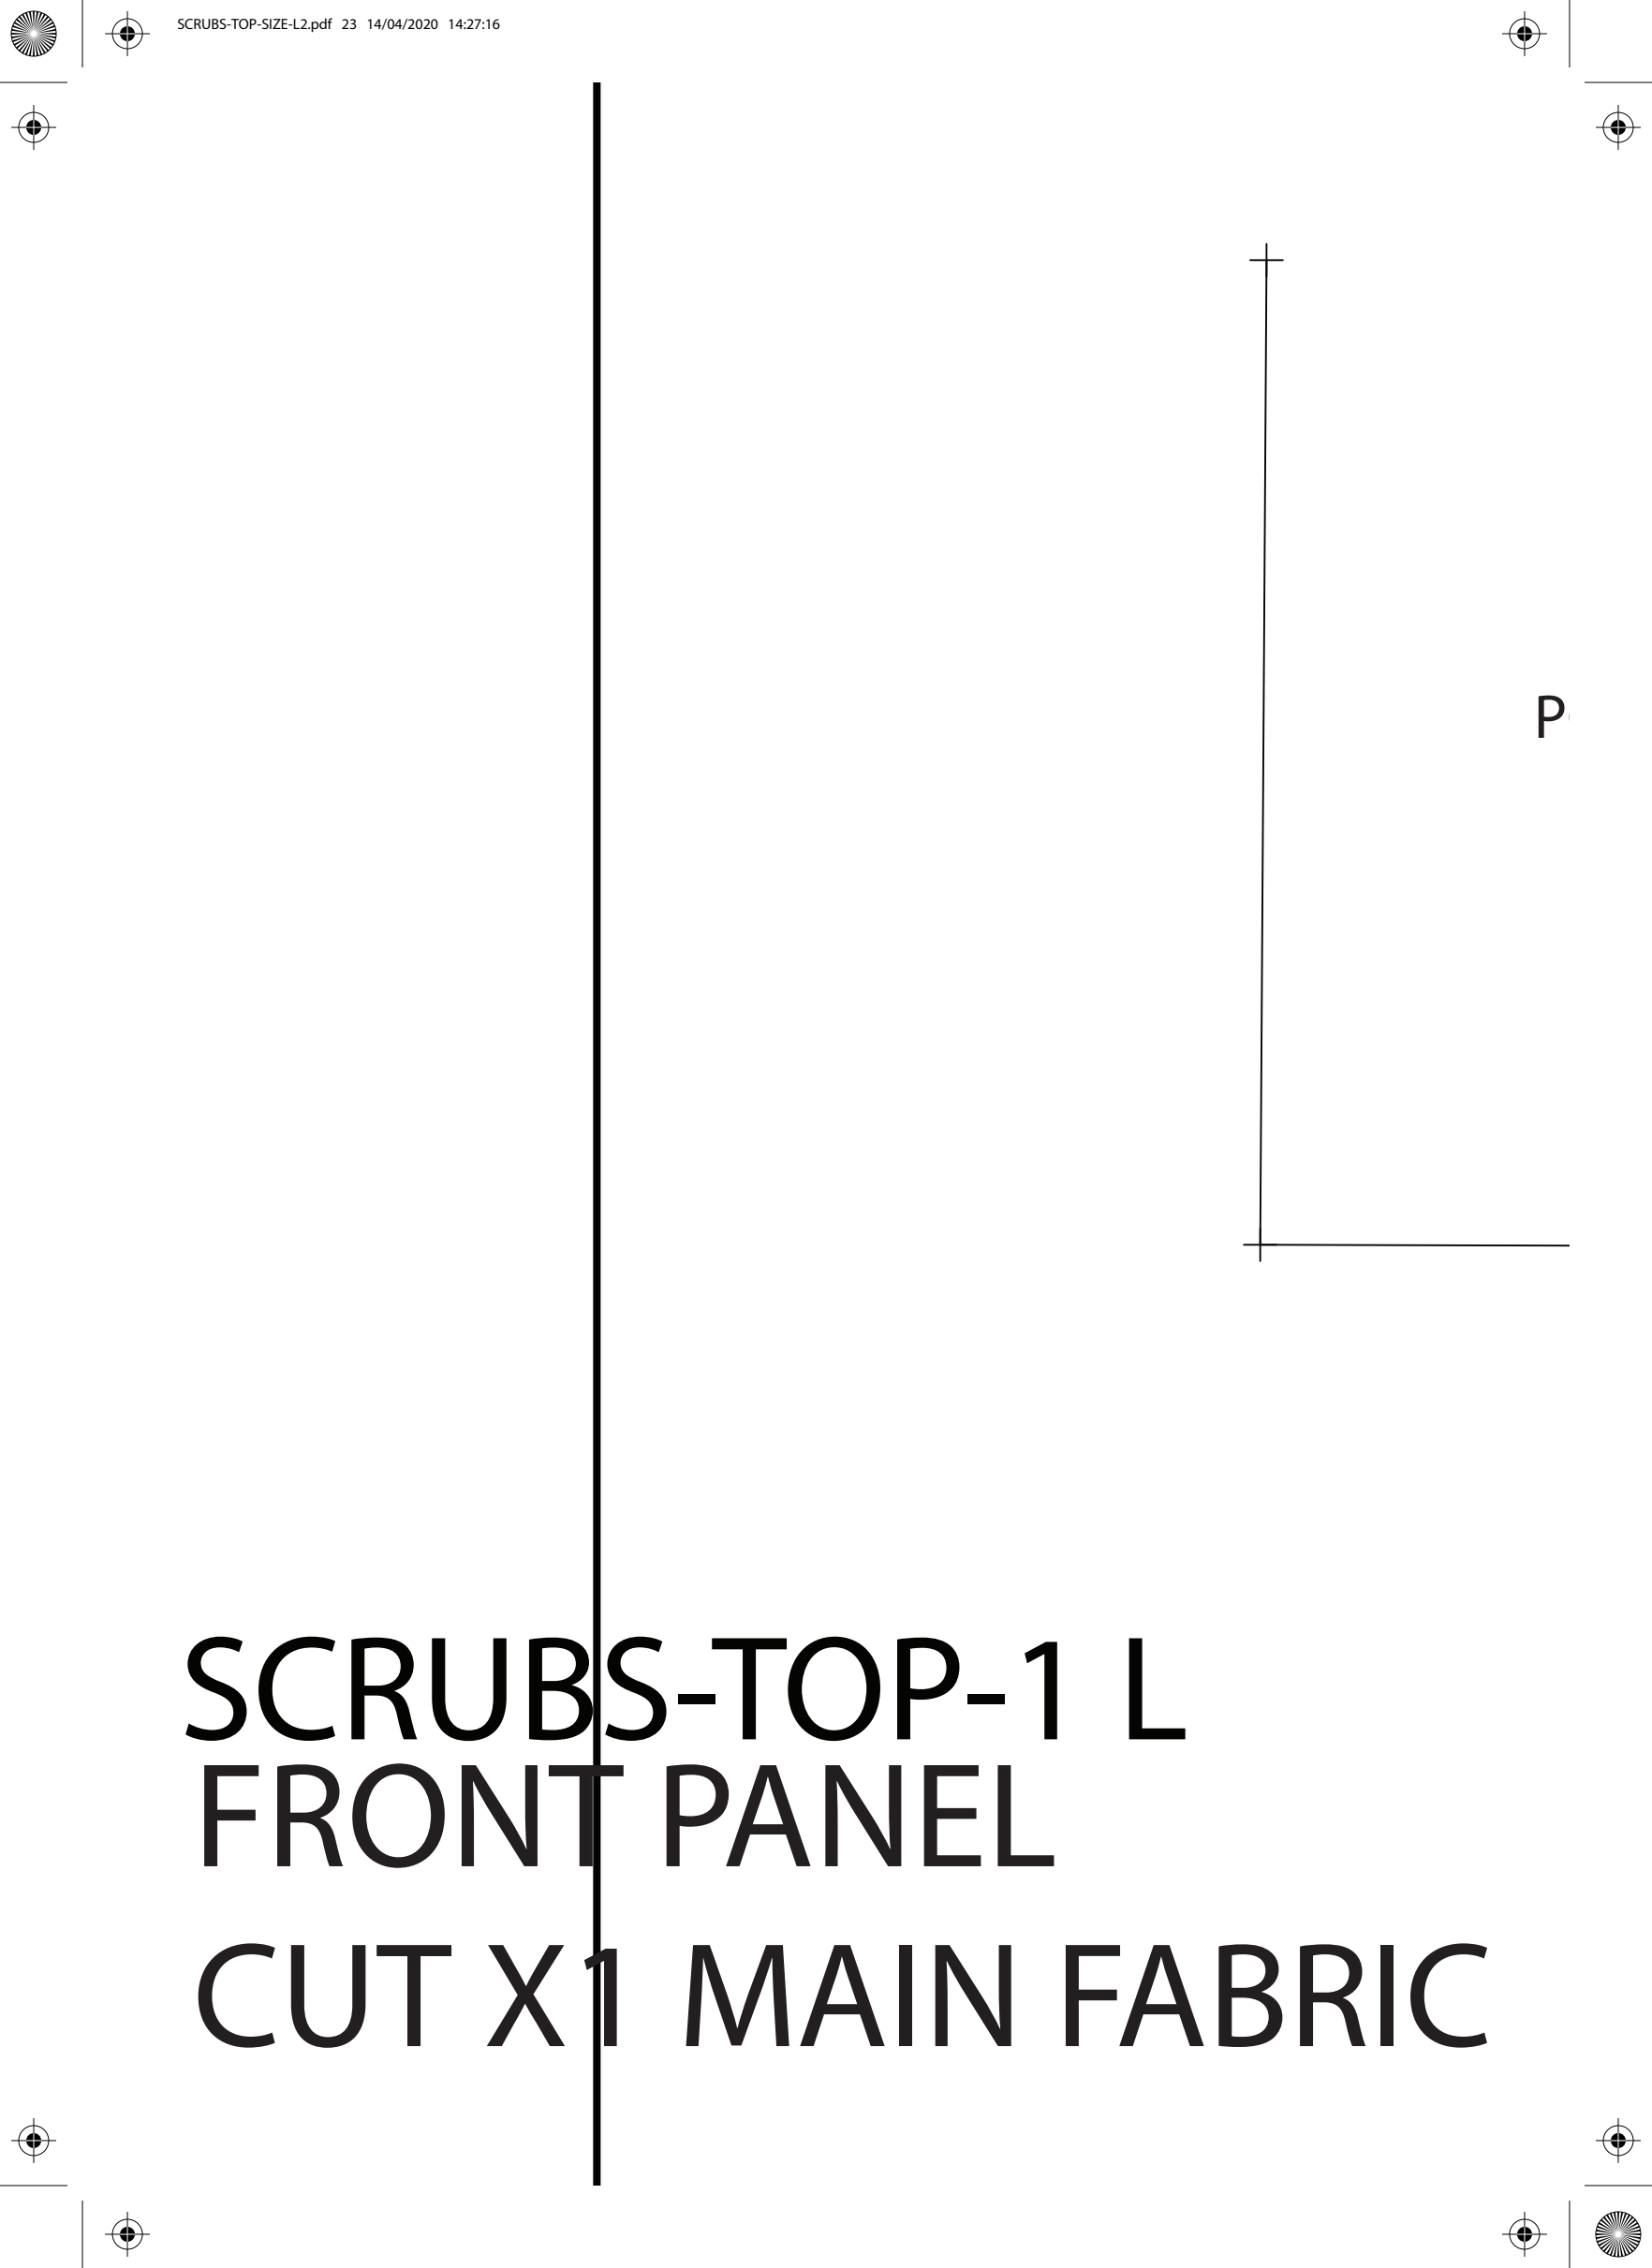

SCRUBS-TOP-1 L
FRONT PANEL


CUT X1 MAIN FABRIC

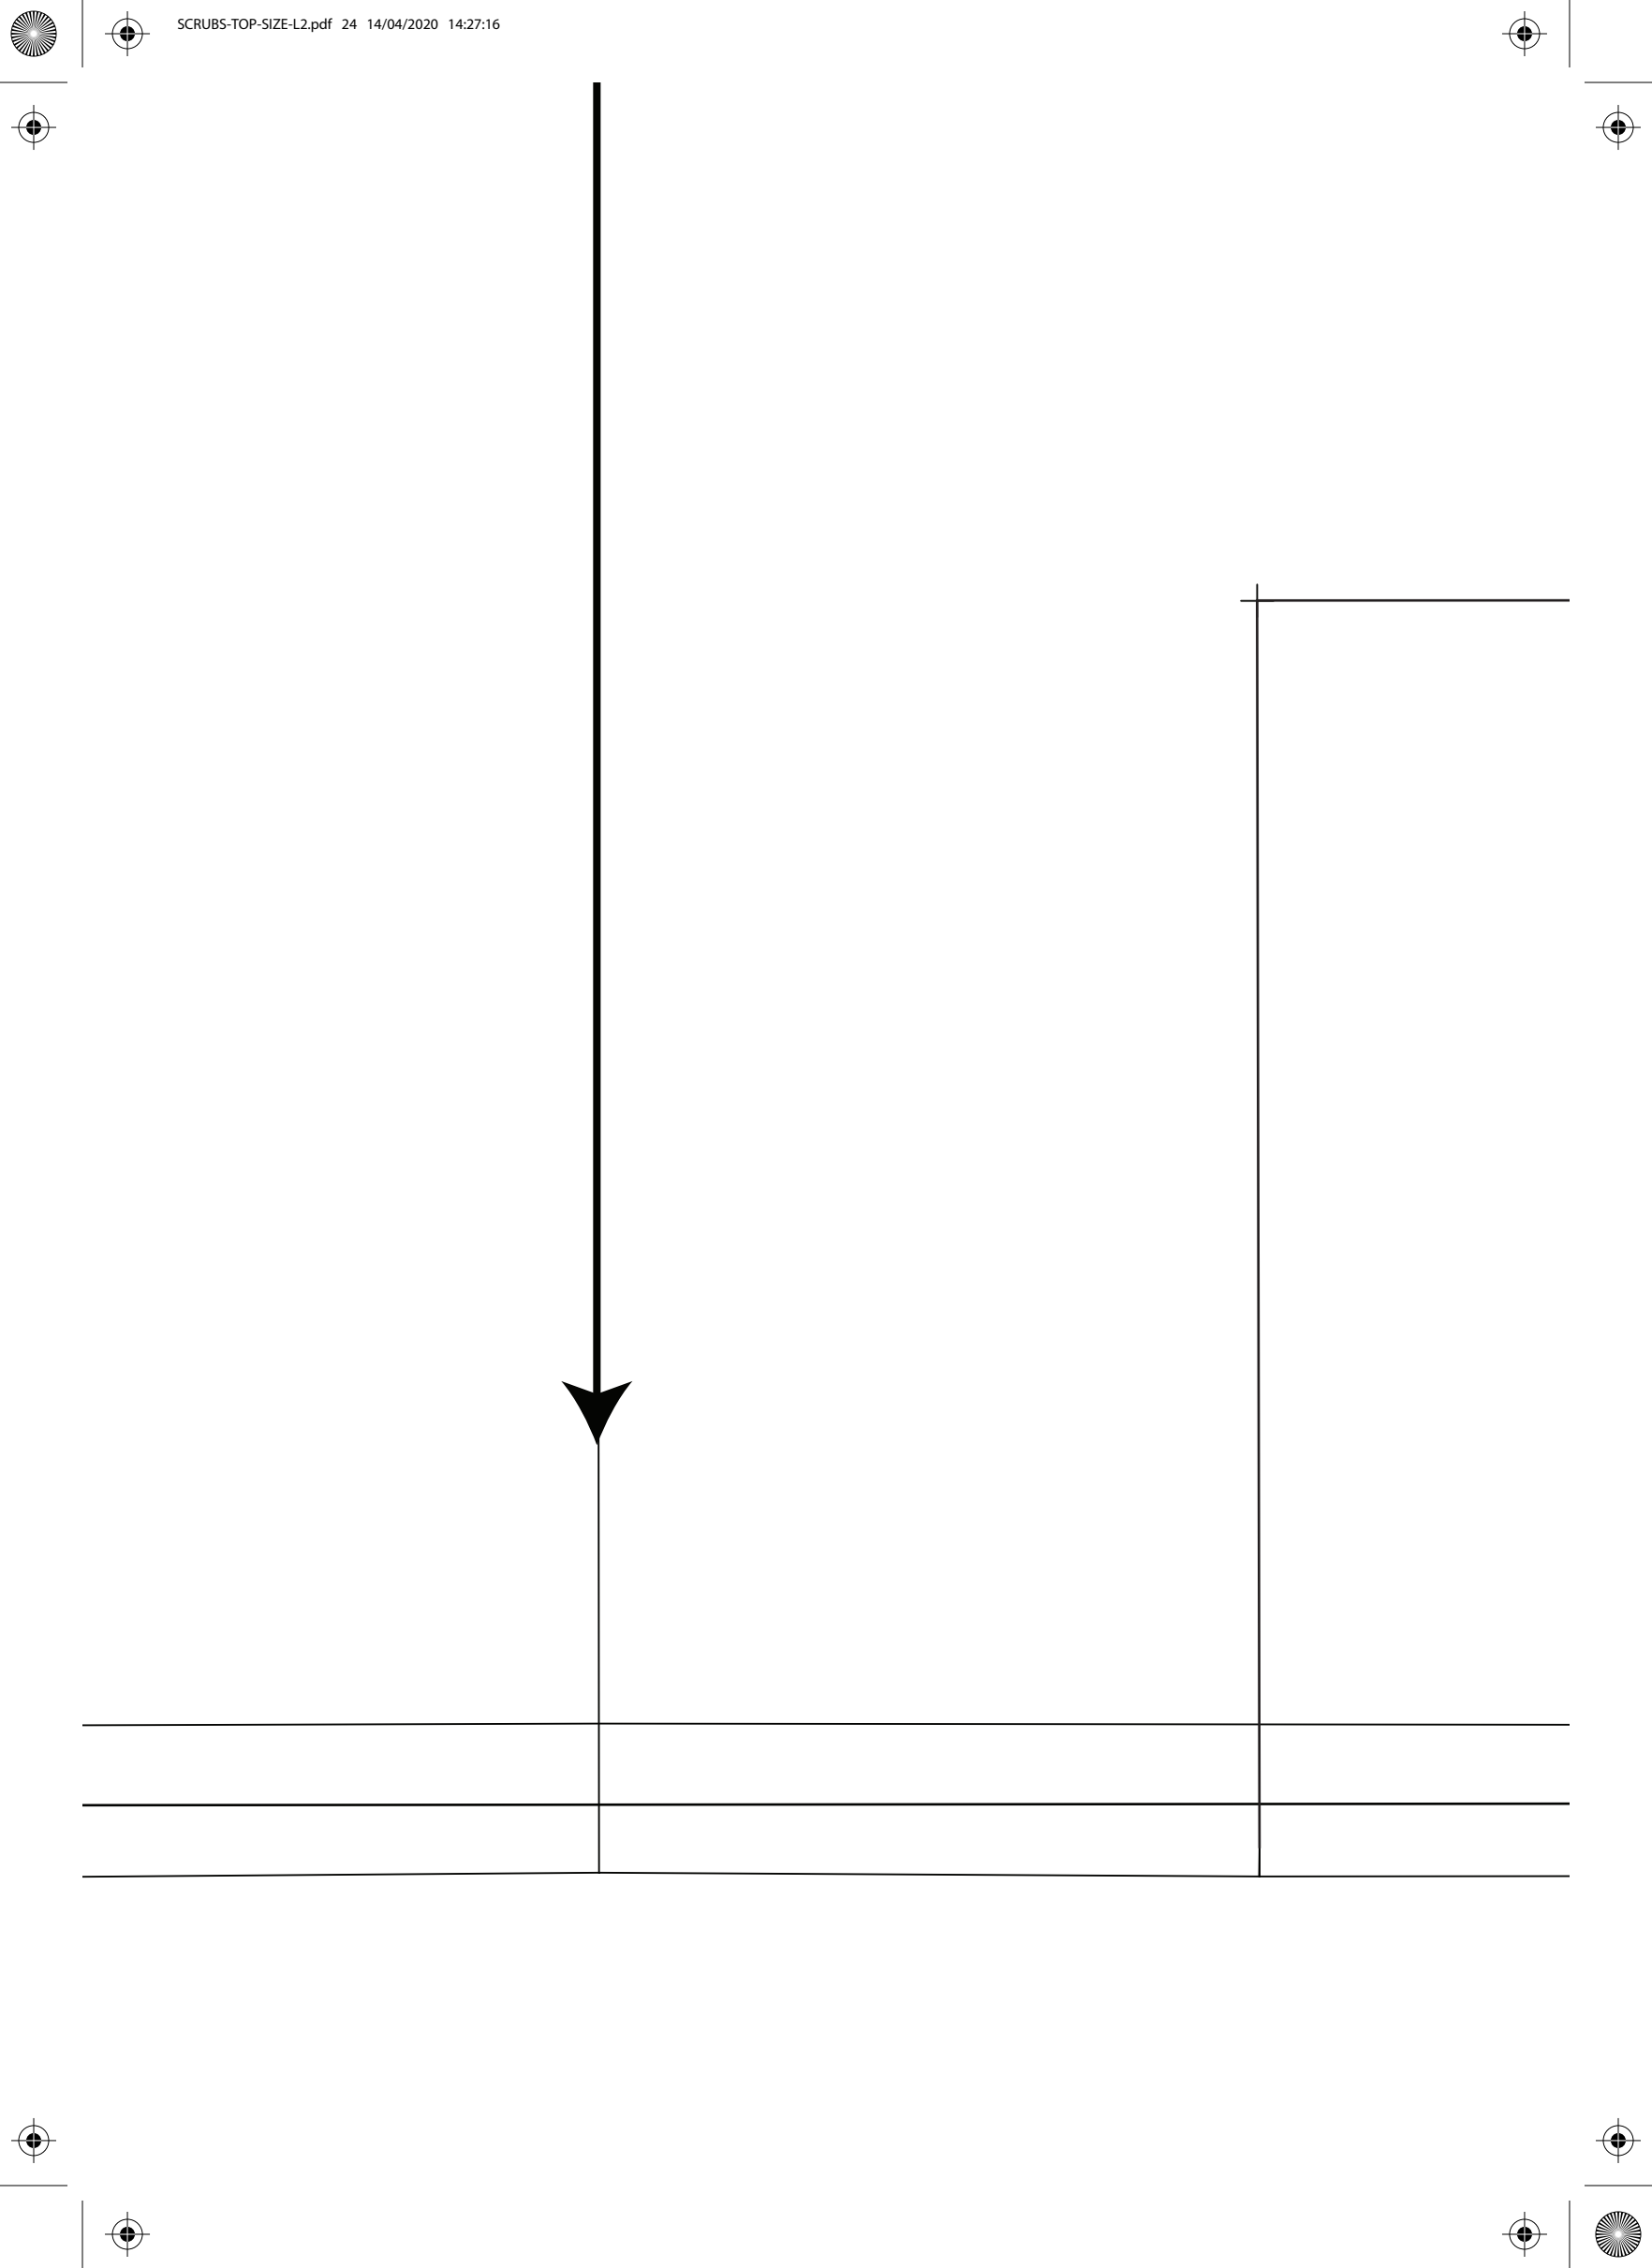

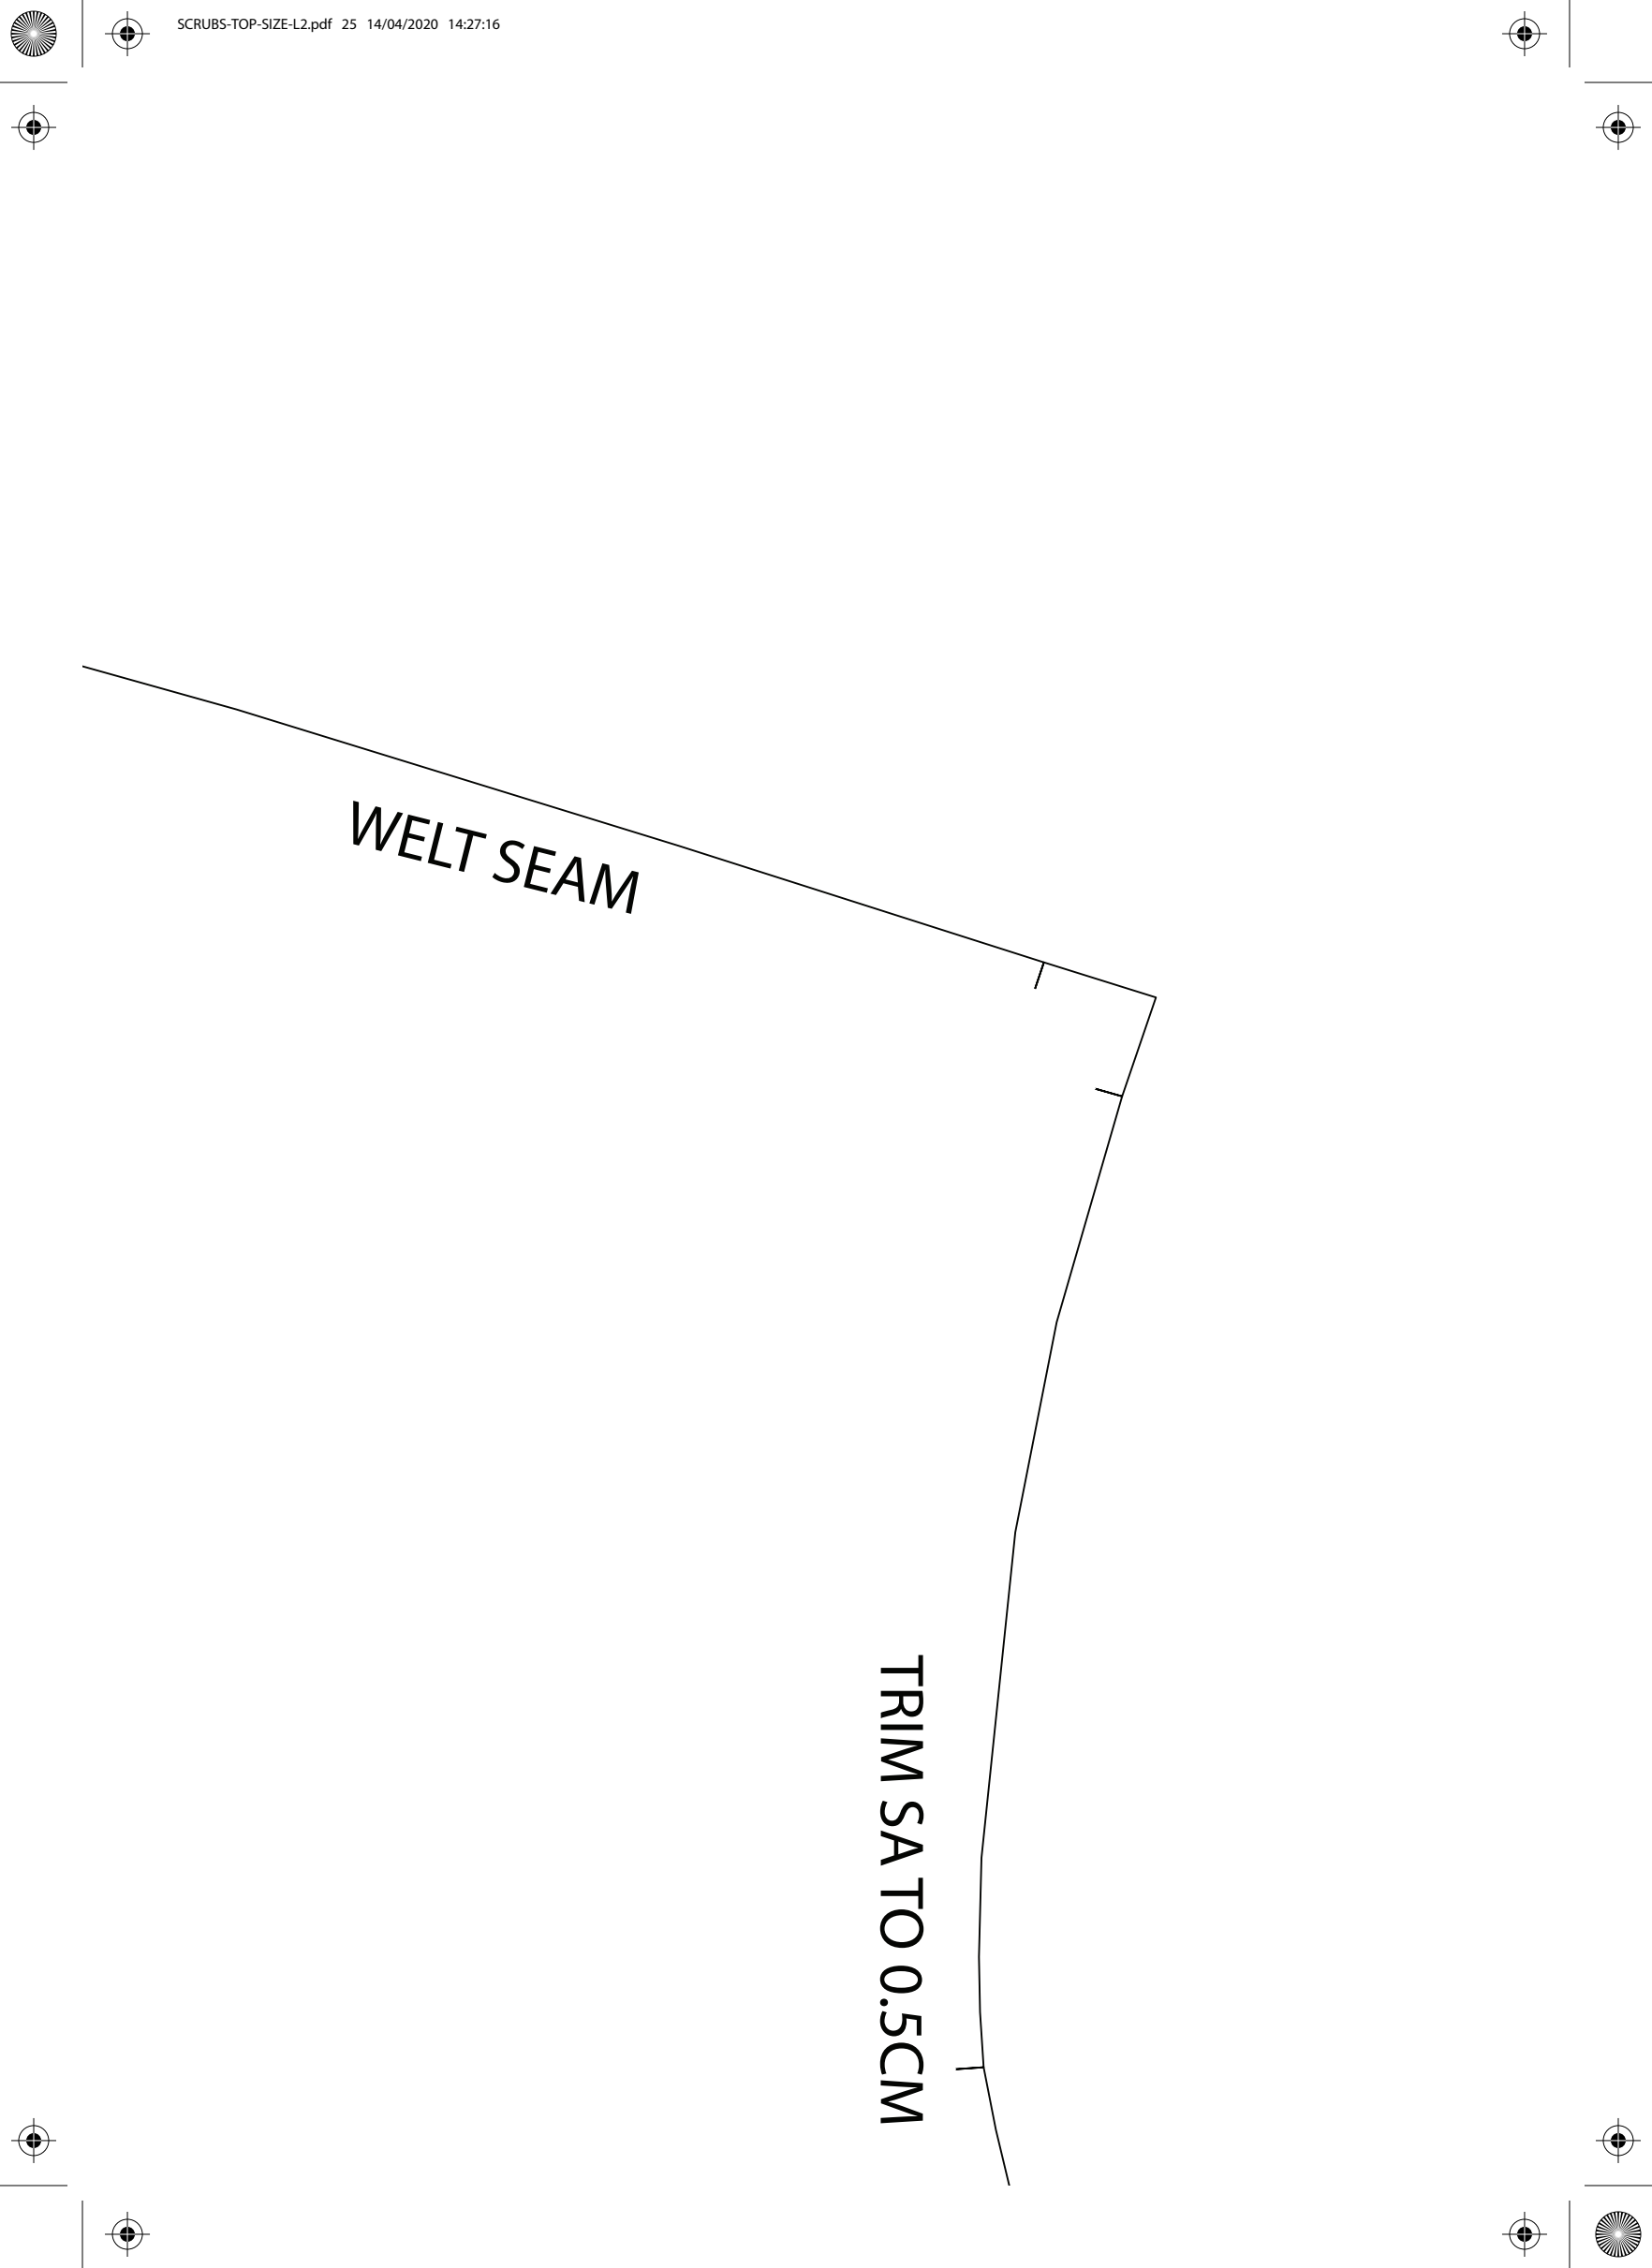


WELT SEAM

TRIM SA TO 0.5CM

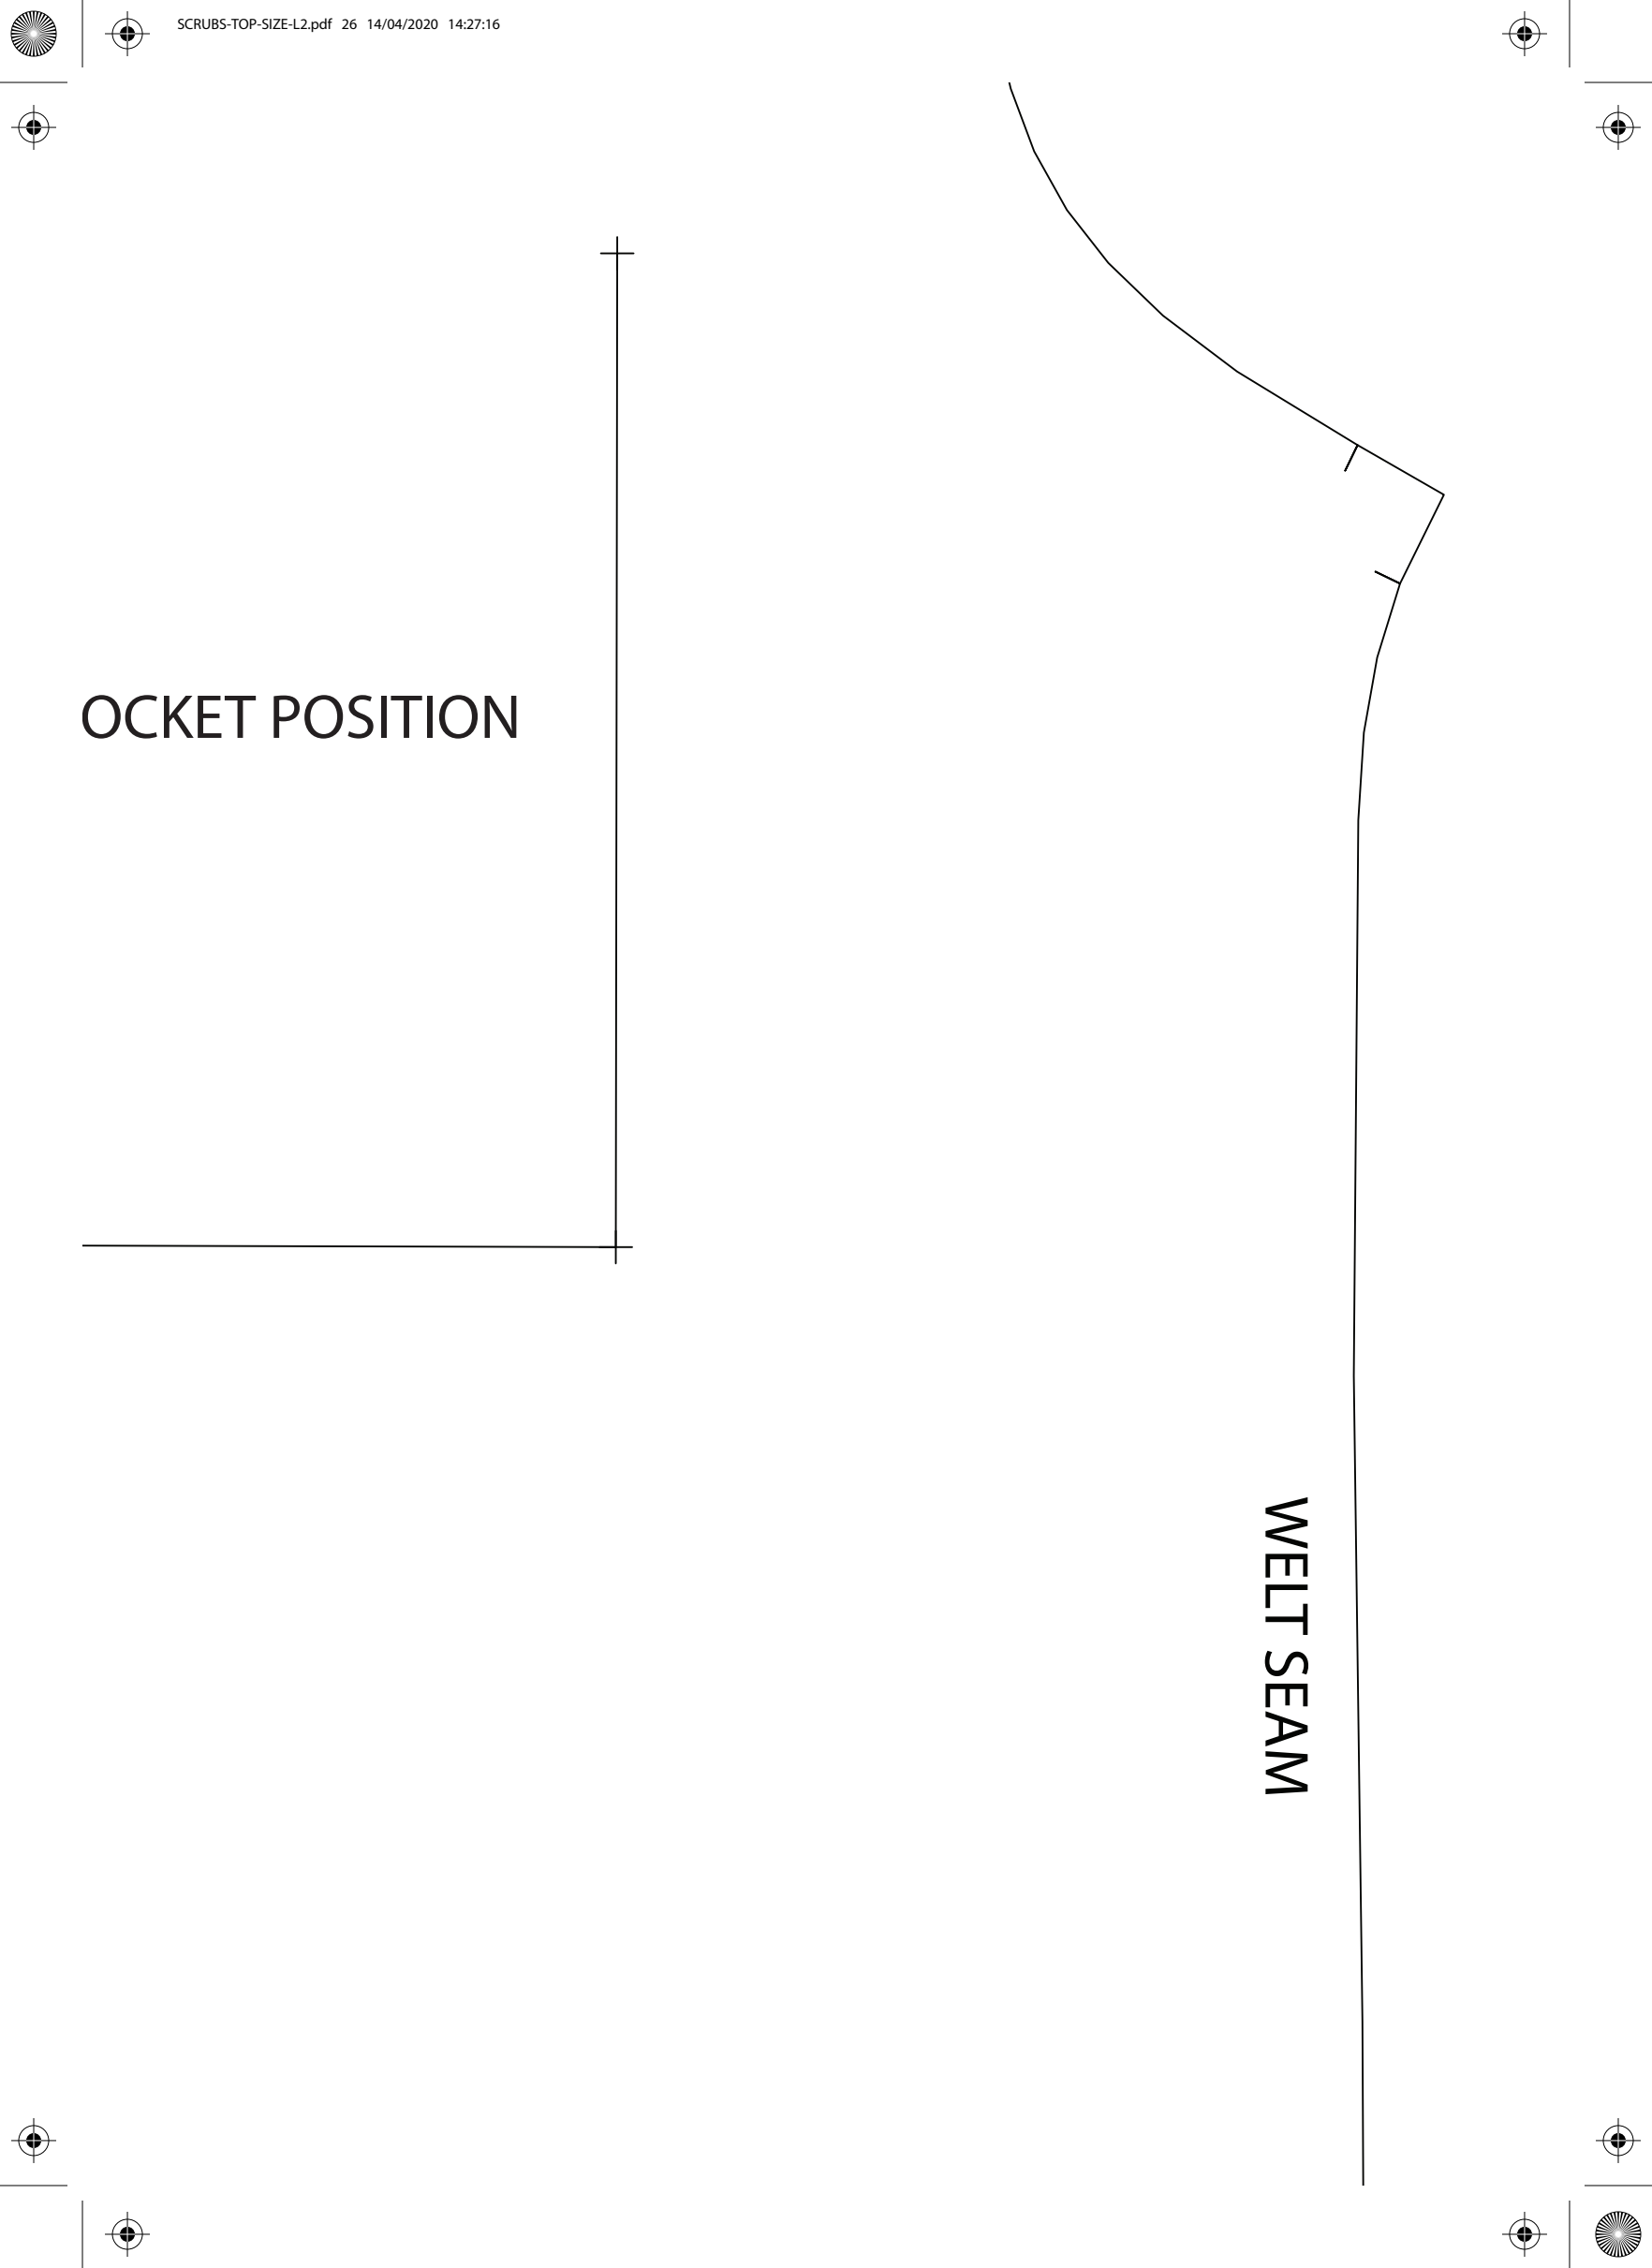

POCKET POSITION

WELT SEAM

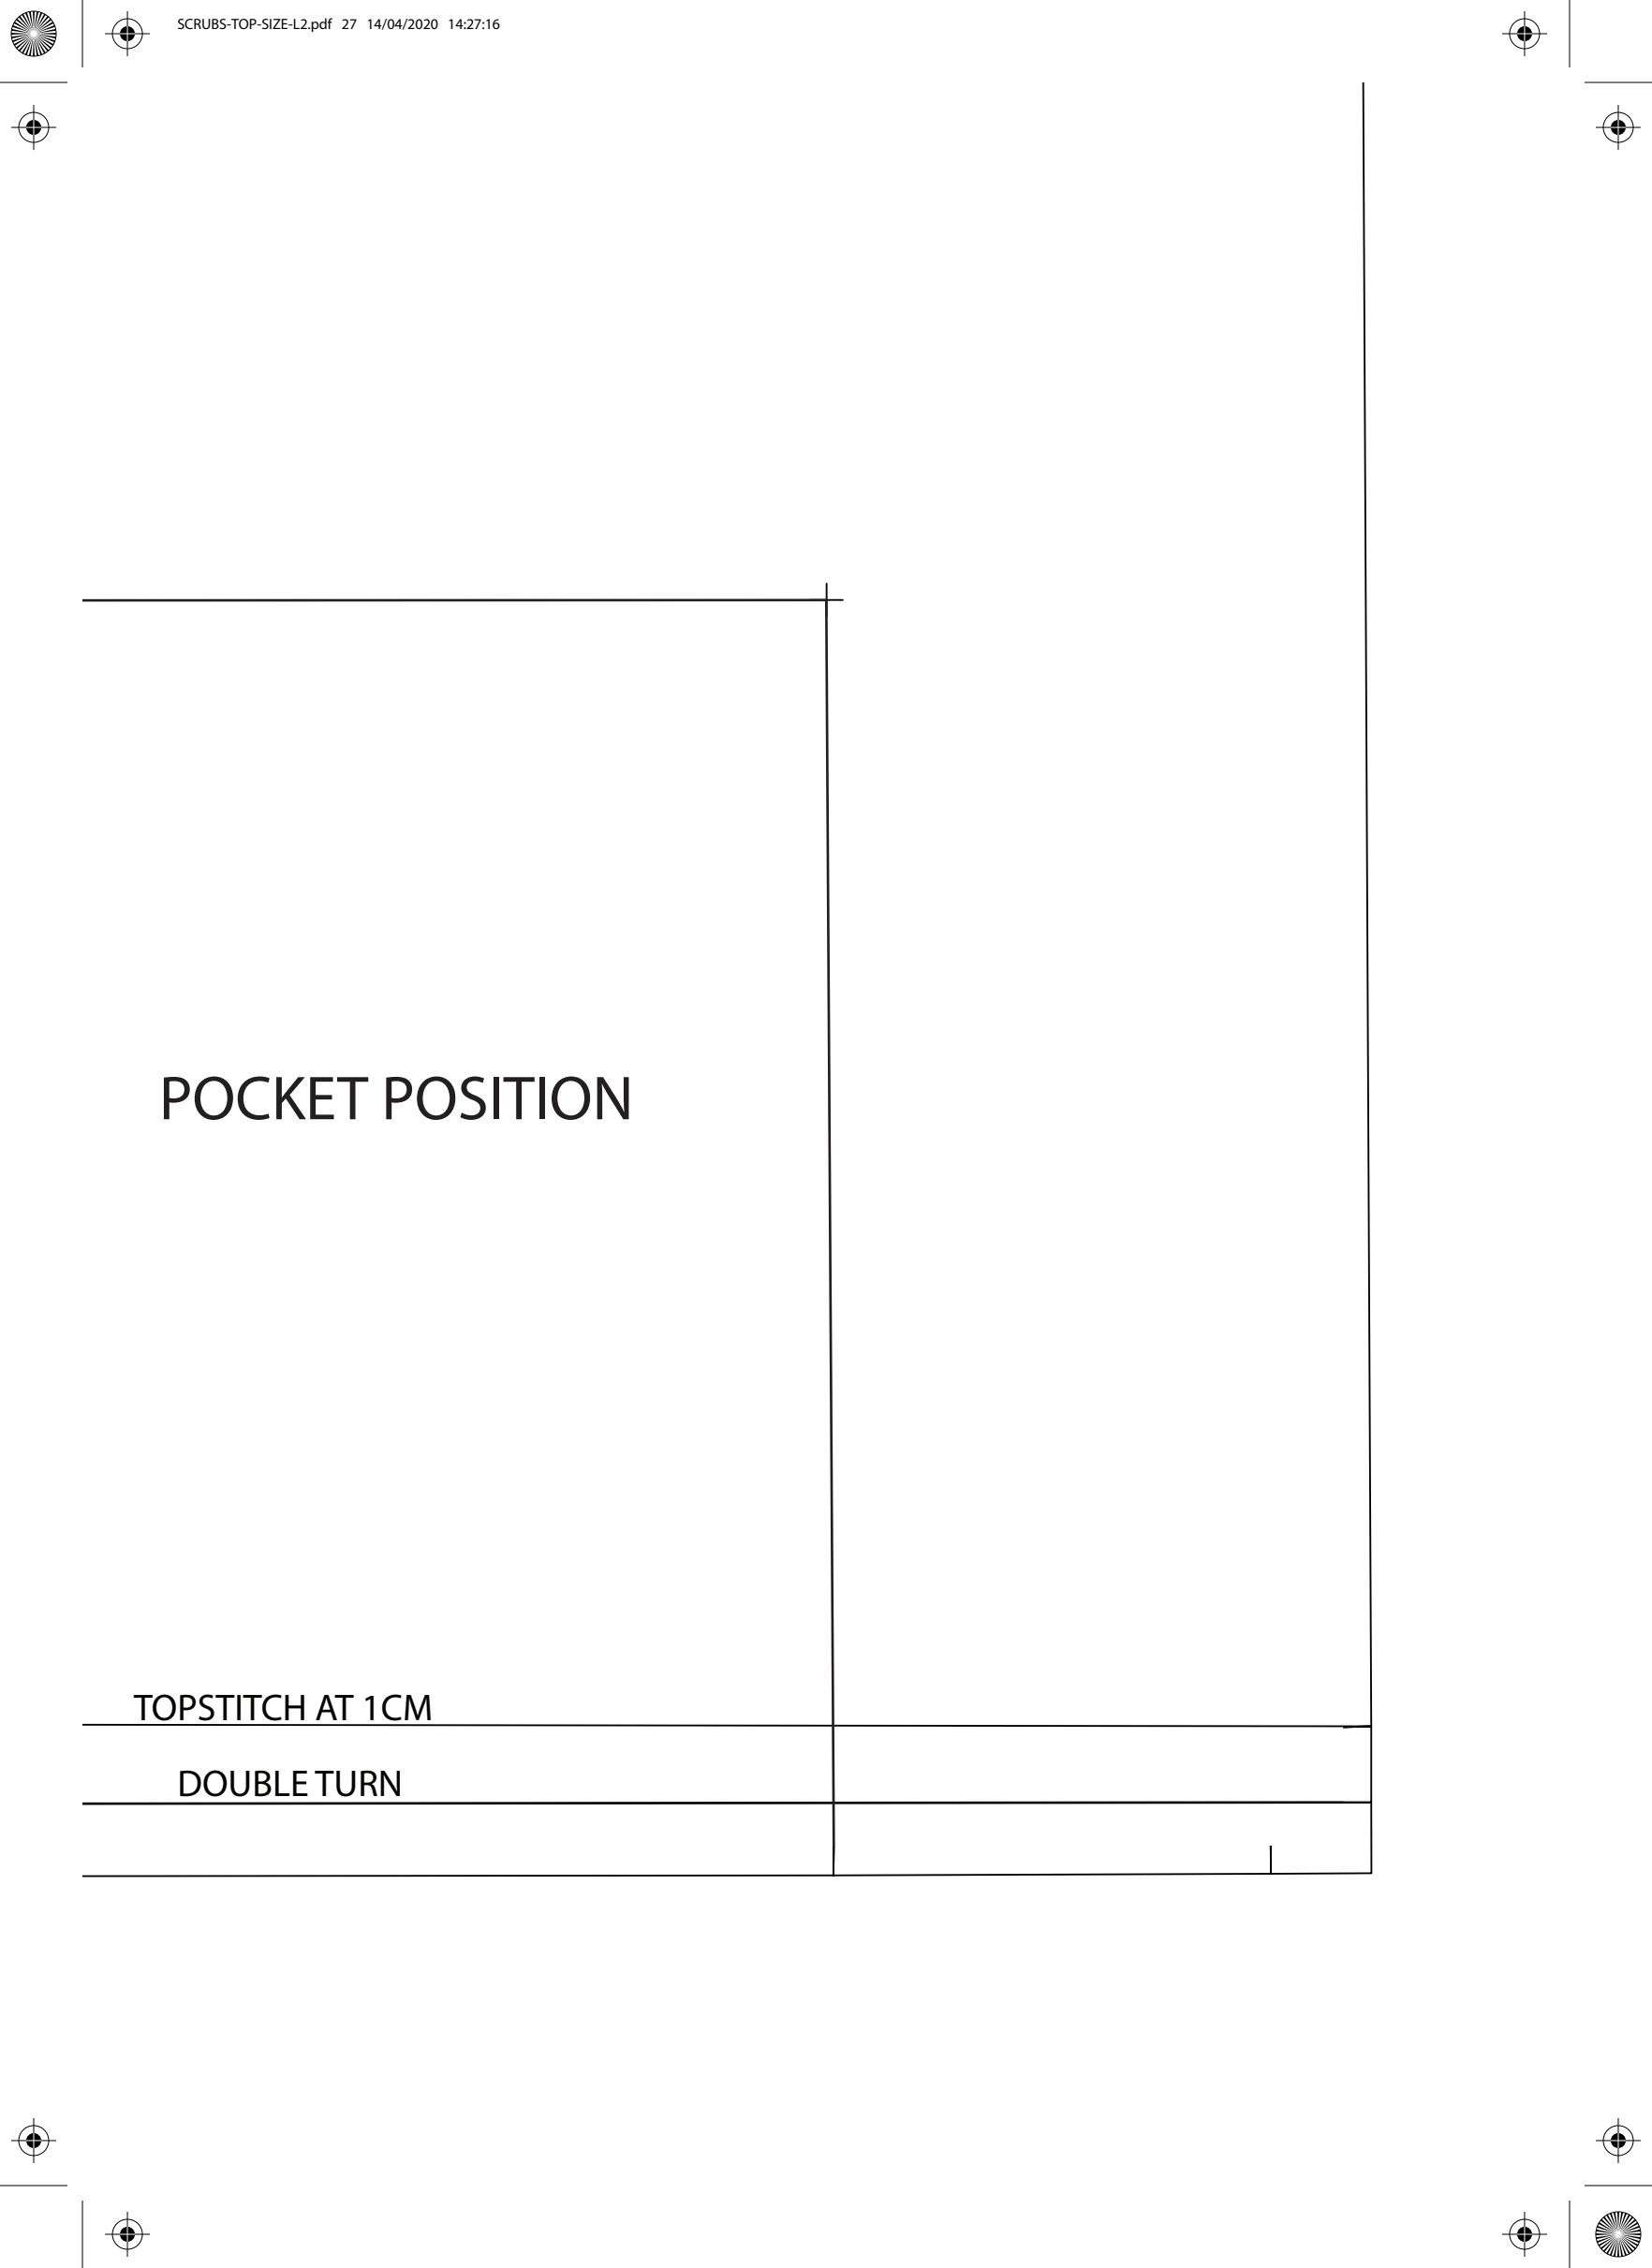

POCKET POSITION

TOPSTITCH AT 1CM

DOUBLE TURN