

FROM THE FOUNDER OF THE #VIKISEWS BRAND




Back in 2016, when I was working on my first set of sewing instructions, I was trying to write them in such a way that even a complete beginner could easily understand and use them to create their very first garment. These instructions laid the foundation for the Vikisews brand, its vision and its mission. I wanted to create modern patterns with the most detailed and clear instructions.

Now, with each new collection we are constantly improving our instructions, amending them and adding more relevant details. By the time the final product reaches you, our drafters, correctors, and editors would have spent weeks perfecting every word and every photograph. If you compile a few of our instructions together, you will get a sewing manual that will assist you in sewing all kinds of garments at any difficulty level.

And I would be very happy if these instructions helped you to turn your hobby into a lifelong passion... Enjoy the process! Create your ultimate dream wardrobe! Wear your garments proudly for years to come!

If you have any questions, please contact us at info@vikisews.com - we are always there to help.

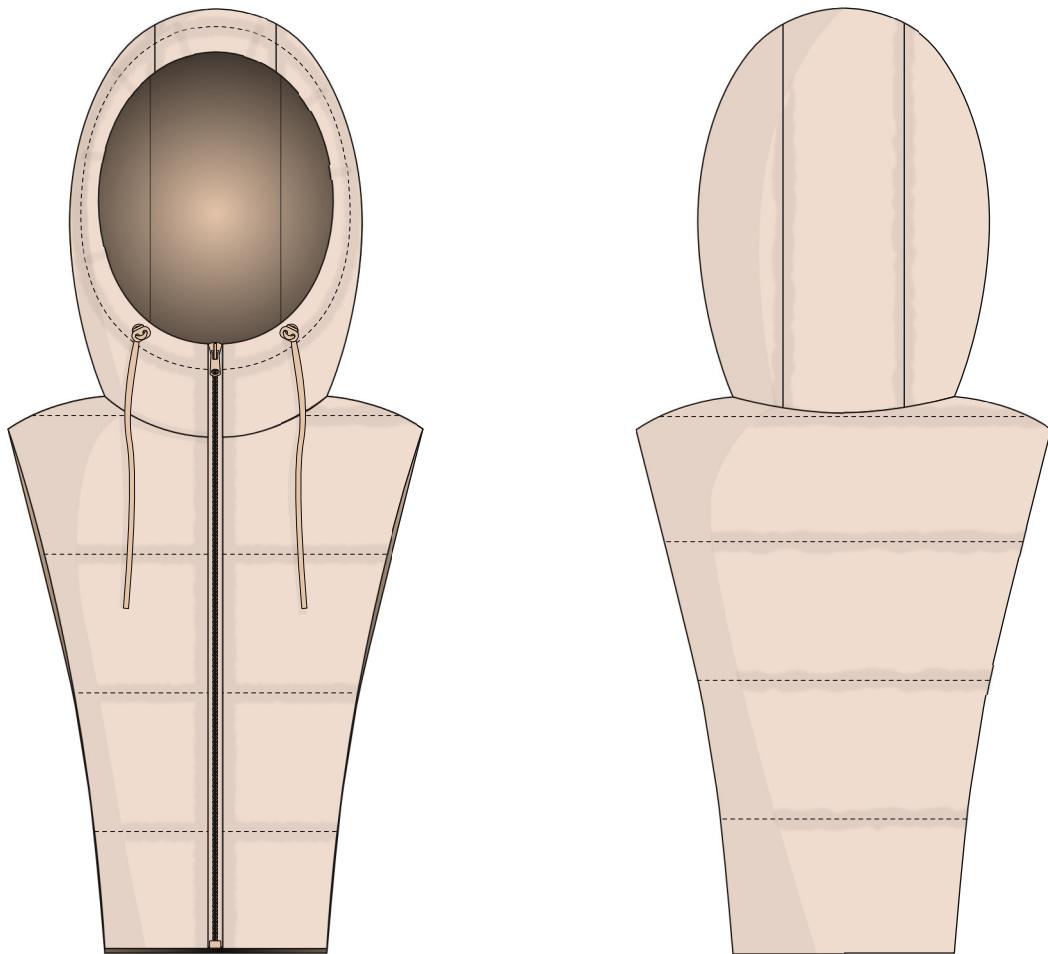

RONI PATTERN DESCRIPTION

Roni is a semi-fitted, padded, detachable hood that features wide horizontal quilting. The front has an open end zipper at the center. There is a casing along the edge of the hood with a cord threaded through it. The cord is secured with two metallic cord locks. Roni is waist-length.



IMPORTANT!

The contents of this pattern are copyright protected and belong exclusively to Vikisews. You may use Vikisews patterns for personal use. It is prohibited to share Vikisews patterns and instructions with third parties, as well as to publish patterns and instructions online for public access. **Non-compliance with the mentioned rules is a violation of the US copyright law and may result in civil liability and criminal prosecution.**

You may use Vikisews patterns for commercial use, to sew custom-made garments and/or create fashion collections, on the condition that the patterns are solely used in a manufacturing setting and are not further shared with individuals.

GARMENT LENGTH

Height, cm	Back length, cm	Height, ft	Back length, in
1 (154-160)	46.3-47.5	1 (5'1"-5'3")	18 1/4-18 3/4
2 (162-168)	48.3-49.5	2 (5'4"-5'6")	19-19 1/2
3 (170-176)	50.3-51.5	3 (5'7"-5'9")	19 3/4-20 1/4
4 (178-184)	52.3-53.5	4 (5'10"-6'1")	20 5/8-21 1/8

SUGGESTED FABRIC

To sew this hood, choose outerwear fabrics with the following properties:

- medium-weight, soft, non-stretch, opaque, windproof and water-resistant
- the fabric content can include natural (cotton), artificial (viscose, acetate), blends (cotton + polyester, etc.), and synthetic fibers (polyester, polyester + elastane)
- the following fabrics are recommended: blended raincoat fabric, dewspo, twill, taffeta, taslan, etc.

The main fabric is used for the lining as well.

For the insulation layer, use alpolux, isosoft, thinsulate, polyester batting 200 g/m².

The hood in the photo is made in outerwear dewspo fabric (100% polyester). This fabric is medium-weight, structured, windproof and water-resistant. The insulation layer is polyester batting 200 g/m².

FABRIC AND NOTIONS REQUIREMENTS

1. Main fabric, 140 cm wide, in meters:

Height, cm	Size		
	XS-S	M-L	XL
1 (154-160)	1.42	1.45	1.47
2 (162-168)	1.46	1.49	1.51
3 (170-176)	1.51	1.53	1.56
4 (178-184)	1.55	1.57	1.6

Main fabric, 150 cm wide, in meters:

Height, cm	Size		
	XS-S	M-L	XL
1 (154-160)	1.09	1.11	1.15
2 (162-168)	1.12	1.15	1.17
3 (170-176)	1.17	1.18	1.21
4 (178-184)	1.21	1.22	1.24

TOOLS AND EQUIPMENT

- sewing machine for construction
- walking foot or quilting foot
- zipper foot for the sewing machine
- grommet setting tool.

If you do not have a tool, or knowledge of how to attach grommets, consider installing them at an atelier or haberdashery shop.

PATTERN PIECES LIST

1. From main fabric:

- front - cut 4
- back - cut 2 on fold
- outer hood side panel - cut 2
- outer hood center panel - cut 1
- inner hood side panel - cut 2
- inner hood center panel - cut 1.

IMPORTANT! *Don't forget to transfer all pattern markings and notches onto the fabric.*

2. From polyester batting 200 g/m²:

- front - cut 2
- back - cut 1 on fold
- outer hood side panel - cut 2
- outer hood center panel - cut 1.



Working from the right side, gently press the quilting stitching lines.

Important! Do not press from the wrong side. It may misshape the insulation material. Also, do not use steam when pressing from the right side.



Cut down to 1 cm (3/8") the additional seam allowances on the paper pattern pieces, as follows:

- along the neckline
- along the shoulder edges
- along the hem.

The zipper seam allowance along the center front edge should remain 1.5 cm (5/8").



Place the paper pattern pieces onto the garment pieces. True the garment pieces to the paper pattern ones.