

FROM THE FOUNDER OF THE #VIKISEWS BRAND




Back in 2016, when I was working on my first set of sewing instructions, I was trying to write them in such a way that even a complete beginner could easily understand and use them to create their very first garment. These instructions laid the foundation for the Vikisews brand, its vision and its mission. I wanted to create modern patterns with the utmost detailed and clear instructions.

Now, with each new collection we are constantly improving our instructions, amending them and adding more relevant details. By the time the final product reaches you, our drafters, correctors, and editors would have spent weeks perfecting every word and every photograph. If you compile a few of our instructions together, you will get a sewing manual that will assist you in sewing all kinds of garments at any difficulty level.

And I would be very happy if these instructions helped you to turn your hobby into a lifelong passion... Enjoy the process! Create your ultimate dream wardrobe! Wear your garments proudly for years to come!

If you have any questions, please contact us at info@vikisews.com — we are always there to help.

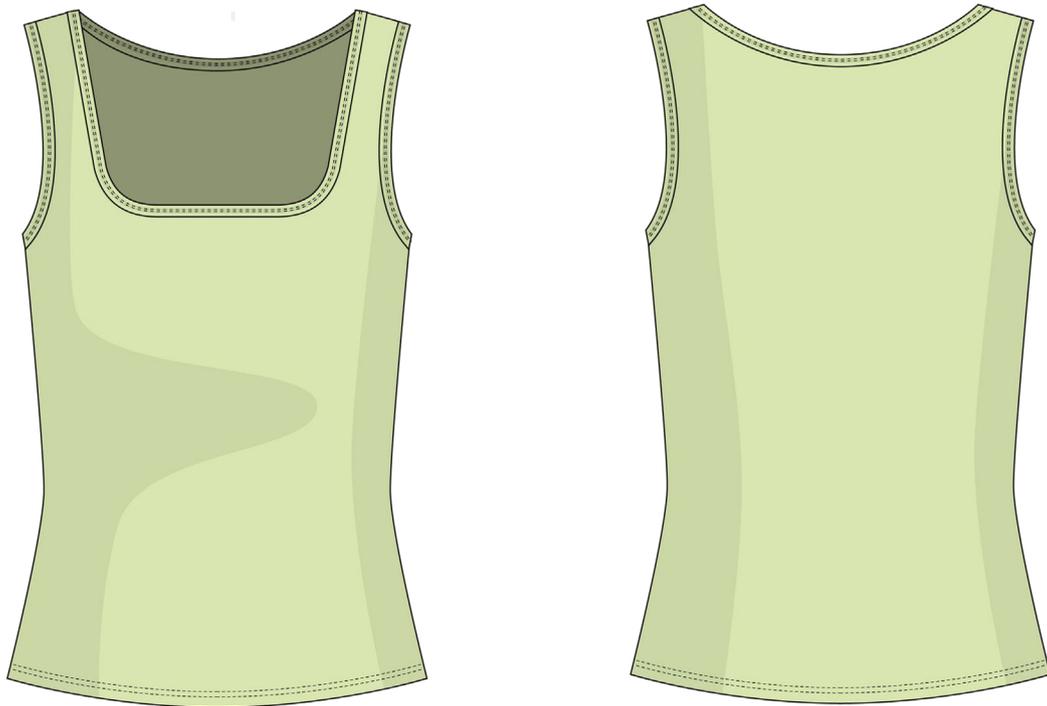

RORY PATTERN DESCRIPTION

Rory is a close-fitting tank top. It features a low round neckline. The neckline and armholes are finished with binding. The top is hip-length.



IMPORTANT!

The contents of this pattern are copyright protected and belong exclusively to Vikisews. You may use Vikisews patterns for personal use. It is prohibited to share Vikisews patterns and instructions with third parties, as well as to publish patterns and instructions online for public access. **Non-compliance with the mentioned rules is a violation of the US copyright law and may result in civil liability and criminal prosecution.**

You may use Vikisews patterns for commercial use, to sew custom-made garments and/or create fashion collections, on the condition that the patterns are solely used in a manufacturing setting and are not further shared with individuals.

TOTAL EASE ALLOWANCE

	Bust ease	Waistline ease	Hipline ease
cm	-14.6 – -15.2	-5.5	-10.2 – -9.5
inches	-5 3/4 – -6	-2 1/8	-4 – -3 3/4

GARMENT LENGTH

Height, cm	Back length, cm	Height, ft	Back length, in
1 (154–160)	49.5–53.1	1 (5'1"–5'3")	19 1/2–20 7/8
2 (162–168)	51.9–55.5	2 (5'4"–5'6")	20 3/8–21 7/8
3 (170–176)	54.5–58.5	3 (5'7"–5'9")	21 1/2–23
4 (178–184)	57–60.6	4 (5'10"–6'1")	22 1/2–23 7/8

SUGGESTED FABRIC

To sew this top, choose knit fabrics with the following properties:

- soft, stretchy, smooth or textured
- the fiber content can include natural fibers (cotton, silk), artificial fibers (viscose), blends (cotton + polyester + nylon, cotton + elastane, cotton + spandex, viscose + elastane), and synthetics (polyester + nylon + elastane)
- the following fabrics are recommended: rib knits, jersey knits

Attention! The fabric must contain elastane or spandex.

The top in the photo is made of rib knit fabric. The fabric is medium weight, soft, and stretchy. The fiber content is a blend of cotton (95%) and elastane (5%). The fabric weight is 400 g/m².

TOOLS AND EQUIPMENT

- sewing machine for construction
- overlocker for construction and finishing raw edges. It can be replaced with a stretch overlock stitch or a zigzag stitch on the sewing machine (overlock or zigzag stitch width 2–3 mm, stitch length 2.5 mm)
- coverstitch or coverlock machine for finishing the neckline and armhole edges, and the garment hem. It can be replaced with a twin needle on a regular sewing machine that can do a zigzag stitch
- latch hook or large-eye needle

***IMPORTANT!** We recommend using specialty needles when working with knit fabrics (for example, STRETCH, SUPER STRETCH, JERSEY, etc.). When sewing, a ball-shaped needle point pushes the knit loops apart without piercing the threads.*

PATTERN PIECES LIST

From main fabric:

- front — cut 1 on fold
- back — cut 1 on fold
- neck binding — cut 1
- armhole binding — cut 2

***IMPORTANT!** Don't forget to transfer all pattern markings and notches onto the fabric.*

SEAM ALLOWANCES

All pattern pieces include seam allowances as follows:


- garment hem allowance — 2 cm (3/4")
- all other edges — 1 cm (3/8")

Take this into account when laying out pattern pieces on the fabric.

Attention! Although the seam allowances are not indicated along the neckline and armhole edges, the pattern pieces include 1 cm (3/8") seam allowances. There is no need to add anything.



Press the seams flat.
Trim the seam allowances down to 3 mm (1/8").

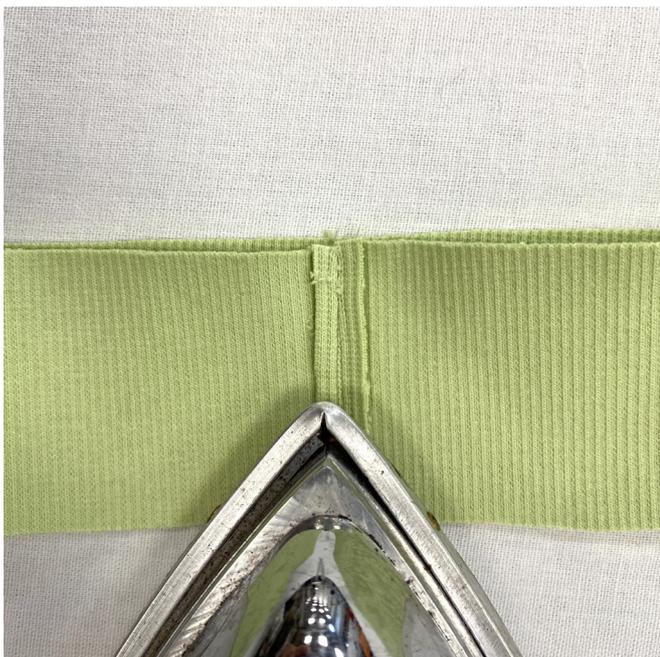

Press the seam allowances open.



Press the seam allowances towards the back notch.