


Viki

S E W S

PANTS

STANLEY

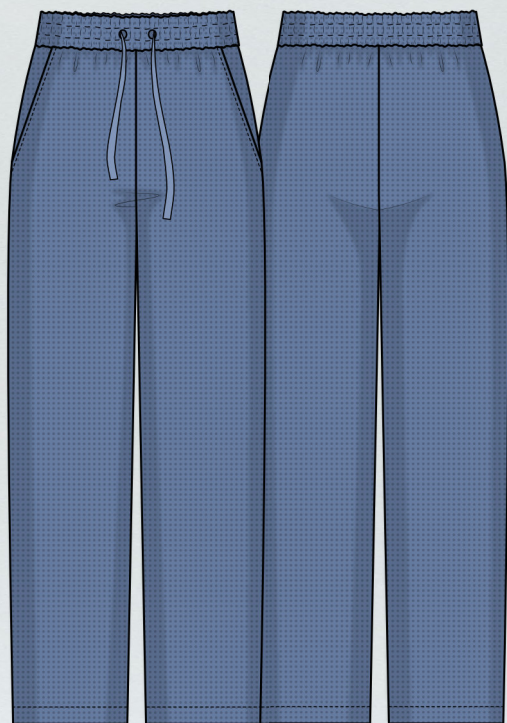

SIZES
38-54

DIFFICULTY
● ● ●

SUITABLE FOR BEGINNERS



FROM THE FOUNDER OF THE VIKISEWS® BRAND




Back in 2016, when I started making my first sewing patterns and instruction manuals, my main goal was to solve the problems I personally faced at the beginning of my sewing journey: the lack of stylish patterns that provide a great fit and contain clear sewing instructions. That's how Vikisews was born—a brand designed to help you create fashionable, on-trend clothing with your own hands.



The sewing instructions we create is the result of our team's careful, meticulous work. May they help you develop your sewing hobby—or even turn it into your life's work! Enjoy every step of the sewing process and create a thoughtful, stylish wardrobe!

If you have any questions, we're always here to help: info@vikisews.com

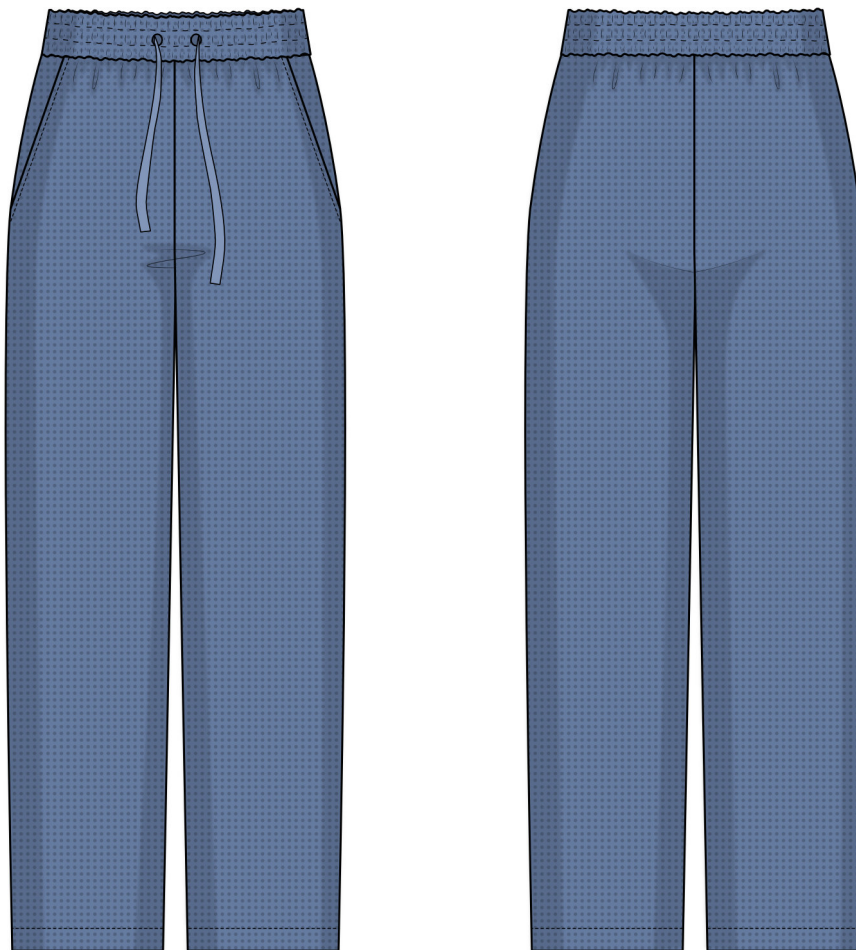

STANLEY PATTERN DESCRIPTION

Stanley is a pair of semi-fitted, straight-cut pants with an elasticated waistband. The front features slash pockets. The waistband is decorated with two rows of topstitching that form a casing with a cord threaded through it. The upper edge of the waistband sits at the natural waistline. The bottom edges of the pants are finished with a double-fold hem. Stanley is below-ankle length.



PLEASE READ BEFORE USE

The contents of this pattern are copyright protected and belong exclusively to Vikisews. You may use Vikisews patterns for personal use. It is prohibited to share Vikisews patterns and instructions with third parties, as well as to publish patterns and instructions online for public access. **Non-compliance with the mentioned rules is a violation of the US copyright law and may result in civil liability and criminal prosecution.**

You may use Vikisews patterns for commercial use, to sew custom-made garments and/or create fashion collections, on the condition that the patterns are solely used in a manufacturing setting and are not further shared with individuals.

TOTAL EASE ALLOWANCE

	Waistline ease	Hipline ease
cm	from 17.3 to 18	from 2.3 to 7.6
inches	from 6 3/4 to 7 1/8	from 7/8 to 3

GARMENT LENGTH, SLEEVE LENGTH

Height, cm	Side seam length including waistband, cm	Finished hem width, cm
1 (170–176)	102.8–107.1	23.9–29
2 (178–184)	107.3–111.6	23.9–29
3 (186–192)	111.8–116.1	23.9–29
4 (194–200)	116.3–120.6	23.9–29

Height, ft	Side seam length including waistband, in	Finished hem width, in
1 (5'7"–5'9")	40 1/2–42 1/8	9 3/8–11 3/8
2 (5'10"–6')	42 1/4–43 7/8	9 3/8–11 3/8
3 (6'1"–6'3")	44–45 3/4	9 3/8–11 3/8
4 (6'4"–6'7")	45 3/4–47 1/2	9 3/8–11 3/8

SUGGESTED FABRIC

To sew these pants, choose soft, opaque, medium weight, low-wrinkle, non-stretch shirting fabrics. The fiber content can include natural fibers (silk, cotton, linen), artificial fibers (viscose), blended fibers (cotton + viscose, etc.), and synthetic fibers (polyester).

The following fabrics are recommended: sateen, shirting fabric, flannel, cotton.

The pants in the photo are made of 100% cotton. The fabric is medium weight, pliable, and non-stretch. The fabric weight is 120 g/m².

FABRIC AND NOTIONS REQUIREMENTS

1. Main fabric, 140 cm wide, with a directional print/nap, 120–160 g/m², in meters:

Height, cm	Size								
	38	40	42	44	46	48	50	52	54
1 (170–176)	1.5	1.75	2	2	2.05	2.05	2.1	2.15	2.25
2 (178–184)	1.6	2.05	2.1	2.1	2.1	2.15	2.2	2.25	2.35
3 (186–192)	1.65	2.15	2.15	2.2	2.2	2.25	2.3	2.35	2.45
4 (194–200)	1.75	2.25	2.25	2.25	2.3	2.3	2.4	2.45	2.55

Main fabric, 55" wide, with a directional print/nap, 120–160 g/m², in yards:

Height, ft	Size							
	38	40	42-44	46	48	50	52	54
1 (5'7"-5'9")	1 5/8	1 7/8	2 1/8	2 1/4	2 1/4	2 1/4	2 3/8	2 1/2
2 (5'10"-6')	1 3/4	2 1/4	2 1/4	2 1/4	2 3/8	2 3/8	2 1/2	2 5/8
3 (6'1"-6'3")	1 3/4	2 3/8	2 3/8	2 3/8	2 1/2	2 1/2	2 5/8	2 5/8
4 (6'4"-6'7")	1 7/8	2 1/2	2 1/2	2 1/2	2 1/2	2 5/8	2 5/8	2 3/4

IMPORTANT! When purchasing fabric, please account for shrinkage and buy 5% more than required.

2. Lightweight interfacing, knit or woven, 140 cm (55") wide, 30 g/m², for all sizes in all heights — 0.1 m (4")
3. Stitched straight-grain fusible stay tape, 1 cm (3/8") wide, for all heights — 0.5 m (1/2 yd)
4. Elastic, 3 cm (1 1/8") wide, length depending on size — 88 cm (35"). The exact elastic length is specified in the pattern
5. Matching thread — 5 spools (1 spool for the sewing machine + 4 spools for the overlocker)

TOOLS AND EQUIPMENT

- sewing machine for construction
- overlocker for finishing raw edges. This may be replaced with a stretch overlock stitch or a zigzag stitch on the sewing machine (overlock or zigzag stitch width 2–3 mm, stitch length 2.5 mm)
- buttonhole foot for the sewing machine
- stitch-in-the-ditch foot for the sewing machine (optional)
- elastic threader (may be replaced with a safety pin)

PATTERN PIECES LIST

1. From main fabric:

- front leg – cut 2
- back leg – cut
- waistband – cut 1 on fold
- cord – cut 1 on fol
- front slash pocket – cut
- pocket lining – cut 2

IMPORTANT! Don't forget to transfer all pattern markings and notches onto the fabric.

2. From interfacing:

One strip 10 cm (3 7/8") long and 1.5 cm (5/8") wide to interface the buttonholes area on the waistband piece. The interfacing strip should be cut on the straight grain (parallel to the selvedge).

SEAM ALLOWANCES


All pattern pieces include seam allowances as follows:

- garment hem allowance — 4 cm (1 5/8")
- all other edges — 1 cm (3/8")

Take this into account when laying out the pattern pieces on the fabric.


CUTTING LAYOUT

Main fabric, 140 cm (55") wide, with a directional print/nap, cut on fold, for size 38 in all heights; for size 40, height 1

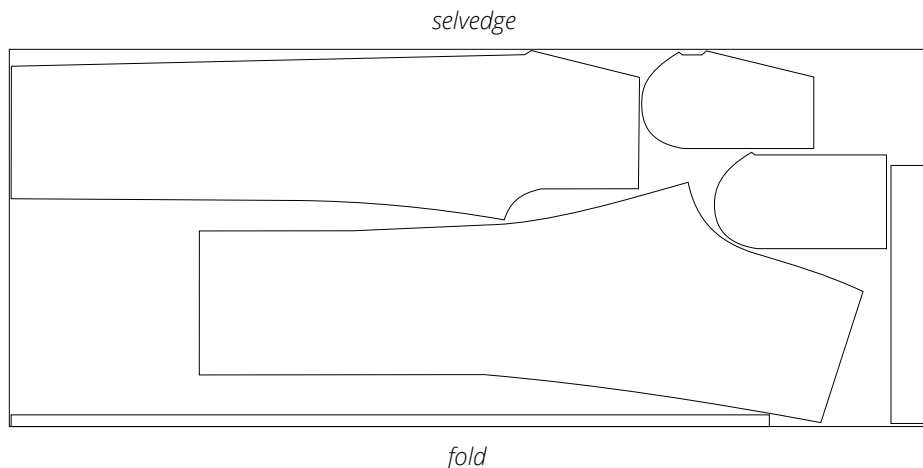

IMPORTANT! Cut the cord piece on a single layer, as a single piece, out of leftover fabric. Cut all the other pieces on fold.

Main fabric, 140 cm (55") wide, with a directional print/nap,
cut on fold, for size 40, heights 2-4; for sizes 42-54 in all heights

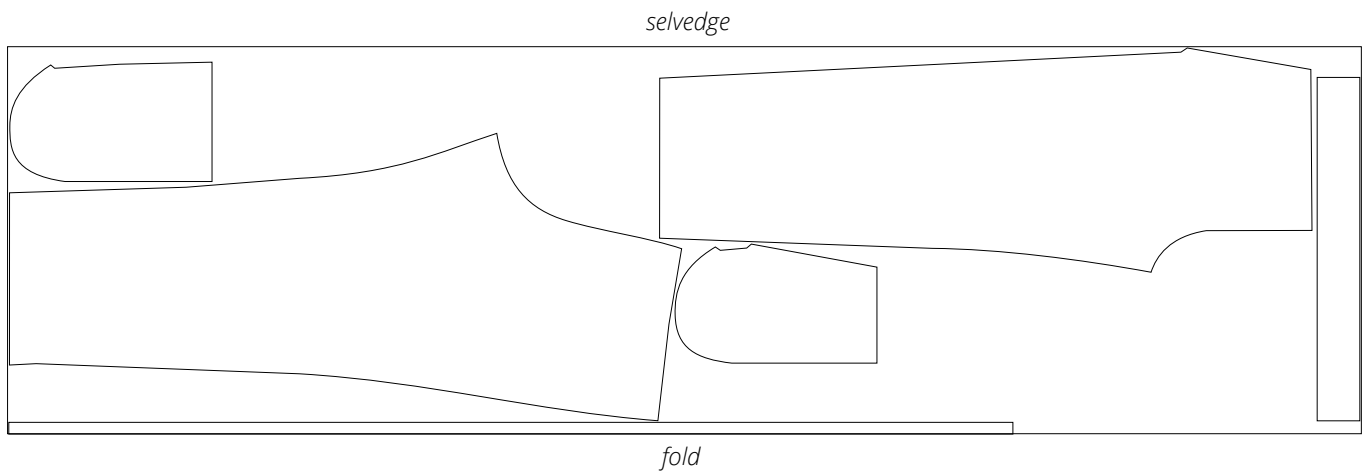

IMPORTANT! Cut the cord piece on a single layer, as a single piece,
out of leftover fabric. Cut all the other pieces on fold.

READY? LET'S GET SEWING!



Press the seam allowances towards the pocket lining piece.



Turn the pocket lining to the wrong side of the front leg piece.

Press along the pocket lining seam, forming a 1 mm seam roll towards the pocket lining piece.



Working on the right side of the front leg piece, topstitch along the pocket opening at 5 mm (just under 1/4") from the edge, stopping 5–7 mm (1/4") short of the side edge, as shown in the photo, backstitching at the beginning and end of the seam.