


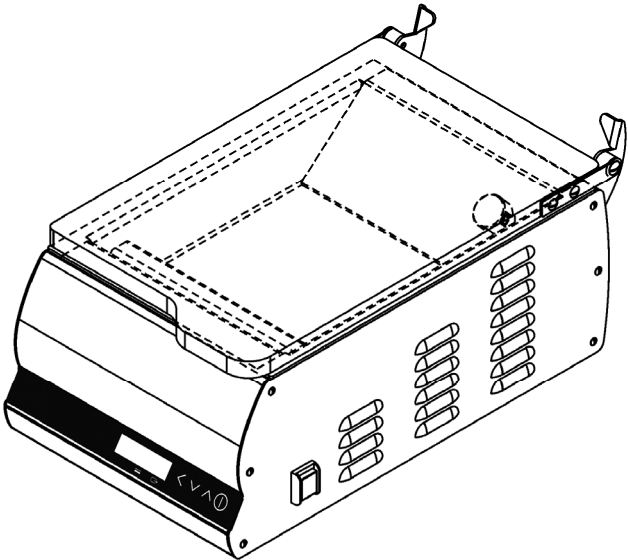

INDEX

1. Delivery and warranty	5
1.1 Foreword.	
1.2 Preservation and use of this manual	
1.3 Warranty	
1.4 General recommendations and limits of liability of the Manufacturer	
1.5 Description of the machine	
1.6 Declared use	
1.7 Use not allowed	
1.7.1 Safety prescriptions	
1.7.2 Lighting	
1.8 Company information	
1.8.1 Warning and Danger signs	
2. Technical features	9
2.1 Main parts	
2.2 Technical features	
2.3 Dimensions and weight of the machine	
2.4 Wiring diagram	
3. Inspection, transport, delivery and installation	12
3.1 Inspection	
3.2 Delivery and handling of the machine	
3.3 Installation	
3.3.1 Disposal of packaging	
3.4 Connections	
3.4.1 Check oil level	
3.4.2 Check plate data	
4. Using the machine	14
4.1 Control board key	
4.2 Programme menu	
4.3 User menu	
4.3.1 Oil heating and cleaning	
4.3.2 Vacuum management	
4.3.3 Wi-Fi	
4.3.4 Language	
4.4 Vacuum packing	
4.5 External vacuum packing cycle	
4.6 Packaging of liquid or semi-liquid products	
4.6.1 Packaging of liquid or semi-liquid products with the use of the standard inclined surface	
4.6.2 Packaging of thin products with use of optional raised surface	
4.7 Cleaning the machine	
4.8 Vacuum pump heating	

5. Controls and maintenance	20
5.1 Controls and maintenance	
5.2 Maintenance	
5.2.1 Vacuum pump	
6. Obligations in case of malfunctioning and/or potential dangers	21
6.1 User obligations	
7. Troubleshooting	21
7.1 Troubleshooting	
7.2 WEEE Waste Electric and Electronic Equipment	

1 Delivery and warranty

1.1 - Foreword

ATTENTION!

The symbols used in this manual intend to call the reader's attention to points and operations that put the operator's personal safety at risk or which can cause damage to the machine itself.

Do not operate with the machine if you are not certain to have correctly understood that highlighted in these notes.

ATTENTION!

Some illustrations in this manual represent the machine or parts of the same with panels or guards removed. This is in order to make things clearer.

Do not use the machine in these conditions, but only with all protections mounted correctly and in perfect working order.

The Manufacturer prohibits reproduction, even partial, of this manual and its content cannot be used for purposes not permitted by the same.
Any breach thereof will be dealt with under the provisions of said Law.

1.2 - Preservation and use of the manual

The purpose of this manual is to make the users of the machine aware of the prescriptions and essential criteria relative to transport, handling, use and maintenance of the machine itself, via texts and figures.

Therefore, this manual must be read thoroughly before the machine is used.

Keep it in a safe place near to the machine, which is easy and quick to access for future consultation.

If the manual is lost or deteriorated, request a copy from your dealer or the Manufacturer directly.

If the machine is transferred, inform the Manufacturer of the name and address of the new owner.

This manual reflects the state of the art at the time of marketing and cannot be considered inadequate merely because it is updated successively on the basis of new developments. The manufacturer also reserves the right to update production and relative manuals without the obligation to updating earlier issues, except in exceptional cases.

If in doubt, consult the nearest after-sales centre or the Manufacturer directly.

The manufacturer is intent on continuous optimisation of its product.

For this reason it is pleased to receive any signals or proposals for improvement of the machine and/or manual.

The machine has been delivered to the user with valid warranty conditions at the time of purchase.

Contact your own supplier for all clarifications.

1.3 - Warranty

The Manufacturer is committed for 12 (twelve) months, from the date of shipping and direct delivery of the goods, to guaranteeing the customer or authorised dealer the integrity and good operation of the components relative to the machinery in question.

The warranty excludes all parts of the machinery subject to normal wear, i.e. components in which use generates unstoppable constant wear:

- A. Electric resistances – Teflon - Sealing gaskets – Sealing membrane– Air filters – Oil filters – Oil change – Pump vanes.
- B. Whenever a vacuum pump relative to a machine under warranty is returned to the Manufacturer due to problems regarding suction and malfunctioning, the Manufacturer reserves the right to control whether foreign bodies have been sucked up: (liquids, solids, juices, sauces etc.). If this situation is verified, the repair materials and labour will be charged regularly, as the problem is not linked to manufacturing defects but Customer negligence during use.
- C. Any problems linked to the electronic circuit boards of the circuit must be examined by the Manufacturer before the piece to be replaced is sent under warranty. A voltage change, electric over-feeding, interference in the external mains, could cause damage that is not the manufacturer's fault or which can be blamed on the manufacture of the piece.
- D. Any problems linked to pneumatic, structural, mechanical parts, will be solved normally under warranty without charge.
- E. During the warranty period, for interventions covered by the same, there will be no charge for the materials replaced, while labour costs will be calculated. For any interventions performed during the warranty period that are not covered by the warranty itself, the materials replaced and the labour will be charged regularly.
- F. If external interventions by our technicians are requested during the warranty period, travel expenses (return) will be charged in full, independent of the cause of the intervention.

1.4 - General recommendations and limits of liability of the Manufacturer

Every operator-machine interaction, within the declared use ambit and the entire life cycle of the same, has been carefully and thoroughly analysed by the Manufacturer during the design and construction phases and when drawing up the instruction manual. In spite of this, it is intended that nothing can replace the experience, suitable training and especially the "good common sense" of those interacting with the machine. The last requisites are therefore deemed indispensable in every operational phase inherent the machine and when reading this manual.

Failure to comply with the precautions or specific recommendations present in this manual, use of the machine by unsuitable staff, violate all Safety Standards concerning the design, manufacture and declared use of the supply and relieve the Manufacturer from all liability in the event of damage/injury to objects/persons.

The Manufacturer is not deemed liable for the consequences caused by the user's failure to comply with the safety precautions given in this manual.

1.5 - Description of the machine

The vacuum packaging machine is controlled electrically and therefore not subject to wear. The electronically-governed sealing system, is composed of a flat resistance (5mm) bakelite bar which, thanks to an excellent pneumatic system installed, guarantees balanced and even sealing on any type of bag to be used (nylon, polyethylene, Cryovac).

The vacuum pumps used are very modern and guarantee surprising silence even though operating with uninterrupted cycles along with a very high level of final vacuum.

The models represented in this manual have been created in compliance with the **2006/42 EEC Directive** and successive amendments.

In the event of an accident, the manufacturer cannot be held responsible if the machine has been modified, tampered with, the safety protections have been removed or used in ways not declared by the manufacturer.

1.6 - Declared use

The machine has been designed and manufactured to vacuum pack products according to the instructions in this manual and must be intended for this use only. Any other use must be considered improper and therefore dangerous. The Manufacturer cannot be considered responsible for any damage deriving from improper, incorrect or unreasonable use.

It must be used in professional environments and any staff using the machine must have experience in the sector and have read and understood this manual.

1.7– Uses not allowed

1.7.1 - Safety prescriptions

The following points must be respected:

- 1 never touch the metal parts of the machine with wet or damp hands;
- 2 do not pull the power supply cable or the appliance itself, to disconnect the plug from the current;
- 3 do not allow the packaging machine to be used by children or untrained staff;
- 4 the electric safety of this machine is only assured when the same is correctly connected to an efficient earth plant, as envisioned by the electric Safety Standards in force; this fundamental requirement must be verified. If in doubt, request an accurate control of the system by professionally qualified staff; the Manufacturer cannot be considered responsible for any damage caused by the failure to earth the system;
- 5 in the event of possible damage to the earth protection, the machine must be put out of service, in order to prevent undesired and/or involuntary activation;

- 6 always use protection fuses that are in compliance with the Safety Standards in force, with the correct value and suitable mechanical features;
- 7 avoid the use of repaired fuses and the creation of short circuits between the terminals on the fuse holders;
- 8 the packaging machine power supply cable must never be replaced by the user; contact the machine manufacturer exclusively in the event of damage to the cable, or for its replacement;
- 9 keep the cable away from hot parts;
- 10 always switch the machine off and disconnect it from the mains electricity before starting any global clearing procedure or washing operation;
- 11 clean the machine coverings, panels and commands using soft, dry cloths dampened in a weak solution of detergent or alcohol;

1.7.2 - Lighting

The place of installation of the machine must have sufficient natural and artificial lighting in compliance with the Standards in force in the country of installation of the packaging machine.

In all cases, the lighting must be uniform and guarantee good visibility in all parts of the packaging machine and must not create dangerous reflections.

The lighting must allow the control panels to be read correctly and clearly identify the emergency buttons.

1.8 - Company details

An exact description of the "Model", the "Serial number" and the "Year of Manufacture" of the machine will facilitate quick and effective response by our after-sales assistance. It is advised to indicate the model of the machine and the serial number every time the after-sales service is contacted.

Identify the plate data represented in fig. 1.8.1.

We suggest you write the data of your machine in the box below as a reminder.

Machine Model.....

Serial number.....

Year of construction.....


Type.....

MOD:	A		
VOLT:	B	WATT:	C
HZ:	D	KG:	E
AMPS:	F	ANNO:	G
SERIAL NO:			H
			

A = Machine model
 B = Power supply
 C = Motor power
 D = Motor frequency Hz
 E = Weight
 F = Amperage
 G = Year of construction
 H = Serial N°
 I = Manufacturer
 L = Bar code

Fig. 1.8.1

1.8.1 - Warning and danger plates (Fig. 1.8.2)

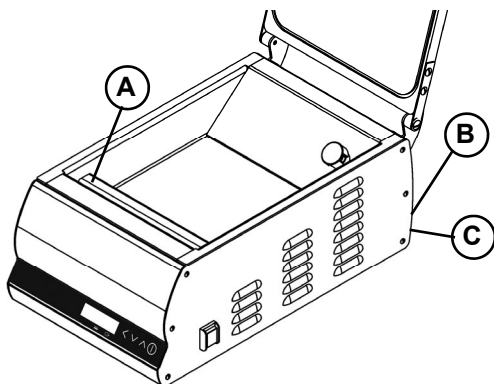

B

Fig. 1.8.2



A

ATTENZIONE
 Scollegare la spina prima
 di rimuovere la copertura

WARNING
 Isolate from mains
 before removing cover



ATTENTION
 Avant d'enlever la protection
 s'assurer d'isoler l'appareil
 de l'alimentation.


VORSICHT
 Vor dem öffnen des
 Gerätes vom Netz
 trennen!

C

2 Technical features

2.1 - Main parts

To facilitate comprehension of the manual, the main machine components are listed below and represented in fig. 2.1.1.

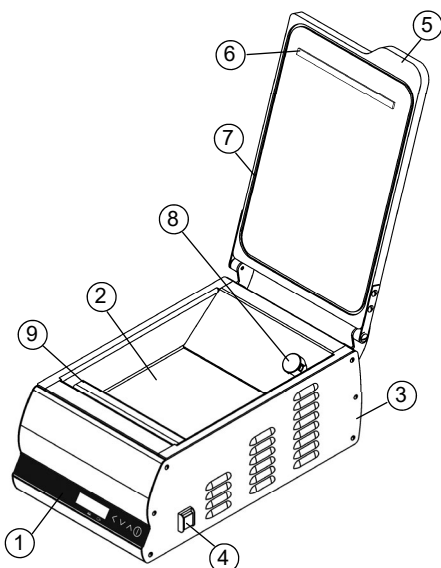

1. Control panel
2. Cavity
3. Power supply cable
4. Master switch
5. Transparent Plexiglas cover
6. Silicon counter-bar
7. Sealing gasket
8. Suction pipe for vacuum
9. Sealing bar

Fig. 2.1.1

2.2 - Technical features

	Power Kw	Vacuum pump	Sealing bar	Cavity dimensions	Power supply	Oil tank capacity
25	0,1 Kw	4 mc/h	260 mm	270x350 h75 mm	230V/50Hz	ml 60
30	0,1 Kw	4 mc/h	310 mm	336x378 h75 mm	230V/50Hz	ml 60
40	0,35 Kw	8 mc/h	410 mm	426x438 h75 mm	230V/50Hz	ml 250

2.3 - Dimensions and weight of the machine

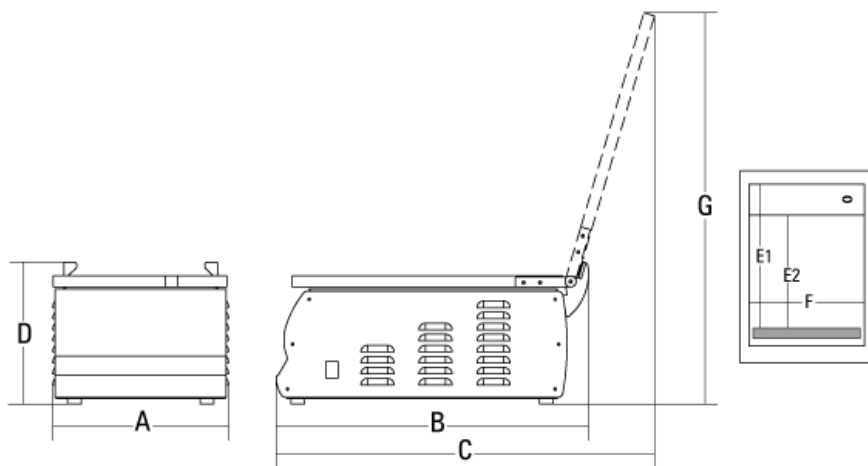


Fig. 2.3.1

	A	B	C	D	E1	E2	F	G	Net weight
	mm	mm	mm	mm	mm	mm	mm	mm	Kg
25	338	565	685	257	340	250	270	708	30
30	406	580	685	315	335	246	336	731	37
40	494	637	755	315	395	308	426	810	42,5

2.4 - Wiring diagram

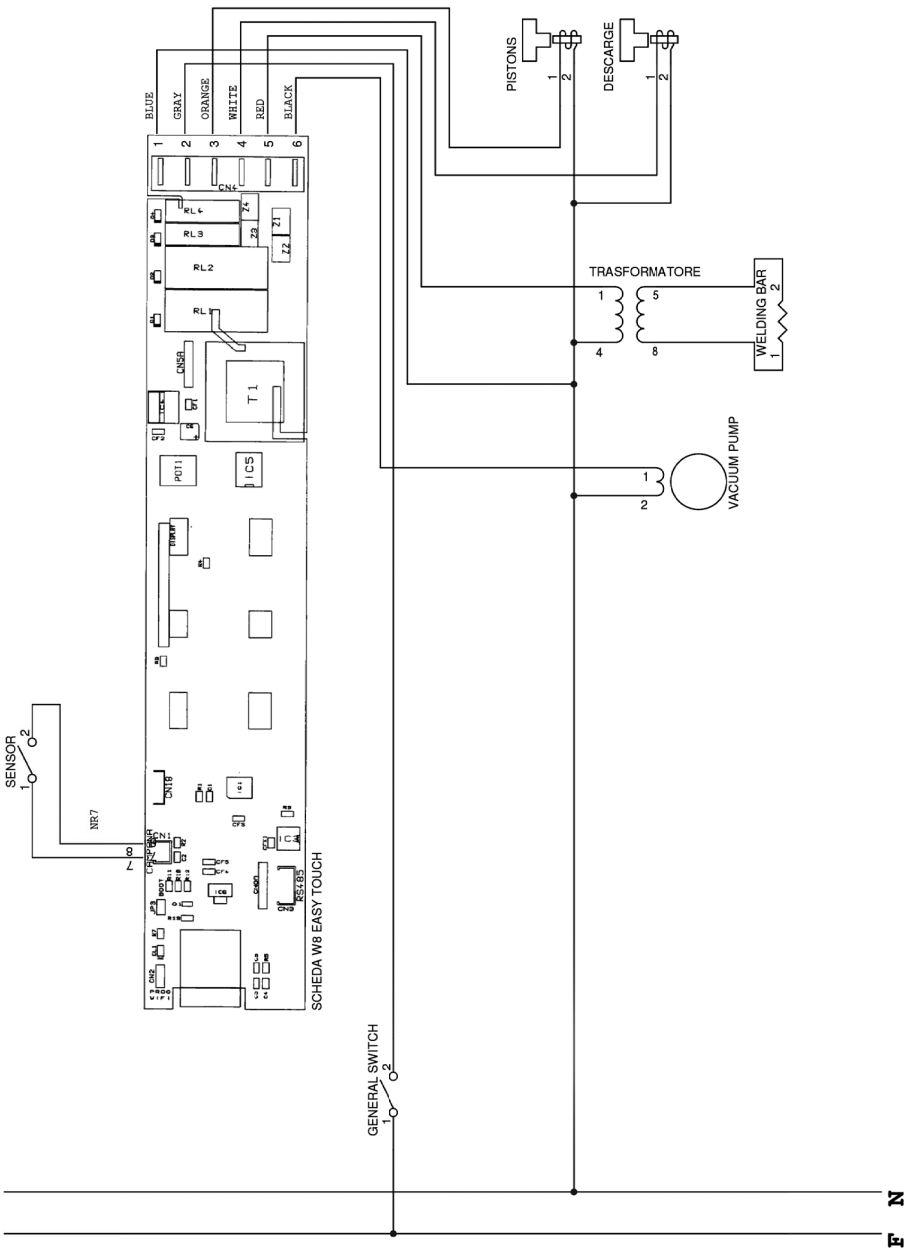


Fig. 2.4.1

3 Inspection, transport, delivery and installation

3.1 - Inspection

The machine you own has been inspected at our establishment in order to certify correct operation and adjustment.

3.2 - Delivery and handling the machine

All material delivered has been accurately controlled before consignment to the carrier.

Unless agreed differently with the Customer or for particularly onerous transport, the machine is wrapped in nylon and cardboard.

The packaging dimensions are given in fig. 3.2.1

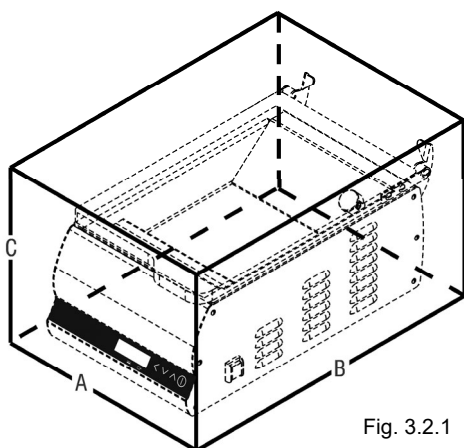


Fig. 3.2.1

	A	B	C	Gross weight
	mm	mm	mm	Kg
25	420	660	310	32
30	600	740	610	46
40	600	740	610	51,5

On receipt of the machine, check the

integrity of the packaging.

If the packaging is damaged, sign the documents for receipt with the following note:

"Accepted subject to checking..." and the reason.

Open the packaging, and in the presence of machine components that are really damaged, make a claim to the carrier within three days from the date indicated on the documents.

3.3 - Installation

After having removed the packaging, check the integrity of the machine.

In particular, check that the machine is integral and without visible damage, which could have been caused during transport.

If in doubt, do not use the machine and contact the Manufacturer.

Place

Position the packaging machine place with a low percentage of humidity and away from heat sources.

Before carrying out any check that leads to the removal of some items, the plug must be removed from the mains electricity.

3.3.1 - Disposal of the packaging

The packaging materials such as cardboard, nylon and wood are products similar to solid urban waste. They can therefore be disposed of freely.


Nylon is a pollutant, which produces toxic fumes if burned.

Do not burn and disperse in the environment, but dispose according to the Laws in force. If the machine is in a country where there are particular regulations, dispose of the packaging in compliance with that described by the Standards in force.

3.4 - Connections

3.4.1 Check oil level

Before start-up, check the oil level via the control window present on the pump.

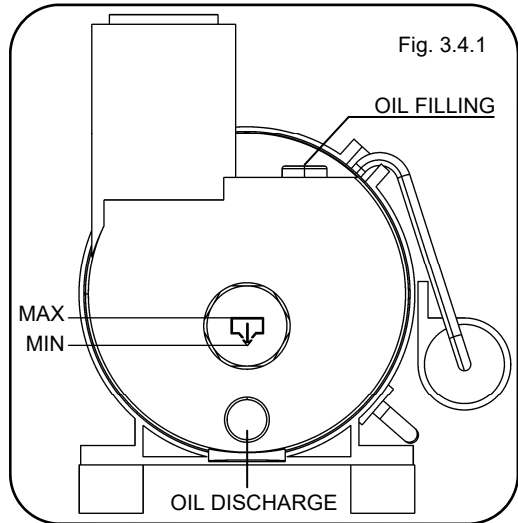

3.4.2 Check plate data

Before connecting the packaging machine, make sure that the plate data correspond with that of the mains electricity.

The plate is on the rear of the machine.

When the level has been checked and everything closed, connect the plug to the 230V socket.

In the event of incompatibility between the socket and plug, have the socket replaced with a suitable one by professionally qualified staff.

In particular, the latter must check that the section of the cables is suitable for the input power of the machine. In general, the use of adapters, multiple socket outlets and/or extensions is not recommended.

Whenever their use is indispensable, only simple or multiple adapters and extensions must be used that are in compliance with Safety Standards in force; however paying attention not to exceed the capacity limit in terms of current value, and the maximum power value marked on the multiple outlet.

4 - Using the machine

4.1 - Control key

1. ON-OFF Main switch of the machine.
Used to switch the machine on and off.
It is located on the side of the machine.

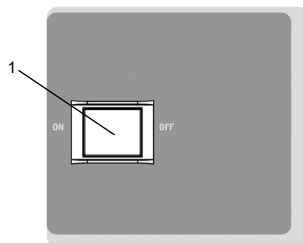


Fig. 4.1.1

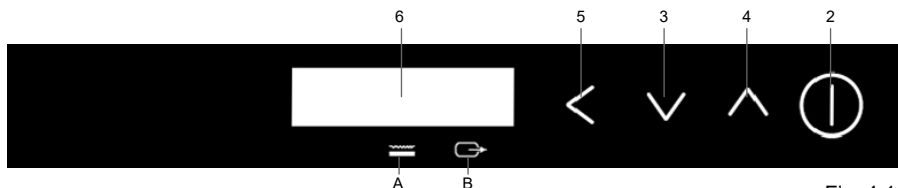


Fig. 4.1.2

2. START/STOP, functions:

If pressed once, after switching the machine on with the ON/OFF button (Ref. 1) and closing the cover, the machine will start with the last programme executed.

To access to programme menu.

To access to the user menu, press and hold for 3 seconds.

To exit the menus, press and hold for 3 seconds.

To start/stop the selected programme.

3-4. To scroll the software menu.

To select the memorised programmes.

To increase or decrease the selected values (where allowed):
suction percentage, vacuum duration, sealing duration.

5. To access to the programme menus and confirm the selection.

6. Analogue display.

A = Sealing time.

B = Suction time.

WARNING! The changes are memorised automatically. After 5 seconds of inactivity from the change, the value stops flashing to confirm.

We recommend switching the power switch or the line main switch off or pulling the plug out only for performing maintenance or specific operations described in the manual. The machine does not need to be switched off after every use since it automatically goes into stand-by and thus into energy saving mode without having to disconnect it. If the machine remains powered, all the control functions will be active and this guarantees improved efficiency and durability.

4.2 - Programme menu

Switch on the machine by putting the main switch to ON (Fig. 4.1.1 - Ref. 1).
Loosen the knob (Fig. 2.1.1 - Ref. 10) located on the right-hand side of the machine until the bell opens fully (Ref. 5).
The display will switch on and show: :

X X X X X	X X X X
H W 2 . 0	F W 1 . 2

To access the programmes, press the  button and use the UP  and DOWN  arrows to scroll the various programmes.

P R O G R A M	1
4 . 0 s	4 0 s

There are 10 pre-set programmes from 0 to 9, which can be modified

E X T V A C U U M	
C o p . I n o x	1 5 s

Refers to an external vacuum programme:
“Cop.Inox” will flash to suggest the use of the

stainless-steel cover for the tray.

M A R I N A T I O N	8 M S
5 . 0 S	1 9 0 s

2 non-modifiable multi-step marination programmes, one on a bag and the other on an external tray; “Cop.Inox” will flash to suggest the use of the stainless-steel cover for the tray.

M A R I N A T . E X T	3 M S
C o p . I n o x	9 0 s

To select a programme, press the LH  arrow.

To modify a value, press the LH  arrow again: the suction duration value will start flashing, use the UP  and DOWN  arrows to set the desired value and confirm with the LH arrow  or wait 5 seconds.

P R O G R A M	1
4 . 0 s	4 0 s

Subsequently, the sealing duration value will flash, then use the UP  and DOWN  arrows to set the desired value and confirm with the LH arrow  or wait 5 seconds.

Subsequently, the sealing duration value will flash, then use the UP  and DOWN  arrows to set the desired value and confirm with the LH arrow  or wait 5 seconds.

P R O G R A M	1
4 . 0 s	4 0 s

After defining the programme to be used, close the cover and the machine will start working.

The following message will appear at the end of the process:

E N D
C Y C L E

To interrupt a process under way, press the  button:
Press it once to seal.
Press it twice to open the cover.

4.3 - User menu


With the main switch set to ON (Fig. 4.1.1), press and hold for 3 seconds the ON/OFF button (Fig. 4.1.2) to enter the user menu. Use the arrow commands to view the list of machine functions that can be set and to modify the relevant values.

	ON-OFF		LEFT arrow		UP arrow		DOWN arrow
--	--------	---	------------	---	----------	---	------------

4.3.1 - Oil heating and cleaning

O I L	H E A T I N G	C Y C L
C l o s e	b l a c k	c a p

The message "Close black cap and press ON key" will scroll on the second line of the display. Follow the instructions.



The machine will start the oil heating process to reach the pre-set temperature of around 50°C.

The cycle can be stopped by pressing the ON-OFF button.

Touch the DOWN arrow  to skip to the next function.

4.3.2 - Vacuum control

V a c u u m	C t r l	1 0 0 %
T I M E	V A C U U M	C T R L

The second screen of the display shows the message "**VACUUM CONTROL**" for setting the suction based on the percentage or the duration.

Press the UP  and DOWN  arrows to set the % or the duration with "TIME VACUUM CTRL".

Confirm with the LH arrow. 

4.3.3 - WiFi

W I F I
O n l i n e

Press the LH arrow  to enter the Wi-Fi menu.

The message e.g. **WIFI on line** will start flashing. Use the UP  and DOWN  arrows.

Wifi om line / Wifi AP mode / Deactivated will appear in succession; if **Wifi AP mode** is chosen, to confirm and exit the edit mode, wait 5 seconds or

press the LH arrow. 

Touch the DOWN arrow  to skip to the next function.

4.3.4 - Language

L A N G U A G E
E n g l i s h

Press the LH arrow  to enter the menu dedicated to languages.

The word **Italiano** will start flashing. Use the UP  and DOWN  arrows to scroll the languages in the system and select the desired language.

To confirm and exit the edit mode, wait 5 seconds or press the LH arrow  until nothing more flashes.

Touch the DOWN arrow  to skip to the next function.

4.4 - Vacuum packing

Once all the primary settings have been made, the machine will be ready for being used.

- Connect the machine to the mains power supply.
- Power the machine by pressing the switch on the right-hand side. The display will switch on showing the main screen.
- Press the ON button: 
- Use the UP and DOWN buttons to scroll through the list of pre-set programmes.
- Put the bag on the machine support by placing the open side on the sealing bar so that it lies perfectly flat.
- Lower the cover by applying a certain amount of pressure so that it stays closed and the processing cycle can start. In case of external vacuum packing, press the Start button to start the work cycle.

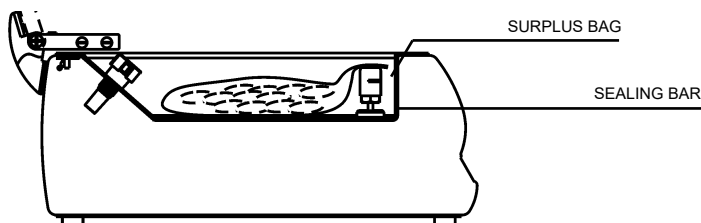


Fig. 4.4.1

4.5 External Vacuum Packing Cycle

1. Connect the machine to the mains power supply.
2. Switch the machine on by pressing the switch (Fig. 4.5.1 - Ref. 2) on the right-hand side.
3. Select the "EXT VACUUM" programme from the programme menu.
4. Remove the suction cap (Fig. 4.5.2 - Ref. 3).
5. Connect the suction kit tube (Fig. 4.5.2 - Ref. 2).
6. Attach the suction kit nozzle to the tray cover valve (Fig. 4.5.2 - Ref. 4).
7. Modify the suction time to set the desired value.
8. Start the programme through the Start button.
9. Once the selected suction duration has expired, the machine will stop automatically.

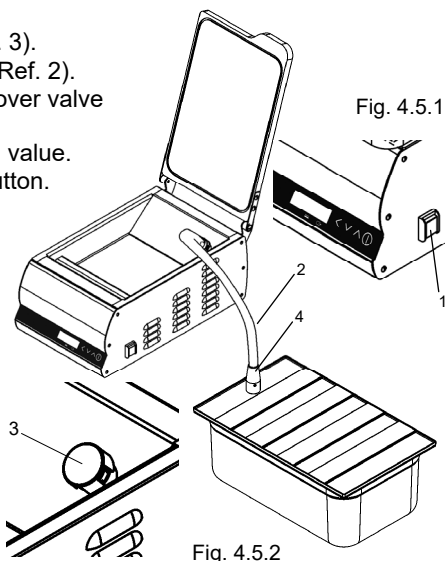


Fig. 4.5.2

4.6 - Packaging liquids or semi-liquids

With the vacuum packing machines we produce, it is possible to vacuum pack liquids and semi-liquids (soups, juices, sauces, etc...) lengthening their duration and maintaining flavour and hygiene unaltered.

In these cases, remember that the bags must never be filled up to maximum limit, but up to 50% of the capacity, making sure that the edge is at a higher level with respect to the sealing bar.

1. The vacuum cycle remains programmed as described in the USING THE PACKAGING MACHINE chapter. (4.2)
2. As liquids are incompressible, they do not require packaging in modified environments, i.e. with the addition of inert gases.
3. All of the packets can be stored in a cold room and stacked normally.

4.6.1 - Packaging liquids or semi-liquids with the use of standard bracket

When liquid products must be packed, the use of the inclined bracket is recommended, in order to facilitate the operation.

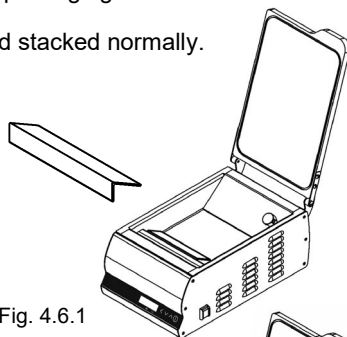


Fig. 4.6.1

4.6.2 - Packaging of thin products with the use of the optional raised surface

When thin products such as sliced cured meats must be packed, the use of the raised surface is recommended, in order to facilitate the operation

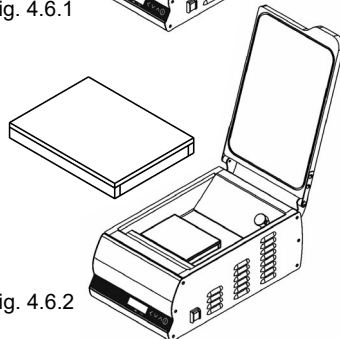


Fig. 4.6.2

PRESERVATION TIME OF VACUUM PACKED PRODUCTS KEPT AT A TEMPERATURE OF $+0^{\circ}/+3^{\circ}$ C.

FISH: Average duration 7/8 days with extremely fresh product

CURED COLD CUTS: Maintenance time to perfection over 3 months

MATURED CHEESES: Grana, pecorino, etc. 120 days

FRESH CHEESES: Mozzarella, brie, etc 30/60 days

VEGETABLES: In general 15/20 days

FRESH MEATS	
BEEF	30/40 days
VEAL	30/40 days
PORK	20/25 days
WHITE MEATS	20/25 days
RABBIT AND GAME ON THE BONE	20 days
LAMB/GOAT	30 days
SAUSAGES	30 days
OFFAL	10/12 days

4.7 - Cleaning the machine

ATTENTION!

Disconnect the machine from the mains electricity before cleaning.

Do not clean the machine using a jet of water.

Use non-toxic detergents only, expressly intended for clearing components coming into contact with foodstuffs. **DO NOT** use chlorine-based detergents.

DO NOT use ethyl alcohol to clean the Plexiglas cover.

The Plexiglas lid be cleaned regularly with a soft, damp cloth, using cold or warm water, with a small amount of neutral detergent.

It is recommended to avoid:

- the use of products containing: denatured ethyl alcohol, solvents in general, Benzene, Trichloroethylene
- the use of abrasive materials and contact with sharp objects

Drying

When the lid has been cleaned, it can be dried using a slightly damp chamois cloth, without rubbing hard.

4.8 - Vacuum pump heating

During the winter period, in the morning it is recommended to briefly pre-heat the pump in order to fluidify the oil before it goes into circulation:

- Position the master switch (ref. 1 fig. 4.8.1) at ON.
- Turn the suction cock to close (ref. 5 fig. 4.8.1)
- Press the UP key 3 times (ref. 3 fig 4.8.1)

The machine will perform an oil heating cycle.

The duration of the cycle is 15 minutes.

If the operator wants to interrupt the cycle before it ends, he must press the switch-on key ref. 2 fig 4.6.1.

N.B. This operation must only be performed with the intake cock closed.


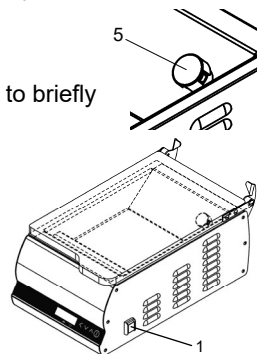


Fig. 4.8.1

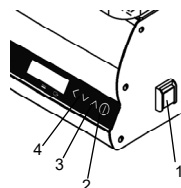

5 Controls and maintenance

5.1 - Controls and maintenance

Access to the internal part of the machine is reserved exclusively to our specialised technician.

If the machine is accessed voluntarily, the manufacturer declines all civil and penal liability regarding any accidents or damage caused to persons or objects.

All electric components are protected within the machine body and the relative guard must be removed in order to gain access. Whenever access must be made, remove the plug from the electric control board current socket.

5.2- Maintenance

1. Clean the sealing bars and the silicon counter-bar more or less every 15 days using alcohol.
2. Change the oil every 400 hours of working (data variable depending on the type of product packed).
After 2000 cycles the machine envisions an automatic oil control, the display shows the **"oil change"** message. The user must call the dealer, who will check the efficiency of the oil and will replace it, if necessary.
3. Replacement of electric resistances, Teflon sealing bar, lid sealing gaskets about every 200 working hours.
4. Replacement of the silicon counter-bar
5. Check pump vanes, filters, pneumatic solenoid valve seals every 35,000 work cycles.

5.2.1 - Vacuum pump

For the safeguarding and the duration of the vacuum pump, follow the indications given below scrupulously:

- Do not suck up steam, liquids and flours of any type.
This compromises the viscosity of the pump oil and damages the pump itself.
- Periodically check the pump oil level through the visual inspection window
A level below minimum can damage the pump
A level above maximum can damage the pump filter and the pump itself
- Periodically check the colour of the pump oil. If the oil appears cloudy, dark or emulsified, it must be replaced immediately.
- Replace the pump oil every 2 / 4 / 6 or 12 months, depending on use and location of the equipment, or appearing the notice **"change oil"** on the display.
The pump oil may have to be replaced every month.
- Replace the pump oil before prolonged machine shutdown.

ATTENTION!!:

Considering that the vacuum packaging machine is nearly always located in the kitchen, an environment full of steam and humidity, the level and quality of the pump oil must be checked constantly and replaced frequently and periodically.

6 Obligations in the event of malfunctioning and/or potential dangers

The operators must inform their direct seniors of any deficiency and/or potential dangerous situation that should occur.

6.1 - User obligations

The user must inform the manufacturer immediately if any defects and/or malfunctioning of the accident-prevention system are detected, as well as any presumed dangerous situation of which he becomes aware. It is prohibited for the user and/or third parties (excluding duly authorised manufacturer's staff) to make any type or entity of modifications to the machine and its functions, as well as to this technical document. In the event of malfunctioning and/or dangers, owing to failure to respect the afore-said, the manufacturer is not liable for any consequences. We recommend you request any modifications from the Manufacturer.

7 Troubleshooting

7.1 - Troubleshooting

1 After having connected the master switch, the machine does not start:

- a) Check that the plug is well inserted into the socket and, if necessary, control the contacts inside the plug itself.
- b) Check that on lowering the lid, the micro switch positioned on the rear below the right fixing hinge, is excited.

2 The machine operates regularly, but the package is not sealed when the lid is opened

- a) Lift the Teflon and check that the resistance is not interrupted and it is blocked on the lateral clamps.

3 If the machine does not achieve an excellent vacuum

- a) Close the lid and disconnect the line when a negative pressure of about 90% has been reached. Check whether the vacuum percentage indicated on the display remains fixed or decreases.
 - In the first case, there are no leaks, therefore the problem has another source (pump vanes, oil replacement).
 - In the second case, there is the presence of air infiltration into the tank:
 - Check the membrane below the sealing bar, checking that it has no holes or is ripped
 - Check the integrity of the sealing gasket positioned under the lid; if the afore-mentioned pieces must be replaced, request them directly from the authorised dealer.

WARNING!

In case the machine is turned off or there is a power outage during the vacuum cycle, it may happen that the lid does not open due to the vacuum reached at the time of switching off.

To open the lid is necessary to bring the pressure in the tank. Then turn on the machine with the side button, after one second the drain valve opens and you can re-open the lid.

7.2 WEEE Waste Electric and Electronic Equipment

The barred wheeley-bin symbol on the appliance or the package indicates that at the end of the products useful life span, it must be collected separately from other waste.



The recycling of this product at the end of its service life, is arranged for and carried out by the manufacturer. The user who wishes to dispose of this product must therefore contact the manufacturer and adhere to the system that he has adopted for the correct disposal of this product at the end of its service life

The correct disposal of the old product for the processes of recycling, treatment and compatible waste disposal will help prevent potential negative consequences for the environment and human health, and will result in the reuse and recycling of the materials and components which make up the appliance.

Abusive disposal of the appliance leads to the application of administrative sanctions envisioned by the Standards in force.

AUTHORISED DEALER